



Item #	Model #
1006 376 951	H24WCAB
1006 376 958	H24BC2DOOR
1006 376 960	H24BC1DRW
1006 376 789	H30LOCKER





USE AND CARE GUIDE

HUSKY WELDED STEEL GARAGE STORAGE SERIES

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m. - 5 p.m., EST, Monday - Friday

1-888-HD-HUSKY

WWW.HUSKYTOOLS.COM

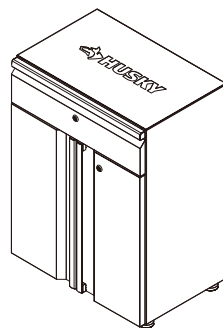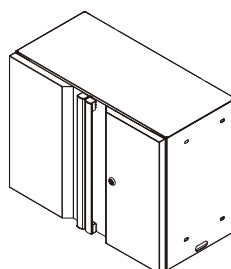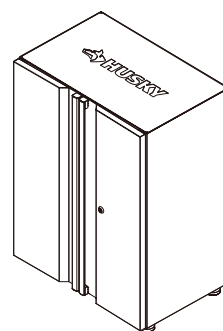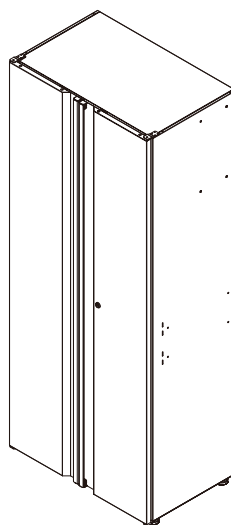

Due to continuing improvements,
the actual product may differ slightly
from the product described herein.

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of the garage cabinets. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	3
Specifications	4

Pre-Assembly	5
Assembly	7
Maintenance	11
Care and Cleaning	11

Safety Information

To reduce the risk of serious injury, read and follow the safety instructions below before assembling and using this product.

- This product is intended for indoor use only.
- This product is not designed for commercial nor industrial usage.
- Solid wood refers to rubber wood.



CAUTION: Use at least two people to move, assemble or install this product. Failure to do so can result in personal injury or product damage.



CAUTION: Close and lock the doors and drawer before moving this product.



CAUTION: DO NOT alter this product in any manner. For example, do not weld external bar locks or attach electrical equipment. This may cause product damage or personal injury.



CAUTION: Check all nuts and bolts periodically for tightness. When required, tighten them.



CAUTION: DO NOT leave children unattended near this product. Cabinet may tip over if improperly opened.



WARNING: Keep the product on level surfaces. The product could become unstable and it may tip over if stored or moved on an uneven surface, which may cause personal injury, death or product damage.



WARNING: Any assembly or maintenance of the product must be carried out by adults only.



WARNING: DO NOT stand on the product and do not use it as scaffold.



WARNING: It is always recommended to secure the cabinets to the wall with the anti-tip hardware provided.



WARNING: DO NOT put anything on the top panel of the wall cabinet or tall cabinet.

Safety Information

WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted on the wall or floor.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Never open more than one drawer at a time.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Warranty

1 year Limited Warranty for solid wood work surface and stainless steel work surface.


This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear.

This full warranty gives you specific rights, and you may also have other rights, which vary state to state.


Contact the customer service team at 1-888-HD-HUSKY or visit www.huskytools.com.

Specifications


WEIGHT CAPACITY

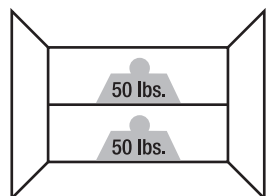


24 in. Wall Cabinet
Max 100 lbs.

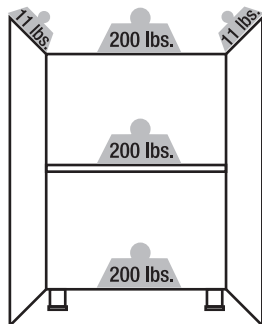

24 in. 2-door
Base Cabinet
Max 622 lbs.

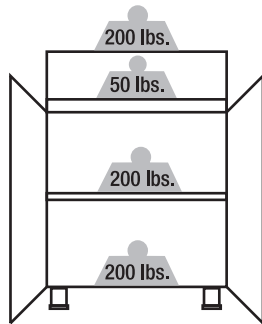

24 in. 1-drawer
2-door Base Cabinet
Max 650 lbs.

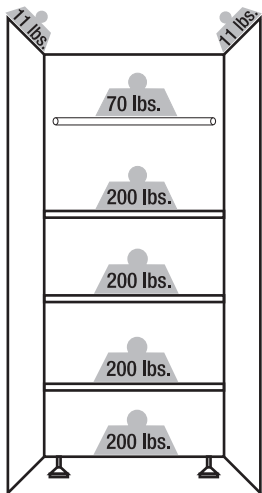


30 in. Locker
Max 892 lbs.

Pre-Assembly

TOOLS REQUIRED



Hex Wrench
(Hex Key)

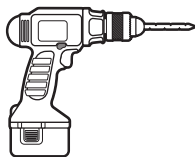


Drill
(not included)



Hex Screwdriver Bit



Gloves
(not included)



Measuring tape
(not included)












Socket (10mm)
(not included)

HARDWARE INCLUDED







NOTE: Hardware not shown to actual size.

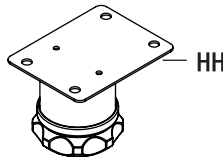

NO.	Description
AA	M6 x 16 hex socket head screw
BB	M6 x 40 hex tapping bolt
CC	M6 Flange Nut
DD	Washer
EE	Plastic nail
FF	Shelf support
GG	Leveler
HH	Adjustable foot
II	Safety bracket
JJ	Safety strap
KK	Grommet
LL	Plastic cover


Pre-Assembly (continued)

PACKAGE CONTENTS & SERVICE PARTS

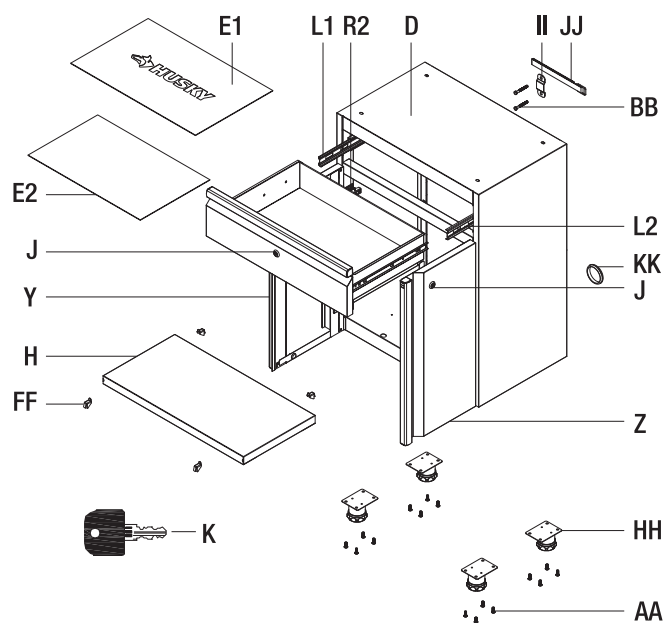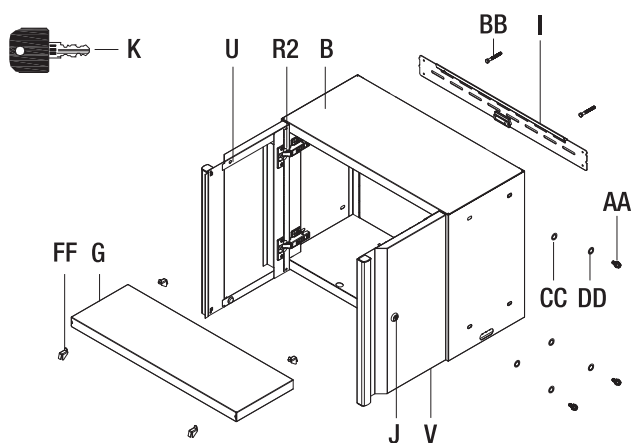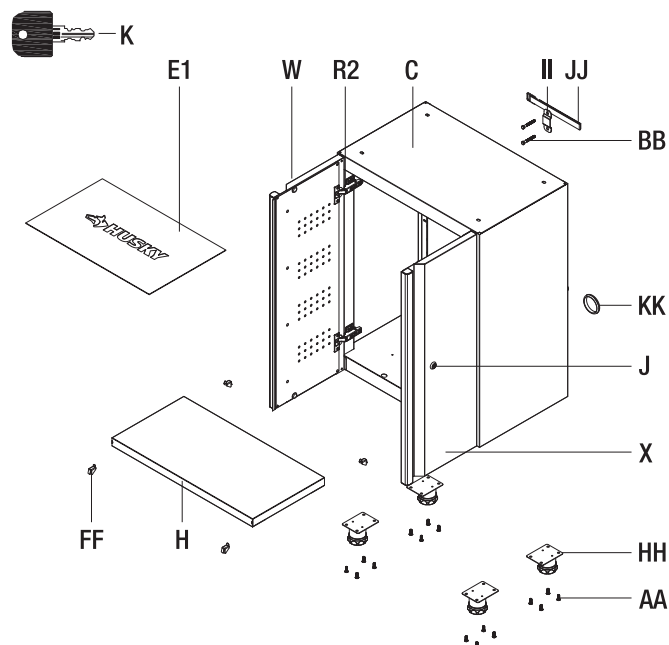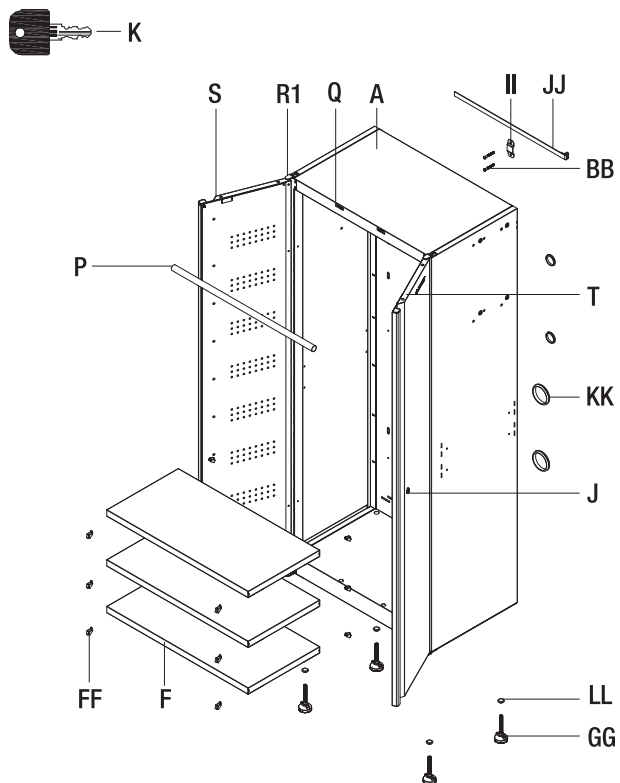

Pre-Assembly (continued)


Internet #
312050627
Husky 30 in.
Locker

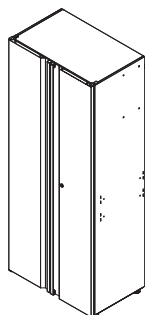

NO.	Description	Part #	Quantity
A	30 in. locker	KL300016T	1
F	Shelf for tall cabinet	241112	3
J	Lock	304246	1
K	Key	304213	2
P	Closet rod	241339	1
Q	Magnet	312033	2
R1	Wafer hinge	311055	4
S	Left door for 30 in. locker	121216	1
T	Right door for 30 in. locker	121217	1

NO.	Description	Part #	Quantity
BB	M6 x 40 hex tapping bolt	320328	2
FF	Shelf support	203902	12
GG	Leveler	313076	4
II	Safety bracket	212591	1
JJ	Safety strap	314230	1
KK	Grommet	314027	2
LL	Plastic cover	314147	4


Internet #
312050628
Husky 24 in.
Wall Cabinet

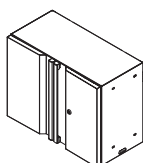

NO.	Description	Part #	Quantity
B	24 in. wall cabinet	KV240002T	1
G	Shelf for wall cabinet	241292	1
I	Mounting bracket	120634	1
J	Lock	304246	1
K	Key	304213	2
R2	Soft closed hinge	305399	4
U	Left door for 24 in. wall cabinet	121209	1

NO.	Description	Part #	Quantity
V	Right door for 24 in. wall cabinet	121210	1
AA	M6 x 16 hex socket head screw	320327	8
BB	M6 x 40 hex tapping bolt	320328	4
CC	M6 Flange nut	323085	8
DD	Washer	324050	8
FF	Shelf support	203902	4


Internet #
312050624
Husky 24 in.
2-Door Base Cabinet

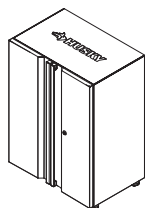

NO.	Description	Part #	Quantity
C	24 in. 2-door base cabinet	KB240015T	1
E1	Liner (with logo)	552132	1
H	Shelf for base cabinet	241321	1
J	Lock	304246	1
K	Key	304213	2
R2	Soft closed hinge	305399	4
W	Left door for 24 in. 2-door base cabinet	121214	1

NO.	Description	Part #	Quantity
X	Right door for 24 in. 2-door base cabinet	121215	1
AA	M6 x 16 hex socket head screw	320327	16
BB	M6 x 40 hex tapping bolt	320328	2
FF	Shelf support	203902	4
HH	Adjustable foot	313066	4
II	Safety bracket	212591	1
JJ	Safety strap	314230	1
KK	Grommet	314027	1

Internet #
312050925
Husky 24 in.
1-Drawer 2-Door
Base Cabinet

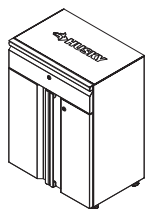

NO.	Description	Part #	Quantity
D	24 in. 1-drawer 2-door base cabinet	KB240101T	1
E1	Liner (with logo)	552132	1
E2	Drawer liner	552133	1
H	Shelf for base cabinet	241321	1
J	Lock	304246	2
K	Key	304213	4
L1	Slide (core)	AJ01023300	1
L2	Slide (shell)	AJ02028400	1
R2	Soft closed hinge	305399	4
Y	Left door for 24 in. 1-drawer 2-door base cabinet	121212	1

NO.	Description	Part #	Quantity
Z	Right door for 24 in. 1-drawer 2-door base cabinet	121213	1
AA	M6 x 16 hex socket head screw	320327	16
BB	M6 x 40 hex tapping bolt	320328	2
FF	Shelf support	203902	4
HH	Adjustable foot	313066	4
II	Safety bracket	212591	1
JJ	Safety strap	314230	1
KK	Grommet	314027	1



NOTE: The workbench (Internet# TBD) coordinates well with the above units, replacing the work surface, to meet different storage requirements.



NOTE: The caster kit (Internet# 306907994) coordinates well with the base cabinets for easy mobility.


Assembly



CAUTION: Please wear gloves during the whole assembling process.


1 INSTALLING THE ADJUSTABLE FEET OR LEVELERS

- For base cabinet, attach the feet (HH) to the bottom using sixteen screws (AA) and tighten securely. Make sure side A of the adjustable feet (HH) is facing either towards the back or the front of the cabinet.
- For locker, attach four levelers (GG) directly to the bottom.

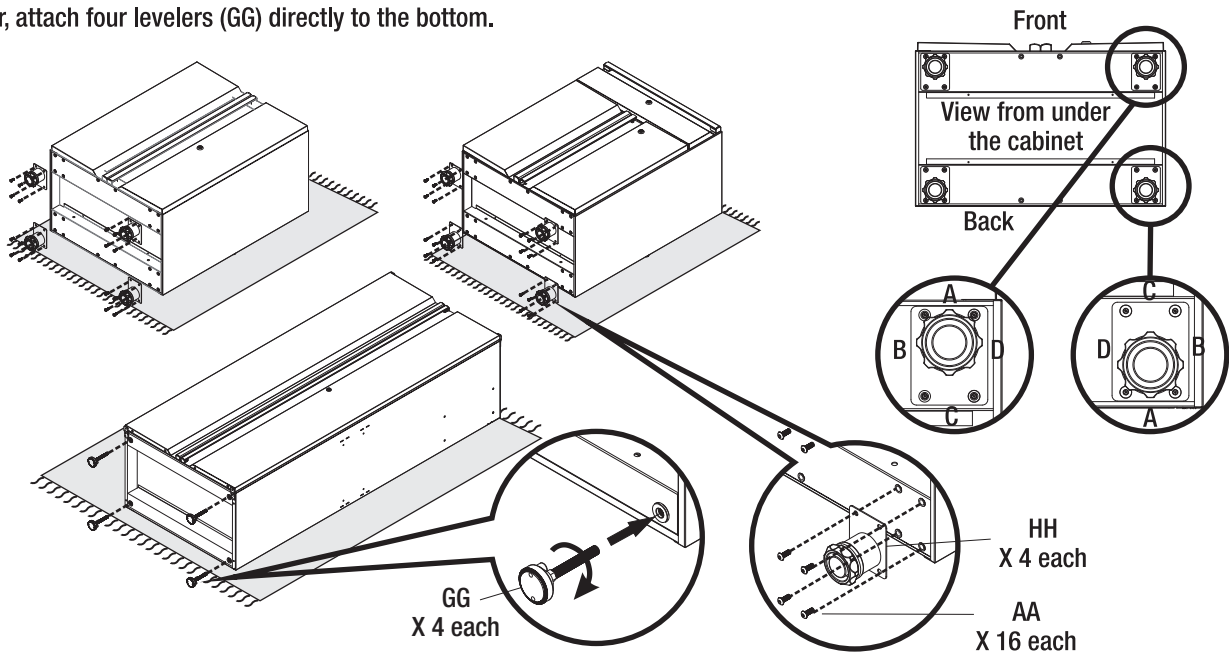

2 INSTALLING THE GROMMETS




- Use the short side of the hex wrench to pry out the knock-outs of your desired cord access holes. Then install the grommets (KK) into those holes.

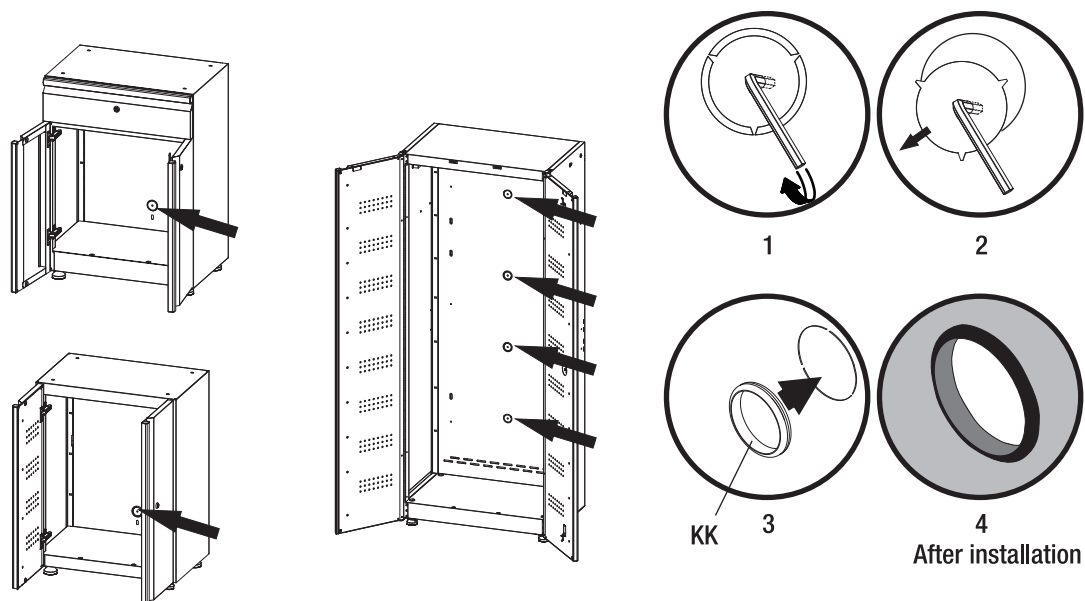

Assembly (continued)

3 INSTALLING THE SHELVES


- Insert shelf brackets (FF) into the slots at the desired heights and place the shelves over the shelf brackets (FF).

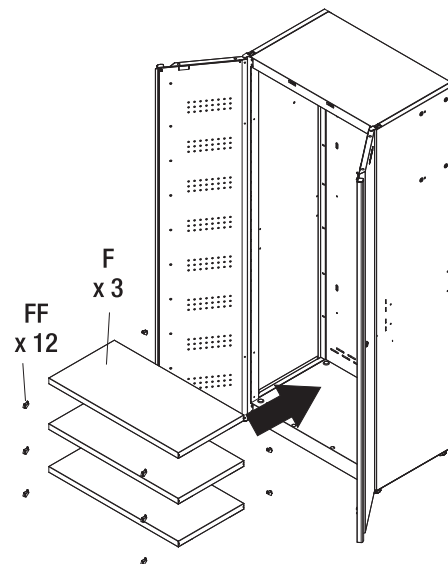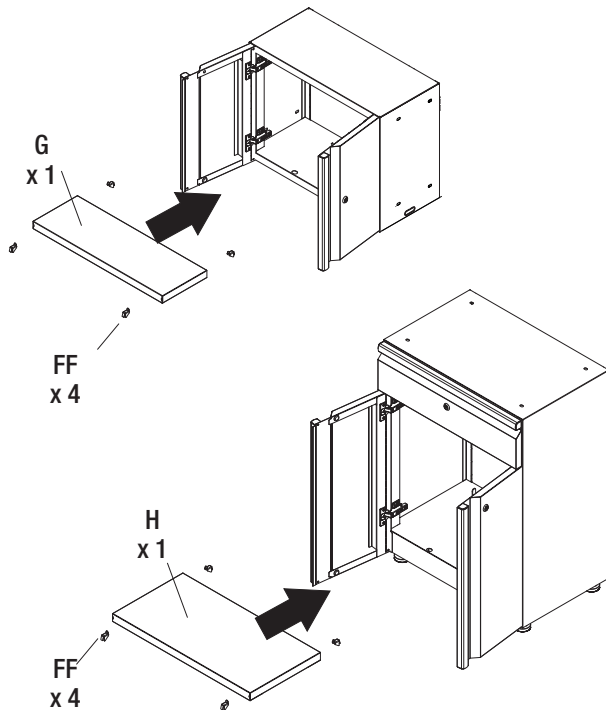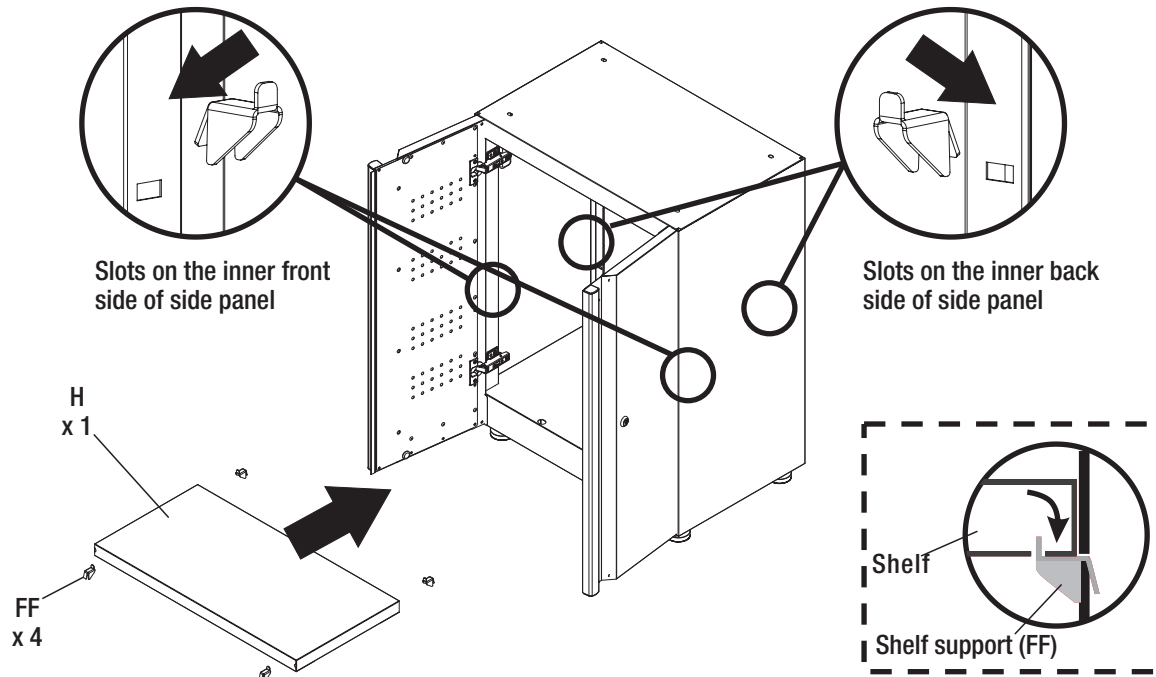

Assembly (continued)


4 INSTALLING THE CLOSET ROD

- Place the closet rod (P) as shown in your locker.

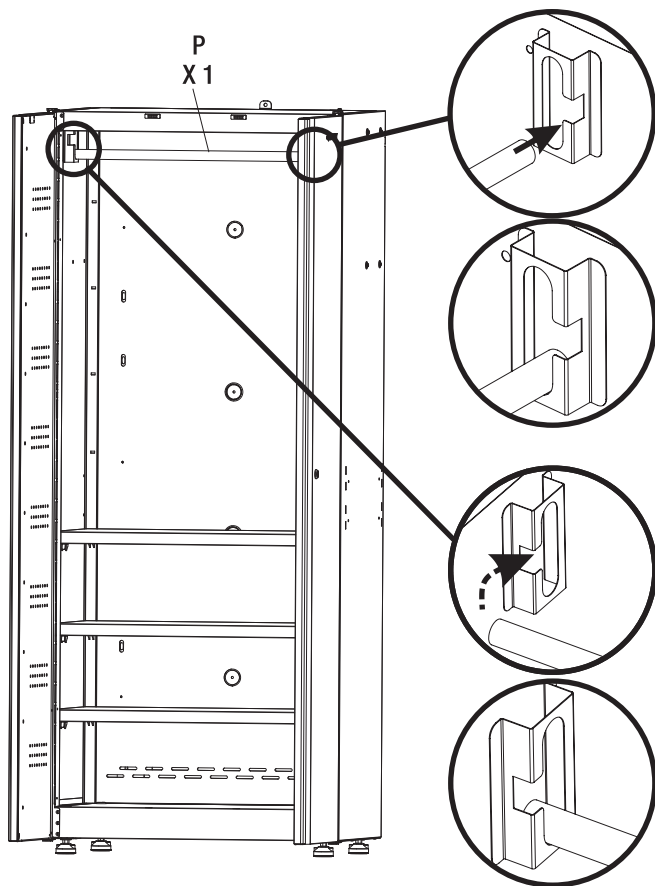


5 ADJUSTING THE DOOR (IF APPLICABLE)

- Screw the inner screw on the soft closed hinge (R2) to adjust the gap between the doors and shell. Ensure the door is always level.

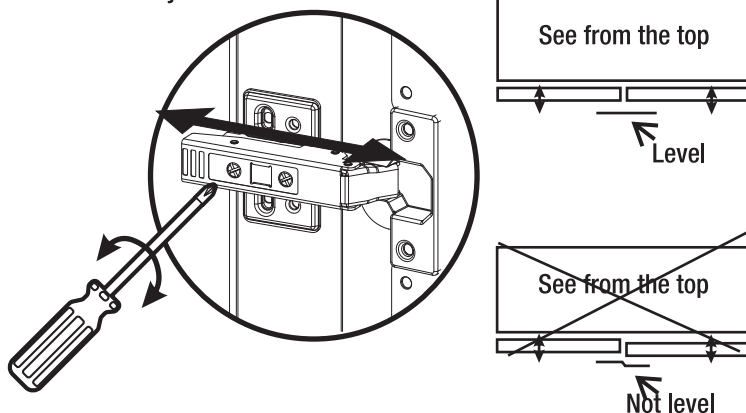

- Screw the outer screw on the soft closed hinge (R2) to adjust the gap between the doors. Ensure the door is always level. The gap should always be about 4 mm.

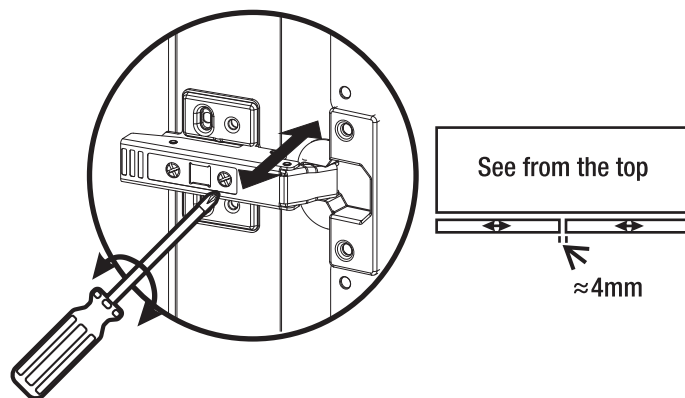


6 DRAWER REMOVAL AND REPLACEMENT (IF APPLICABLE)

DRAWER REMOVAL

Empty the drawer. Pull the drawer out so it's almost fully extended. There are two black release levers, one on each side of the drawer. Pull up the black release lever on one side, while pushing down the black release lever on the other side. While holding the levers in the positions as instructed above, pull the drawer outward until it is released from the drawer slides (L1 & L2).


Push down – one side

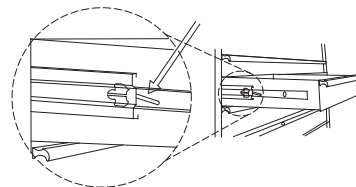

DRAWER REPLACEMENT

Extend the drawer slides (L1 & L2) from the tool chest or cabinet. Insert the brackets on each side of the drawer into the slots in the slides, being careful that they are properly positioned. Once properly inserted, completely close the drawer to set the slides in their proper positions.

Pull up – other side

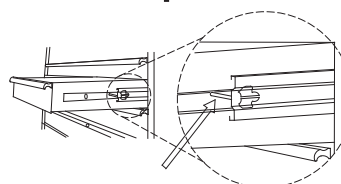


Assembly (continued)

7 CONNECTING TO THE WALL




CAUTION: The M6 x 40 hex tapping bolts (BB) should be drilled into the stud of the wall.



- Bolt the safety bracket (II) with two screws (BB) to the stud in the wall. Fasten the locker by using the safety strap (JJ) to tie the locker and safety bracket (II) together.

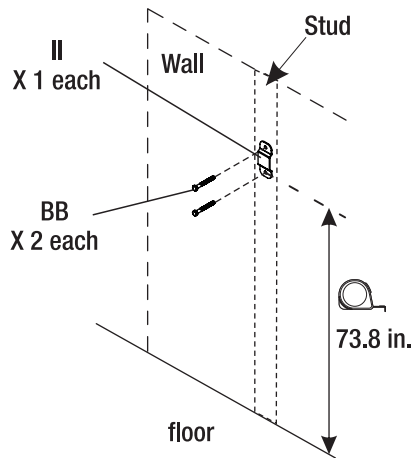


- Use the notch to line up the mounting brackets (I) and hang the wall cabinets.

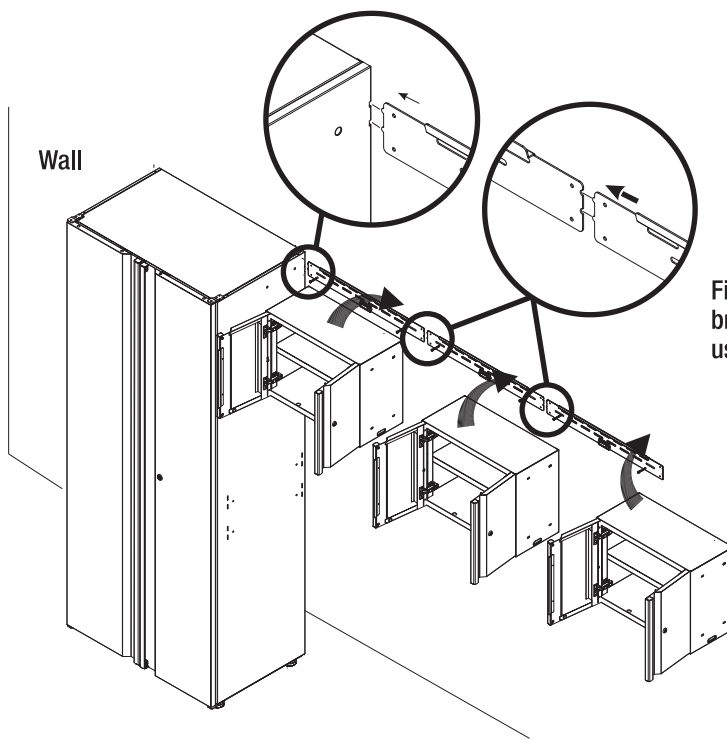


View from cabinet top

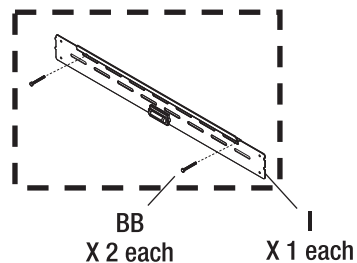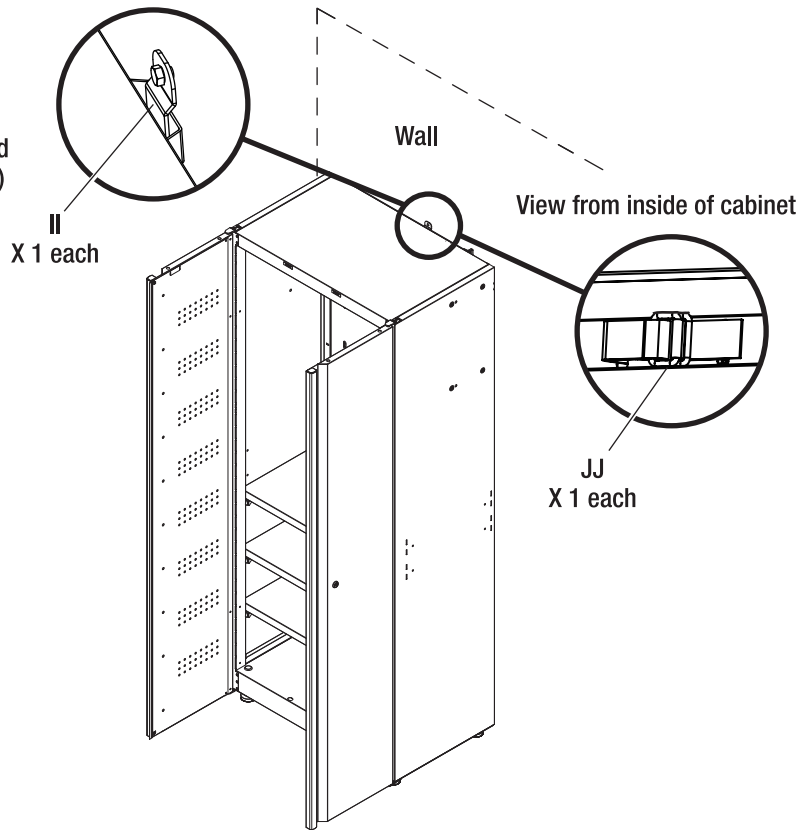


Find the studs in the wall and bolt the bracket (I) to as many studs as possible using the bolts (BB).

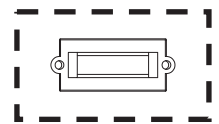

Use the level on the mounting brackets (I) to ensure the mounting brackets (I) at the same level.

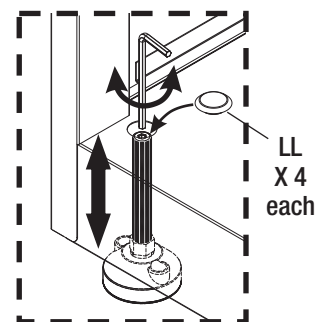

Adjust the levelers (GG) and cover the holes.

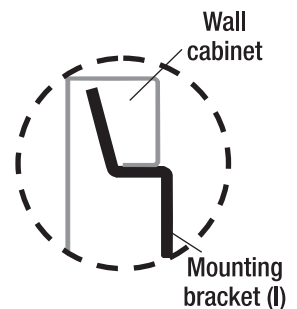

Hang the wall cabinet to the mounting bracket (I).

Maintenance

- Check all the screws and nuts periodically for tightness. Tighten them when necessary.
- Check the safety strap periodically for tightness. Tighten it when necessary.

Care and Cleaning

- Periodically clean the surfaces with a soft rag and water.
- Grease and oil can be removed with most standard cleaning fluids. For safety, use a nonflammable cleaning fluid.



Questions, problems, missing parts? Before returning to the store,
call Husky Customer Service
8 a.m. - 5 p.m., EST, Monday - Friday

1-888-HD-HUSKY

WWW.HUSKYTOOLS.COM

Retain this manual for future use.