



Affordable. Reliable. Home Improvement.

COMMERCIAL

REFRIGERATOR/FREEZER

**MODEL: ACC-23F82 ACD-23F82 ACC-47F82 ACD-47F82
ACC-73F82 ACD-73F82 ACC-23B82 ACC-47B82**


VEVOR Support Center

1	ACC-23 F82		5	ACC-73F8 2	
2	ACD-23 F82		6	ACD-73F8 2	
3	ACC-47 F82		7	ACC-23B 82	
4	ACD-47 F82		8	ACC-47B 82	



Affordable. Reliable. Home Improvement.

COMMERCIAL REFRIGERATOR/FREEZER

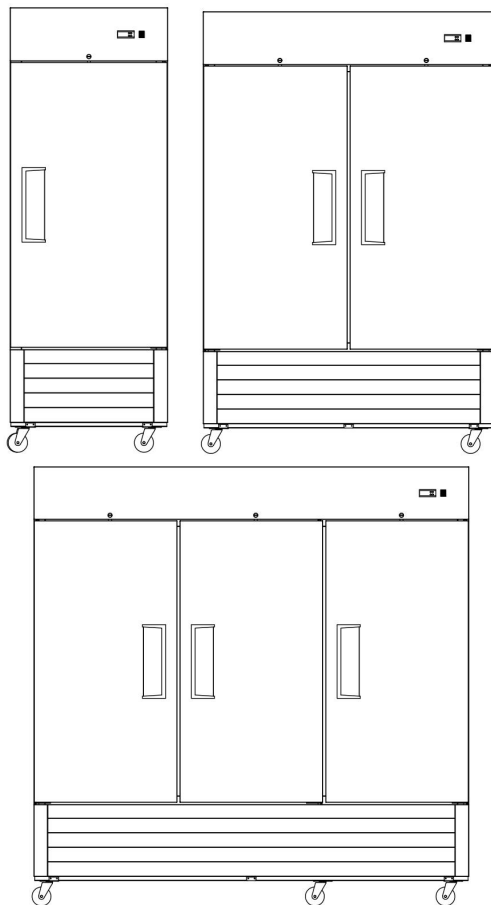

<Picture Only For Reference >

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

Safety Information

WARNING

- **ONLY** use this device for its intended purpose, indoor storage of food and nonhazardous sealed beverages. Operators should read this manual carefully before use, keep it for future reference, and provide it with the device if it is over given or sold to a third party. Failure to do so may lead to electric shock, fire, serious property damage, or severe personal injury
- **DO NOT** allow small children or persons with physical/mental impairments to operate this device without supervision. Ensure wheels are secured before operation.
- **ONLY** use this device with stable, compatible, and well-grounded power supplies. Do not overload this device's circuit: use only with extension cords or power strips that can handle its full expected current. Insert the plug fully into the socket and remove it by gripping the plug itself, never pull the cord. Avoid crimping or damaging the power cord, and ensure it does not obstruct any walkway.
- **ONLY** install this device on a sturdy surface capable of supporting its fully loaded weight. Never place heavy items on top of the unit. Ensure all shelves are securely attached before use. Do not exceed the weight capacity of the shelves. Do not throw or drop heavy items onto shelves, as the impact force may cause damage.
- **ONLY** install this device in a level location. Even during transport, do not tilt more than 45".
- **ONLY** use and store this device in dry Indoor locations well protected

from the elements and excessive humidity. If use in a very humid location is completely unavoidable, install an electrical leakage circuit breaker (ELCB) on this device's line before use.

• **NEVER** allow any electronic component to become wet. If any component does become wet accidentally, immediately disconnect the device from its power source. Do not reconnect power or place items containing standing liquid or other conductive substances near the device until all components are completely dry.

WARNING: — Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.

WARNING: — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: — Do not damage the refrigerant circuit.

WARNING: — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Please accord to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children from being trapped.

Component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

The installation instructions for appliances that use a flammable refrigerant shall indicate the appliance is to be installed in accordance with the Safety Standard for Refrigeration Systems, ANSI/ASHRAE 15.

DANGER – Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost Refrigerator. Do Not Puncture Refrigerant Tubing.

DANGER – Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.

CAUTION – Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.

CAUTION – Risk Of Fire Or Explosion. Dispose Of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used.

CAUTION – Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used.

WARNING– Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. The appliance shall be stored in a room without continuously operating ignition sources(for example: open flames, an operating gas appliance or an operating electric heater. Do not pierce or burn. Be aware that refrigerants may not contain an odour.




Warning: Risk of Fire/Flammable

INSTRUCTIONS

Model	rated voltage	rated Current	Refrigerant	Temperature range
ACC-23F82	115V~ 60Hz	1.7A	R290	32~50°F
ACC-23B82	115V~ 60Hz	1.7A	R290	32~50°F
ACD-23F82	115V~ 60Hz	4.4A	R290	14~-11°F
ACC-47F82	115V~ 60Hz	1.9A	R290	32~50°F
ACC-47B82	115V~ 60Hz	1.9A	R290	32~50°F
ACD-47F82	115V~ 60Hz	5.9A	R290	14~-11°F

ACC-73F82	115V~ 60Hz	4.1A	R290	32~50°F
ACD-73F82	115V~ 60Hz	8.1A	R290	14~-11°F


1.Foam door type

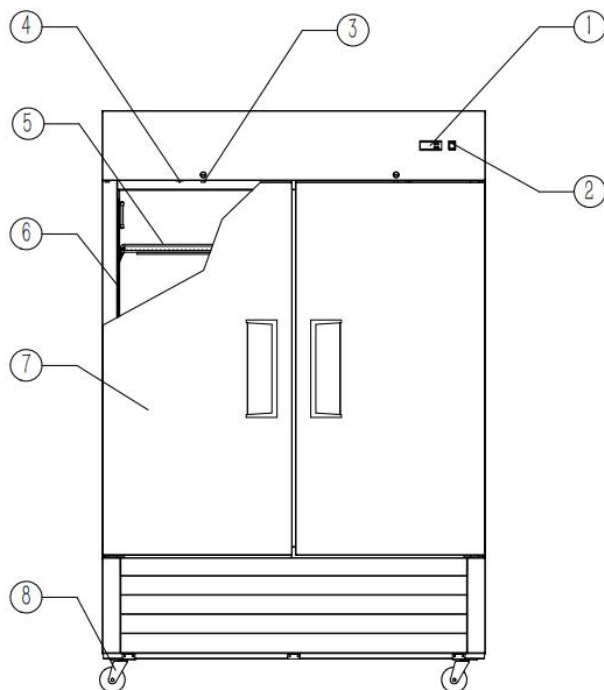

<Picture Only For Reference >

1	Thermostat	5	Shelf
2	Power Switch	6	Shelf Support Rail
3	Lock	7	Door
4	Light & Fan Switch	8	Caster

2.Glass door style

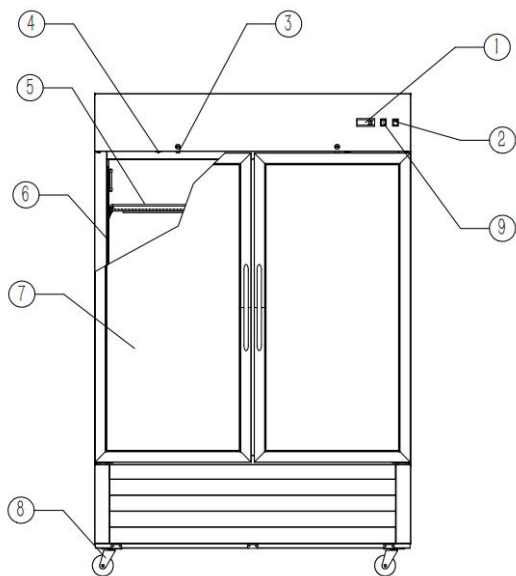

1	Thermostat	6	Shelf Support Rail
2	Power Switch	7	Door
3	Lock	8	Caster
4	Fan Switch	9	Light Switch
5	Shelf		

INSTALLATIONS

1. Prepare two locations for your new refrigerator, one for usual service and another for initial setup and periodic maintenance. Both should be level and firm, able to easily bear the fully loaded weight of the device. Both should have the necessary amount of clearance for the device's ventilation and a well-grounded circuit that can be used by the device alone.
2. Open and unpack the device. Keep any children and pets away from the packing materials.


3. Open the doors to the location where the refrigerator is going to be placed. Allow 12 hours in the initial location to fully ventilate the refrigerator and to provide time for the refrigerant to fully settle.
4. Your device was cleaned and checked before leaving the factory, but look it over before use and clean anything that may have become dirty during shipment. If you will store any loosely sealed items in the refrigerator, clean and disinfect all surfaces out of an abundance of caution.
5. Unlock the adjustable wheels and roll the refrigerator to its usual location. Use 2 or more people to move the refrigerator. Avoid tilting it more than 45° as you go. Once it's in place, lock the wheels back down. Check that the shelves are where you will need them to be and that they're firmly supported.
6. Connect the power cord and make any adjustments you will need to the refrigerator's default cooling settings. For best results, allow the machine to run for 1 hour before starting to fill it with items.

OPERATION INSTRUCTION



Keys	Function	Button action
	The real-time display interface is continuously pressed to enter the parameter setting state	Pressing the keys for 3s
	View and modify the cabinet temperature setting	Press the response

	Switch between menu and parameter	Press the response
	The real-time display interface is pressed to view the temperature value of the evaporator sensor	Press the response
	Press the parameter setting interface to exit the parameter setting state	Press the response
	The real-time display interface continuously switches between refrigeration, defrost/defrost delay, and defrost drip for 3 seconds	Pressing the keys for 3s
	Press the parameter setting interface to adjust the menu and parameters	Press the response
	Live display interface pressed to turn lights on/off (only valid for models with light control)	Press the response
	Press the parameter setting interface to adjust the menu and parameters	Press the response
	The real-time display interface is pressed to turn on/off the defogging output	Press the response
	Controller on/off	Combine the keys and press 3S continuously

	View the interface and press and hold 3S to enter maintenance mode	Combine the keys and press 3S continuously
	Force start refrigeration	Combine the keys and press 3S continuously

Lights	Symbols	Status	Meaning
Setting		ON	Parameter setting
		OFF	Status of temperature measuring and controlling
Refrigeration		ON	Refrigeration work
		OFF	Refrigeration stop
		FLASH	Refrigeration time delay
Defrost		ON	Defrost work
		OFF	Defrost stop
		FLASH	Defrost drip
Fan		ON	Fan work
		OFF	Fan stop
Door switch		ON	Cabinet door open
		OFF	Cabinet door close
Defogging	AUX	ON	Defogging is on
		OFF	Defogging is off

View and modify cabinet temperature set point

- a. Under temperature measuring and controlling status, press and release key, the set indicator will light and the panel will display cabinet temperature set-point. Users may view and modify the cabinet temperature set-point.
- b. Press key or keep the controller inactive for 30 seconds, the controller will exit cabinet temperature viewing/modifying status with the current temperature set-point automatically saved.

CLEANING AND MAINTENANCE

1.Clean the inside and outside

- Please use a soft cloth and a gentle non-abrasive cleaning agent. Dry with a clean, soft cloth.
- Do not use any corrosive cleaning agent.

2.Condenser Coil

- Please check the condenser coil once a month and clean it if the coil looks dirty. A dirty condenser coil will affect the refrigeration performance.
- Power to the unit should be turned off before cleaning
- Gently use a brush to clean any built up dust. Brush vertically in the direction of the fins. Do not brush horizontally as damage to the fins could occur, negatively affecting refrigeration performance.

3.Door Gasket

- Clean the door gasket on a regular basis. This helps ensure a tight seal between the door and the cabinet.

4.Check

- After completing the cleaning process. Make sure to check that all parts that were removed, have been properly reinstalled and the unit is safe to use.

TROUBLE SHOOTING

Problem	Reason	Solution
No refrigeration	• Power plug is loose • Non-dedicated outlet • Power Switch is off • Unit is defrosting	• Ensure plug is seated tightly • Use a dedicated outlet • Turn the switch on • Wait for end of defrost cycle
Slow cooling	• Too much product being stored • Air circulation blocked • Direct sunlight, near heat source • Dirty Condenser • Doors being opened too often • Controller not set correctly • Hot food in the unit	• Decrease the amount stored • Reposition the stored product • Choose a more suitable location • Clean condenser (Power unit off) • Open the doors less often • Change the setting (Call Service) • Remove the hot food until cooled.
Noisy	• Surface is not stable or flat • Unit is not level	• Relocate to a stable and flat surface • Adjust wheels/legs until stable and level

Prompt code	Code explanation
E1	Cabinet temperature sensor failure
E2	Evaporator sensor failure
E3	Condenser sensor failure
rH	Cabinet high temperature alarm

rL	Cabinet low temperature alarm
Ch	Condenser high temperature alarm
dEF	Defrosting
oFF	The controller press the power key to turn off the display code

