HONDA

INSTALLATION INSTRUCTIONS

Application	Wireless Remote Starter		Publication No.
	Models	Part Number	PII54855
Generators	EU7000is	06612-Z37-000AH	**Issue Date** February 2020

The wireless remote starter kit allows you to start and stop your generator with the fob transmitter or your smartphone.

FOLLOW THESE INSTRUCTIONS CAREFULLY

Proper installation is essential for safe, reliable operation.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
   a. This device may not cause harmful interference.
   b. This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

PARTS LIST

Carefully remove the parts from the packaging. The following parts are included:

Ref	Description	Quantity
①	Fob Transmitter	1
②	Receiving Unit	1
③	Cable Tie	1
	Installation Instructions	1

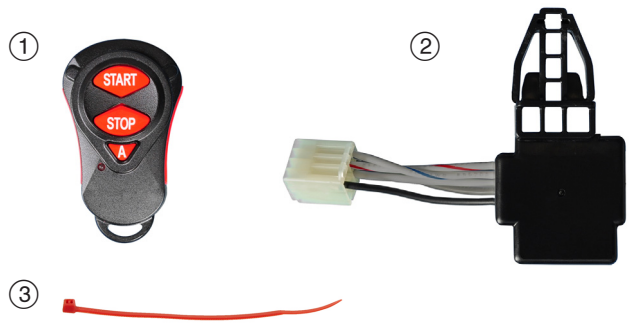

Questions? Contact your Honda dealer. There is a dealer locator at powerequipment.honda.com.


© 2020 American Honda Motor Co., Inc.—All Rights Reserved
First Issue Date: February 2020


RECEIVING UNIT INSTALLATION

1. Lift the EU7000is folding handles upward and ensure both handle latches engage in the up position.
2. Loosen the cover screw and remove the battery maintenance cover.



3. Remove the short connector assembly from the 8-pin remote connector by pressing the tab on the bottom of the connector and then pulling the short connector assembly out.

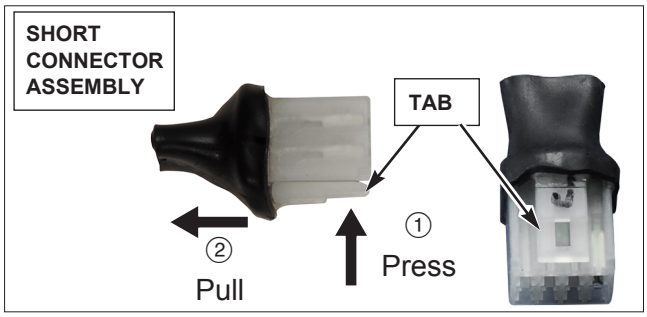


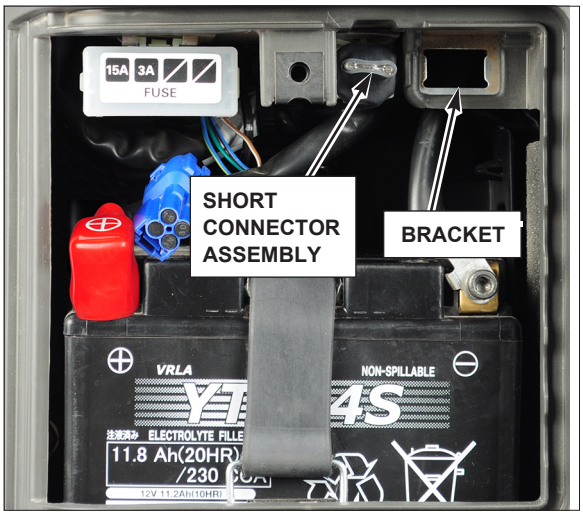

IMPORTANT:


Do not discard the short connector assembly. If the receiving unit is removed from the unit, the short connector assembly must be reinstalled into the 8-pin remote connector because the generator will not start without it.

4. Insert the receiving unit (wire-side down) into the bracket next to the connector.
5. Plug the receiving unit connector into the 8-pin remote connector.

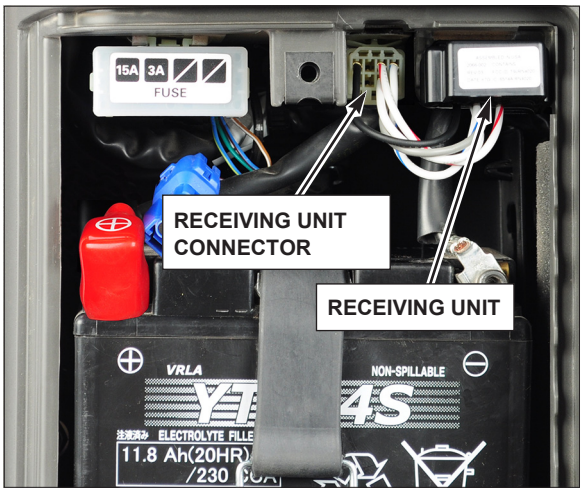

© 2020 American Honda Motor Co., Inc.—All Rights Reserved

6. Use the cable tie to attach the short connector assembly to the receiving unit. Remove the excess cable tie end.
7. Reinstall the battery maintenance cover and tighten the cover screw.

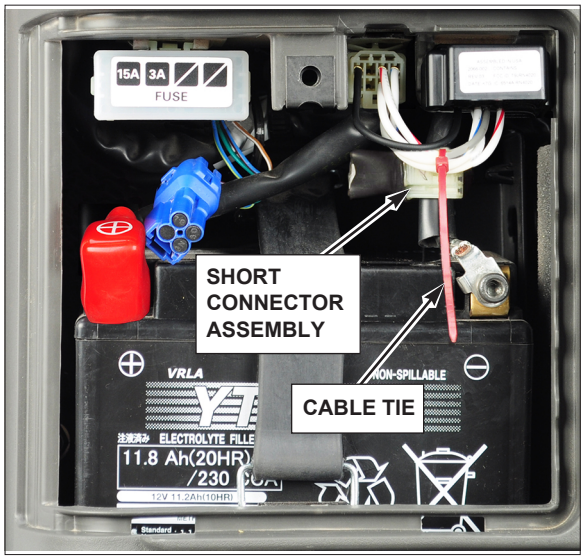

PAIRING RECEIVING UNIT, FOB TRANSMITTER, AND SMARTPHONE

NOTE: Pairing of both the fob transmitter and the smartphone is required to be able to use either device.

Fob Transmitter

1. Turn the Main Switch to the ON position and then to the OFF position five times within five seconds. On the fifth time, leave the switch in the ON position.

   NOTE: You must start the pairing sequence within 30 seconds.



2. Press and release the A button once. The indicator light illuminates red.
3. Press and hold the START and STOP buttons at the same time until the indicator light flashes red.

   After two seconds, the indicator light illuminates green indicating the fob transmitter is paired with the receiving unit.

   Pairing is complete.



© 2020 American Honda Motor Co., Inc.—All Rights Reserved

Smartphone

1. Download the "Honda EU7000is Remote" app.
2. Ensure the ***Bluetooth***® function on the smartphone is enabled.
3. Follow the on-screen instructions for pairing the phone to the receiving unit.
4. Turn the Main Switch to the ON position, and then to the OFF position five times within five seconds. On the fifth time, leave the switch in the ON position.

   NOTE: You must start the pairing sequence within 30 seconds.
5. Follow the instructions within the downloaded app for adding a new generator.



App Store, Google Play and the Bluetooth marks and logos are the registered trademarks of Apple Inc., Google Inc. and Bluetooth SIG, Inc., respectively, and any use of such marks by American Honda Motor Co., Inc. is under license

OPERATION

Safety

⚠WARNING

Exhaust contains poisonous carbon monoxide gas that can build up to dangerous levels in closed areas.

Breathing carbon monoxide can cause unconsciousness or death.

Never run the generator in a closed, or even partially closed area where people may be present.

To avoid carbon monoxide poisoning, follow these instructions when operating a generator:

- Only run a generator OUTSIDE, far away from windows, doors, and vents.
- Never operate a generator inside a house, garage, basement, crawl space, or any enclosed or partially enclosed space.
- Never operate a generator near open doors or windows.
- Get fresh air and seek medical attention immediately if you suspect you have inhaled carbon monoxide.

Smartphone

Starting the generator

Note: The Main Switch must be in the ON position. All appliances must be turned off before starting the generator.

1. Open the “Honda EU7000is Remote” app on your smartphone.
2. Press and hold 1.5 seconds (until the green circle is complete).
3. Read the warning message, and then tap “I Understand Start Generator”.
   The generator starts.

Stopping the generator

1. Open the “Honda EU7000is Remote” app on your smartphone.
2. Tap and hold 1.5 seconds (until the red circle is complete).
   The generator stops.

© 2020 American Honda Motor Co., Inc.—All Rights Reserved

Fob Transmitter

Starting the generator

Note: The Main Switch must be in the ON position. All appliances must be turned off before starting the generator.

If the smartphone app is open and the smartphone is in range of the paired generator, the fob transmitter will be inoperable.

1. Press and release the A button one time. The indicator light flashes orange three or four times and then stays illuminated.
2. Press and release the START button.

   The generator starts. The indicator light illuminates green indicating the generator is running.

Stopping the generator

1. Press and release the A button one time. The indicator light flashes orange three or four times and then stays illuminated.
2. Press and release the STOP button.

   The generator stops. The indicator light illuminates red indicating the generator has stopped.

Note: Although it is necessary to pair both a smartphone and the fob transmitter for either to work, it is not necessary to have both the smartphone and fob transmitter when operating the remote functions.

UNPAIRING RECEIVING UNIT, SMARTPHONE, AND FOB TRANSMITTER

Receiving Unit

1. Turn the Main Switch to the ON position and then to the OFF position ten times within 30 seconds. This unpairs the smartphone from the receiving unit.
2. Turn the Main Switch to the ON position, and then to the OFF position a total of 20 times within 30 seconds. This unpairs the smartphone and the fob transmitter from the receiving unit. The receiving unit memory is completely cleared.

Note: Clearing the receiving unit memory does not clear the smartphone memory or fob transmitter memory and communication with those devices is no longer possible.

Smartphone

1. Open the "Honda EU7000is Remote" app on your smartphone.
2. Select the tools icon next to the generator name.
3. Select Forget this generator, and then tap Confirm.

   Once confirmed, the generator is removed from the list.

Note: Clearing the smartphone memory does not clear the receiving unit memory.

Fob Transmitter

1. Press the START, STOP, and A buttons at the same time and hold for three seconds until the indicator light flashes orange.
2. Release and repeat two more times. After the third time, the indicator light illuminates green to indicate the unpairing has been completed. If the indicator light flashes red, there was an error or it timed out.

Note: Clearing the fob transmitter memory does not clear the receiving unit memory.

© 2020 American Honda Motor Co., Inc.—All Rights Reserved

FOB TRANSMITTER STORAGE

Storage temperature: -22 to 140 °F (-30 to 60 °C)

Do not leave the fob transmitter in direct sunlight.

Do not drop the fob transmitter, submerge in water, or expose to gas or oil.


Keep out of reach of children.

FOB TRANSMITTER BATTERY REPLACEMENT


NOTICE

This product contains components that can be damaged by electrostatic discharge (ESD). To reduce the chance of ESD damage, work over a non-carpeted floor, use a static dissipative work surface (such as a conductive foam pad), and wear an ESD wrist strap connected to a grounded surface.

1. Remove the four screws from the rear cover of the fob transmitter. Place the screws in a safe place.

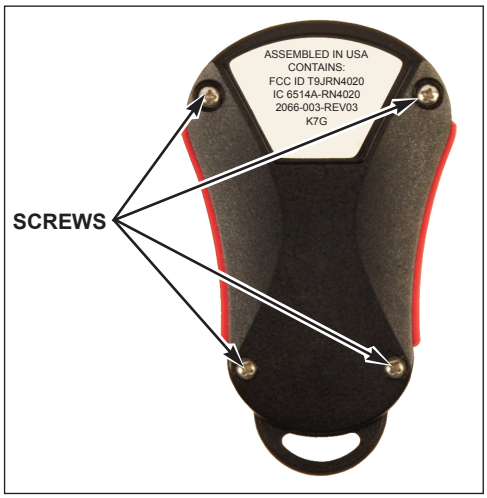


2. Separate the front cover from the rear cover of the transmitter carefully. Do not damage the red gasket.

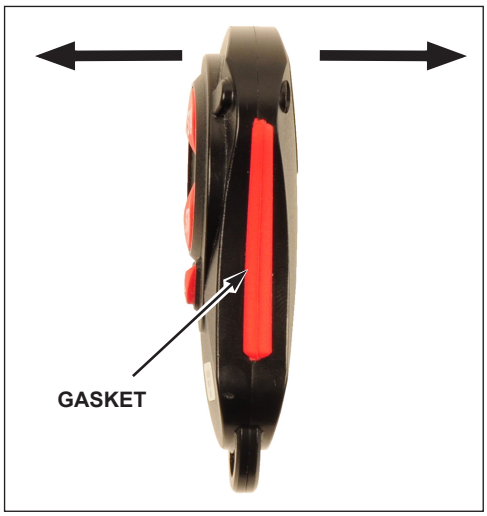

© 2020 American Honda Motor Co., Inc.—All Rights Reserved

3. Push the discharged battery from the right side to remove it.

   If you dislodge the circuit board, carefully place it back in the front cover.

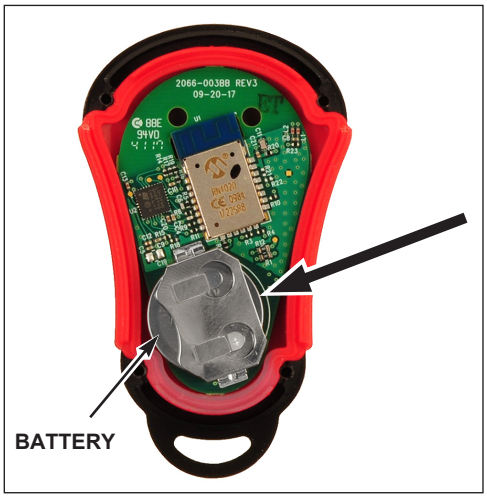

4. Insert a new CR2032-type battery with the positive (+) side facing up.



5. Align the front and rear covers of the transmitter, and then apply gentle pressure.
6. Reinstall the four screws.

   Tighten the screws until there are no gaps between the front and rear covers. Do not overtighten.

7. Test the transmitter by pressing and releasing the A button. The indicator light flashes indicating the transmitter is working properly.



© 2020 American Honda Motor Co., Inc.—All Rights Reserved

HONDA

The Power of Dreams