



Jackel

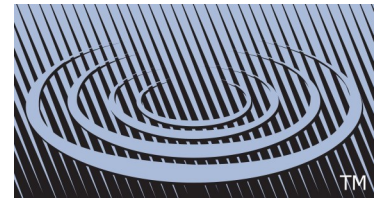

Installation Instructions

Part Number: SF16101-PDVT

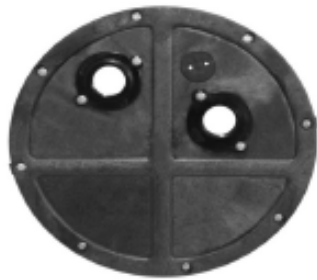

Package Contents

1. Cover
2. Threaded Discharge Flange (2 in.)
3. Threaded Vent Flange (2 in.)
4. Cord Grommet (2-Hole)
5. Reusable Seal
6. Stainless Steel Bolts & Washers (8 ct.)

Tools Required




Safety Goggles



7/16" Wrench

Installation:

1. Unplug your pump.
2. Unscrew both the discharge and vent pipes from your existing cover. Remove the pump's power cord from the cord grommet and cover.
3. Pull your pump's power cord through the new cover's cord hole.
4. Bolt the new cover down making sure the discharge and vent pipes are properly positioned above the discharge and vent openings in the cover. Do not overtighten.
5. Connect the discharge pipe by screwing the threaded adapter back into the discharge opening in the cover and then slide the discharge pipe into the adapter. If the threaded adapter is sealed to the pipe you will need to remove it before screwing it into the discharge opening.
6. Connect the vent pipe by screwing the threaded adapter back into the vent opening in the cover and then slide the vent pipe into the adapter. If the threaded adapter is sealed to the pipe you will need to remove it before screwing it into the vent opening.
7. Pull the pump's power cord to eliminate any slack inside the basin. Insert the cord through the hole in the cord grommet and press the cord grommet into the cover.
8. Plug the pump back in to complete installation.

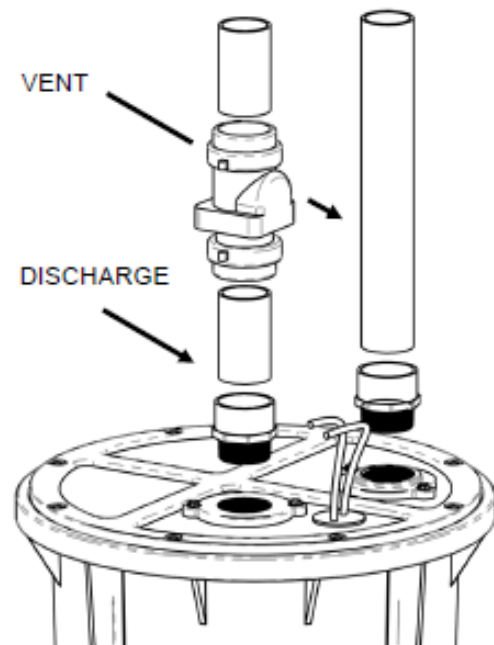

Safety Information:



WARNING: Failure to install basin cover as shown will create a safety risk. Install cover as shown.

Warranty: For more information please visit our website: www.jackelinc.com/warranty



© 2014 Jackel, Inc.
SF16101PDVT, 07/19