
UKOKE

Portable Dehumidifier

Instruction's Manual

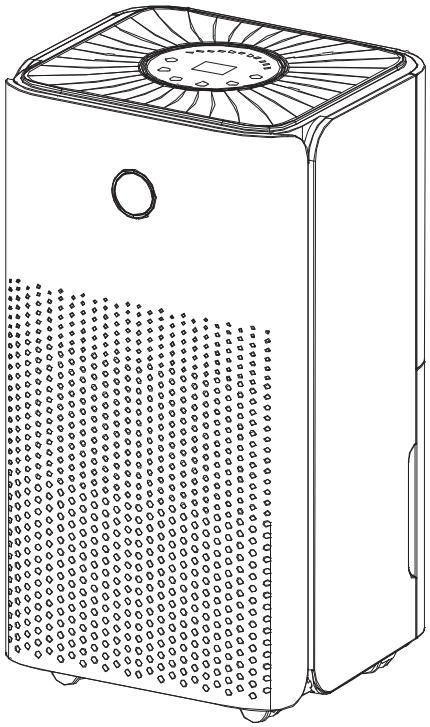

MODEL#:UDH0125

Thank you for choosing Ukoke for your purchase.
Your decision to trust us with your needs is sincerely appreciated, and we want you to know that we value you patronage.
If there is anything else we can assist you with or if you have any further inquiries, please feel free to let us know.

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN THEM FOR FUTURE REFERENCE

CONTENTS

PRODUCT OVERVIEW----------1-2
SAFETY INFORMATION----------3-4
SAFETY INSTRUCTIONS----------5-12
MACHINE PARAMETERS----------13
PRODUCT DIAGRAM----------14

PRODUCT USAGE

Positioning----------15-16
Operating the Control Panel ----------17-20

CLEANING AND MAINTENANCE DRAINAGE

Manual Drainage ----------21-22
Cleaning the Air Filter ----------23-24
Seasonal Maintenance----------25
Long-Term Storage Instructions----------26

TROUBLESHOOTING----------27-29

LIMITED PRODUCT WARRANTY----------30-32

PRODUCT OVERVIEW



Our dehumidifiers offer powerful dehydration solutions for single rooms, contributing to a comfortable atmosphere in your space. They feature dehumidification functions designed to circulate air and effectively remove moisture.These self-contained systems are easy to transport and do not require permanent installation, allowing you to place them where they're most needed. Commonly used in kitchens, temporary residences, computer rooms, garages, and various other settings where outdoor unit installation is limited.



Service personnel are mandated to thoroughly review the USER MANUAL prior to engaging in any operations or procedures. It is imperative that service personnel carefully acquaint themselves with the content and instructions provided within the USER MANUAL to ensure comprehensive understanding and adherence to proper protocols.

PRODUCT OVERVIEW

Carefully inspect the package upon receipt, opening the box to systematically remove all components.

Conduct a thorough examination to ensure that no damage occurred during shipping.

If any part is found to be cracked or broken, we recommend reaching out to UKOKE customer support promptly for assistance and a timely replacement.

Take the time to identify and familiarize yourself with each component, ensuring a comprehensive understanding of the assembly process for optimal utilization.

Should you have any additional needs or further inquiries, please do not hesitate to reach out to us. We are here to assist you. You can contact us through telephone at **909-606-4551** or via email at **Service@ukoke.com**. Your satisfaction is our priority, and we are dedicated to providing you with the support you may require.

SAFETY INFORMATION

⚠ DANGER	⚠ WARNING	⚠ CAUTION
DANGER - Immediate hazards which WILL result in severe personal injury or death	WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death	CAUTION - Hazards or unsafe practices which COULD result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

1. Proper grounding must be ensured to reduce the risk of shock and fire. DO NOT CUT OR REMOVE THE GROUNDING PRONG.
2. Do not operate dehumidifier if power cord is frayed or otherwise damaged. Avoid using it if there are any cracks or abrasion damage along the length, plug connector or if the unit malfunctions or is damaged in any manner. Contact an authorized service technician for examination, repairs or adjustments.
3. DO NOT USE AN ADAPTER OR AN EXTENSION CORD.
4. Do not block airflow around the dehumidifier. The exhaust hose should be free of any obstructions.
5. Always unplug the dehumidifier before servicing it or moving it.
6. Do not install or use the dehumidifier in any area where the atmosphere contains combustible gases or where the atmosphere is oily or sulphurous. Avoid any chemical coming in contact with your air conditioner.
7. Do not place any object on the top of the unit.
8. Never operate the dehumidifier without filters in place.
9. Do not use the dehumidifier near a bathtub, shower or wash basin.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

SAFETY INFORMATION

SAFETY GUIDELINES

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

ALWAYS DO THIS	NEVER DO THIS	ENERGY SAVE
• Your dehumidifier should be used in such a way that it is protected from moisture. e.g.condensation, splashed water, etc. Do not place or store your dehumidifier where it can fall or be pulled into water or any other liquid. Unplug immediately. • Always transport your dehumidifier in a vertical position and stand on a stable, level surface during use. • Turn off the product when not in use. • Always contact a qualified person to carry out repairs. If the supply cord is damaged it must be repaired by a quali fied technician. • If the dehumidifier is knocked over during use, turn off the unit and unplug from the power supply immediately.	• Do not touch the unit with wet or damp hands or when barefoot. • Do not press the buttons on the control panel with anything other than your fingers. • Do not remove any fixed covers. Never use this appliance if it is not working properly, or-if it has been dropped or damaged. • Never use the plug to start and stop the unit. • Always use the switch on the control panel to start or shut off the unit. • Do not cover or obstruct the inlet or outlet grilles. • Do not use hazardous chemi-cals to clean or come into contact with the unit. Do not use the unit in the presence of inflammable substances or vapour such as alcohol, insecti cides, petrol,etc. • Do not allow children to operate the unit unsupervised. • Do not use this product for functions other than those described in this instruction manual.	•Use the unit in the recom-mended room size. • Locate the unit where furniture cannot obstruct the air flow. • Keep blinds/curtains drawn. • Keep the filters clean. • Keep doors and windows closed to keep cool air in and warm air out.

SAFETY INSTRUCTIONS

We strongly encourage you to thoroughly read and comprehensively understand this manual prior to operating your appliance, recognizing the pivotal role it plays in equipping you with the knowledge and skills necessary to ensure safe and efficient utilization.

1.1 The following safety precautions must always be observed

- Adhere to the manufacturer's specifications by refraining from using unauthorized accessories to prevent potential damage to the machine. Prior to installation, thoroughly inspect the machine and all accessories. Children are allowed to engage in maintenance activities only under the supervision of a guardian.
- In the event of malfunctions, promptly disconnect the power, and close the inlet water valve to cease machine operation. Repairs should exclusively be carried out by authorized and skilled personnel.
- This appliance, designed for utilization in shops, light industry, farms, or for commercial purposes by lay persons, is intended for operation by expert or trained users.
- This appliance is also suitable for use by children aged 8 years and above, as well as individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they receive proper supervision or instruction on safe usage and understand the associated hazards.
- It is crucial that children refrain from playing with the appliance, and any cleaning or user maintenance tasks should be carried out under supervision to prevent accidents.
- It is important to note that this unit is specifically engineered for use with R134A (propane) gas as the designated refrigerant.
- It is imperative to refrain from releasing the refrigerant into the atmosphere, adhering to environmental protection guidelines and safety protocols.
- Recognize that R134A (propane) is both and denser than air, necessitating caution in handling and storage procedures.
- Be aware that propane gas has a tendency to accumulate in lower areas initially but can disperse throughout a space due to air circulation facilitated by fans.
- In the event of suspected or confirmed propane gas presence, it is paramount to prevent untrained individuals from attempting to identify the source, emphasizing the importance of professional intervention for safety.
- Note that the propane gas utilized in the unit is odorless, hence reliance solely on smell is insufficient to detect leaks.
- Understand that the absence of an odor does not indicate the absence of leaked gas, underscoring the need for vigilant monitoring and detection measures.

SAFETY INSTRUCTIONS

- Upon detecting a leak, promptly evacuate all individuals from the premises, ventilate the affected area, and notify the local fire department to report a propane leak, prioritizing the safety of occupants and responders.
- Refrain from re-entering the space until a qualified service technician assesses and confirms it is safe to do so, ensuring thorough evaluation and mitigation of risks.
- Exercise caution by prohibiting the use of open flames, cigarettes, or any potential sources of ignition in close proximity to the units, minimizing the risk of fire or explosion hazards.
- When replacing component parts, adhere strictly to specifications, utilizing only identical repair parts compatible with propane, designed to be non-incendiary and non-sparking for enhanced safety and functionality.



WARNING **The refrigerant loop is sealed. Only a qualified technician should attempt to service!**



WARNING **Failure to adhere to this warning may lead to severe consequences, including but not limited to explosions, loss of life, bodily harm, and extensive property damage, underscoring the critical importance of strict compliance for the safety of all individuals and assets involved.**

SAFETY INSTRUCTIONS

1.2 Operational Precautions



WARNING **Ensuring your safety is our utmost priority and paramount concern, emphasizing our unwavering commitment to prioritizing the well-being and protection of all individuals associated with our operations.**



WARNING **In order to mitigate the potential hazards of fire, electric shock, or injury to individuals or property, it is essential to adhere to recommended safety procedures and guidelines diligently, thereby fostering a secure environment conducive to the safe operation of the appliance.**

- In the event of damage to the supply cord, it is imperative that replacement is carried out solely by the manufacturer, their authorized service agent, or similarly qualified individuals to prevent potential hazards from arising.
- Prior to any servicing, the appliance must be disconnected from its power source, ensuring the safety of personnel conducting maintenance operations.
- Optimal operation of the unit necessitates consistent use with a power source matching the voltage, frequency, and rating specifications indicated on the product identification plate.
- Always utilize a grounded power outlet to power the unit, reducing the risk of electrical hazards and ensuring safe operation.
- When not in use or during cleaning procedures, remember to unplug the power cord, minimizing potential electrical risks and ensuring safe handling.
- Avoid operating the unit with wet hands and prevent any water spillage onto the appliance, reducing the risk of electrical shock or damage.
- To safeguard against damage or malfunction, refrain from immersing or exposing the unit to rain, moisture, or any other liquids.
- It is imperative not to leave the unit running unattended and to avoid tilting or turning over the appliance, mitigating potential hazards and ensuring safe operation.
- Refrain from unplugging the unit while it is in operation and avoid pulling on the power cord to disconnect, minimizing the risk of electrical hazards.
- Utilization of extension cords or adapter plugs is strongly discouraged, ensuring the integrity of the electrical connection and reducing the risk of electrical hazards.
- Avoid placing objects on the unit, maintaining proper airflow and preventing potential damage to the appliance.
- To prevent damage to the unit and ensure personal safety, refrain from climbing or sitting on the appliance.

SAFETY INSTRUCTIONS

- Do not insert fingers or objects into the air outlet, reducing the risk of injury and ensuring safe operation.
- Exercise caution to avoid touching the air inlet or aluminum fins of the unit, reducing the risk of injury and maintaining optimal performance.
- If the unit is dropped, damaged, or showing signs of malfunction, refrain from operating it, ensuring personal safety and preventing further damage.
- Cleaning the appliance with any chemicals is strictly prohibited, preserving the integrity of the unit and preventing potential hazards.
- Ensure the unit is positioned away from fire, inflammable, or explosive objects, reducing the risk of fire hazards and ensuring safe operation.
- Installation of the unit must adhere to national wiring regulations, ensuring compliance with safety standards and regulations.
- Avoid using means to accelerate defrosting or cleaning processes other than those recommended by the manufacturer, maintaining the integrity of the appliance and preventing damage.
- Storage of the appliance should be in a room devoid of continuously operating sources such as open flames, operating gas appliances, or electric heaters, minimizing potential hazards and ensuring safe storage.
- Store the appliance in a manner that prevents mechanical damage, preserving its integrity and ensuring prolonged functionality.
- Avoid piercing or burning the unit, even after use, to prevent potential hazards and ensure safe handling.
- Recognize that refrigerants may not possess an odor, emphasizing the importance of proper handling and maintenance procedures to prevent leaks and hazards.
- Protect pipe-work from physical damage and ensure installation in adequately ventilated spaces, particularly if the space is smaller than 4 m², complying with safety standards and regulations.
- Compliance with national gas regulations is mandatory to ensure the safe operation of the appliance, adhering to established safety standards and regulations.
- Keep any required ventilation openings clear of obstruction to ensure proper airflow and prevent potential hazards.
- Store the appliance in a well-ventilated area where the room size corresponds to the specified operating room area, ensuring optimal ventilation and safe operation.

SAFETY INSTRUCTIONS



WARNING **Any individual engaged in activities related to working on or accessing a refrigerant circuit must possess a currently valid certificate issued by an industry-accredited assessment authority. This certificate serves as authorization of their competence to handle refrigerants safely, in strict accordance with recognized industry assessment specifications, ensuring compliance with established safety standards and regulations.**



WARNING **Servicing procedures must strictly adhere to the recommendations provided by the equipment manufacturer. Any maintenance or repair tasks that necessitate the involvement of other skilled personnel should be conducted under the supervision of an individual proficient in handling flammable refrigerants, ensuring that all procedures are carried out in accordance with safety protocols and industry standards.**

1.3 Safety precautions during servicing

⚠ Please adhere to these warnings when performing any servicing tasks on an appliance utilizing R134A refrigerant, ensuring thorough compliance with safety protocols and procedures to mitigate potential risks and hazards effectively.

1.3.1 Assessment of the workspace

Before commencing work on systems containing flammable refrigerants, it is essential to conduct safety checks aimed at minimizing the risk of ignition. Prior to performing any repairs on the refrigerating system, the following precautions must be strictly adhered to.

1.3.2 Work procedure

Work shall be carried out under controlled procedures to minimize the potential presence of flammable gases or vapors during the execution of tasks.

1.3.3 Overall workspace

All maintenance staff and individuals working in the vicinity must receive instructions regarding the nature of the work being conducted. Avoidance of work in confined spaces is essential. The immediate vicinity of the workspace should be cordoned off. It is imperative to verify that the conditions within the area have been rendered safe by controlling flammable materials.

1.3.4 Verifying the presence of refrigerant

Before and during work, the area must be inspected using a suitable refrigerant detector to alert the technician to any potentially flammable atmospheres. It is crucial to verify that the leak detection equipment utilized is compatible with flammable refrigerants, ensuring it is free from sparking, adequately sealed, or intrinsically safe.

1.3.5 Availability of fire extinguisher

If any hot work is to be performed on the refrigeration equipment or any associated components, ensure that appropriate fire extinguishing equipment is readily available. Have a dry powder or CO2 fire extinguisher positioned adjacent to the charging area.

1.3.6 Eliminate all potential ignition sources

No individual conducting work related to a refrigeration system, particularly tasks involving exposure of pipe work containing or having contained flammable refrigerant, shall utilize any ignition sources in a manner that could pose a risk of fire or explosion. All potential ignition sources, including smoking cigarettes, must be kept at a safe distance from areas where installation, repair, removal, or disposal activities are being carried out, during which flammable refrigerant may potentially be released into the surrounding space. Prior to commencement of work, a thorough survey of the area surrounding the equipment must be conducted to ensure the absence of flammable hazards or ignition risks. Additionally, "No Smoking" signs must be prominently displayed.

1.3.7 A well-ventilated space

Before commencing any work involving breaking into the system or conducting hot work, ensure that the area is either open or adequately ventilated. Continuous ventilation should be maintained throughout the duration of the work to safely disperse any released refrigerant, preferably expelling it externally into the atmosphere.

1.3.8 Inspections of the refrigeration equipment

- When replacing electrical components, ensure they are suitable for the intended purpose and meet the correct specifications. Always adhere to the manufacturer's maintenance and service guidelines.
- If unsure, seek guidance from the manufacturer's technical department for assistance.
- For installations utilizing flammable refrigerants, perform the following checks:

    - Confirm that the charge size aligns with the room size where the refrigerant-containing parts are installed.
    - Verify that ventilation machinery and outlets are functioning properly and free from obstructions.
    - If an indirect refrigerating circuit is utilized, inspect the secondary circuit for the presence of refrigerant.
    - Ensure equipment markings remain visible and legible; rectify any illegible markings or signs.
    - Install refrigeration pipes or components in locations unlikely to be exposed to substances that could corrode refrigerant-containing parts, unless constructed of corrosion-resistant materials or adequately protected against corrosion.

1.3.9 Inspections of electrical devices

Repair and maintenance of electrical components must encompass initial safety checks and thorough component inspection procedures. If a safety-compromising fault is identified, electrical supply to the circuit must not be connected until the issue is satisfactorily resolved. In cases where immediate correction is not feasible but continued operation is necessary, an appropriate temporary solution must be implemented and promptly reported to the equipment owner to ensure all parties are informed.

- Initial safety checks shall include:

    - Ensure capacitors are discharged in a safe manner to prevent the possibility of sparking.
    - Verify that no live electrical components or wiring are exposed during the process of charging, recovering, or purging the system.
    - Confirm the continuity of earth bonding

SAFETY INSTRUCTIONS



WARNING


Install the unit in rooms larger than 4 m². Avoid installing the unit in areas where flammable gas leaks may occur.



The manufacturer may offer alternative examples or additional information regarding the odor of the refrigerant.


Machine Parameters


Contents	Specification
Dehumification Capacity	9 Pints/Day @ 65˚F, 60% RH 32 Pints/Day @ 95˚F, 90% RH
Rated Input Power & Current	135W/1.56A@ 65˚F, 60% RH
Max. Input Power & Current	195W/2.0A@ 86˚F, 80% RH
Ambient Temp.	41- 101 ℉ （5 - 38 ℃ ）
Optimal Room Size for Effective Operation	1750 Sq. Ft.
Noise(Low speed):	≤38dB
Noise(High speed):	≤45dB
Water Tank Capacity	0.53 Gallon (2L)
Unit Weight:	22.05 lbs (10kg)
Unit Dimensions:	H: 9.84" | W: 8.66" | D: 17.52"
Certificate:	CSA, DOE/CEC

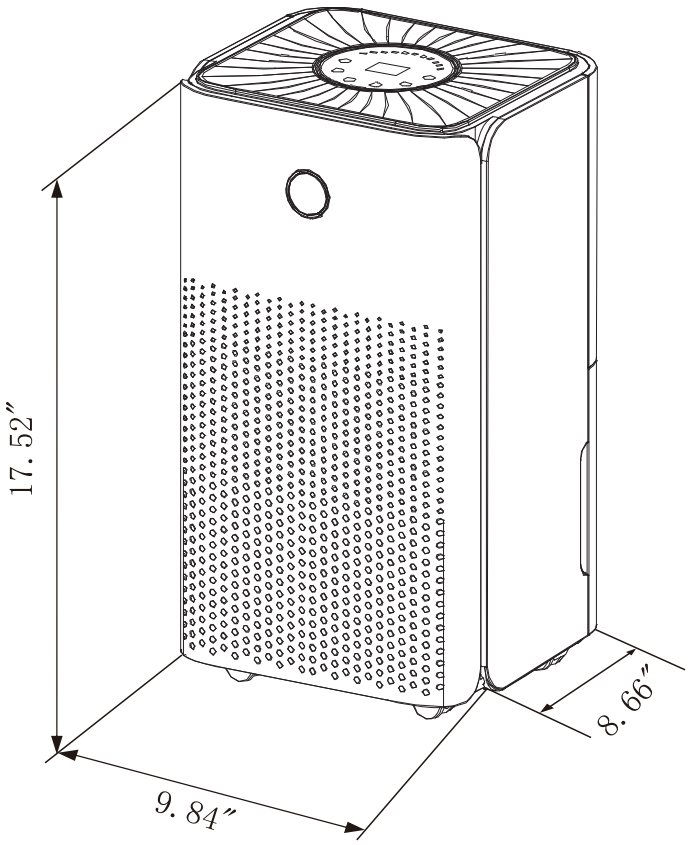


PRODUCT DIAGRAM

PRODUCT DIAGRAM

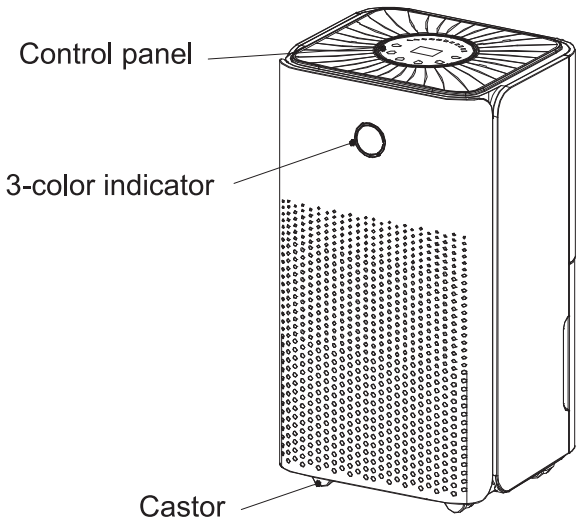

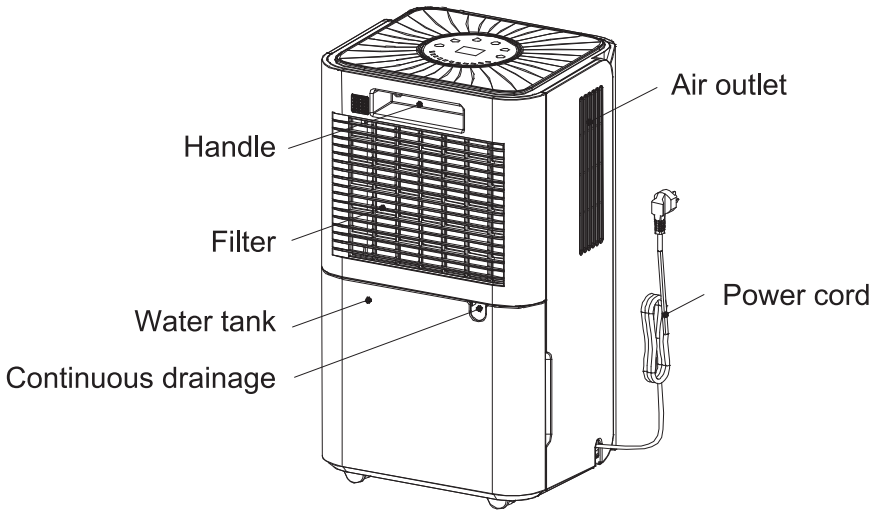

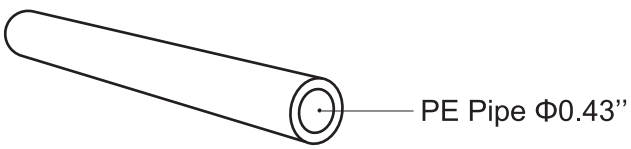


PRODUCT USAGE

Positioning

Positioning

• Position the machine on a flat surface near a window.
• For optimal efficiency, maintain a distance of approximately 20 inches from the window.

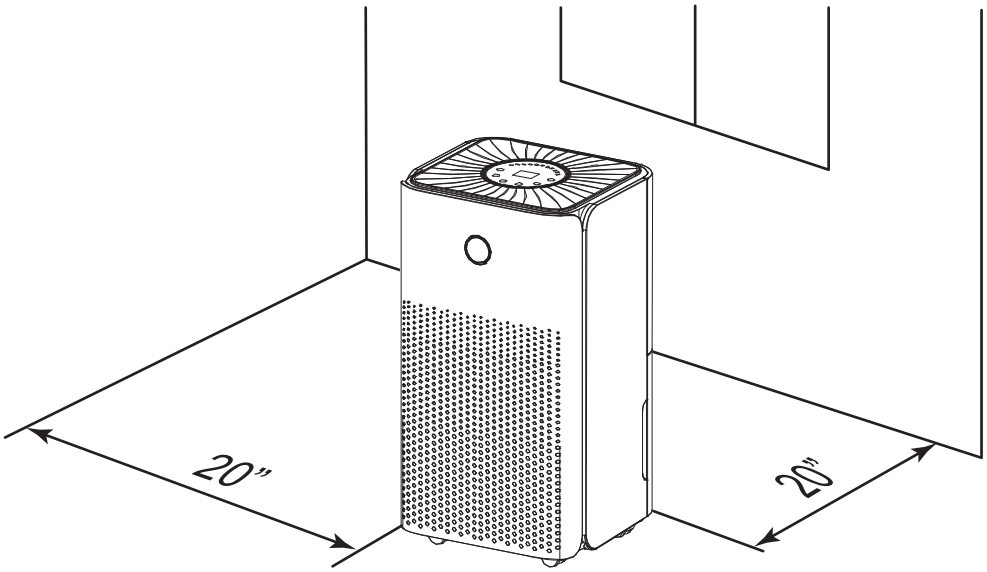

Ensure the dehumidifier remains upright to allow the refrigerant to stabilize.
Maintain a gap of approximately 20 inches between the dehumidifier and surrounding objects.



Upon receipt of the package, it is advisable to allow the portable AC unit to stand upright for a minimum period of 24 hours before initiating startup. This resting period ensures that any internal fluids and components settle back into their proper positions, minimizing the risk of potential damage and ensuring optimal performance when the unit is put into operation.

FUNCTIONING TEMP

41°F ≤ Ambient Temp. ≤ 101°F

• If the ambient temperature falls below or exceeds this range, the dehumidifier will automatically stop functioning.
• when the ambient temperature ranges between 41°F, and 61°F, the compressor undergoes automatic defrost cycles at intervals. During defrosting, the compressor ceases operation while the fan continues to run.


PRODUCT USAGE

Ensuring Safe Operation of the Device

1. Before use, carefully inspect the device for any damages or scratches that may have occurred during shipping or handling.
2. Maintain an ambient temperature range between 41°F to 101°F to ensure optimal performance and longevity of the unit.
3. Avoid outdoor usage as this dehumidifier is specifically designed for indoor residential applications.
4. Operate the unit away from walls, curtains, or any objects that could obstruct airflow through the inlet and outlet.
5. Ensure both the air inlet and outlet remain unobstructed to facilitate proper airflow and efficient operation.
6. Adjust the wind deflector upward before initiating the device to ensure optimal air circulation.
7. To maximize energy efficiency, keep doors and windows closed while the device is in operation.
8. Avoid exposing the unit to direct sunlight or rain, both during operation and storage, to prevent damage.
9. Prior to moving the device, ensure the water tank is emptied to prevent spills and damage.
10. Verify that the water tank is correctly fitted into place to prevent operational issues and potential leaks.
11. Upon startup, the dehumidifier will resume operation in the mode previously selected during its last use, maintaining user preferences.
12. The dehumidifier will automatically initiate dehumidification when the room humidity exceeds the selected humidity level by 3%, ensuring optimal air quality.
13. To protect the compressor, a 3-minute time delay is implemented. Allow this duration to elapse before the dehumidifier resumes dehumidification after a power interruption or shutdown.

PRODUCT USAGE

The display shows the current ambient humidity level

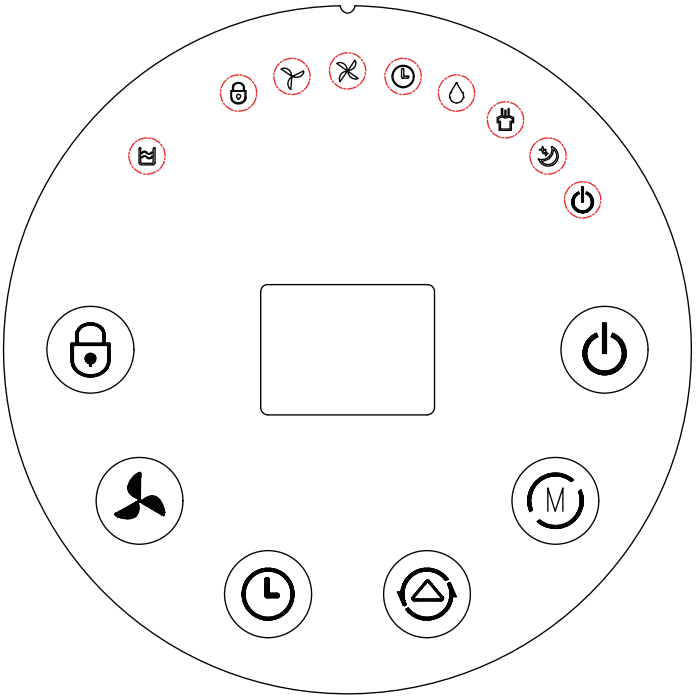

Press to turn On/Off the device


Press to select different operating modes

Press for humidity level setting

Press for Child Lock

Press ON/OFF timer settings

Press for fan speed setting

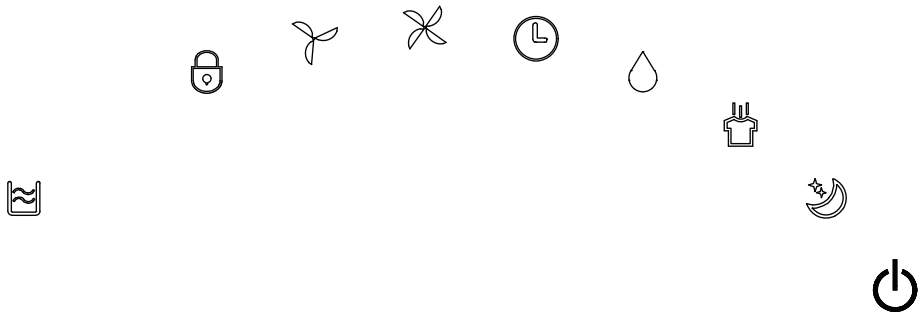

A brief explanation for each indicator is provided below:

Power ON/OFF

Sleep mode ON

Drying mode--Continuously drying ON

Auto mode ON

Timer ON

Fan speed

Child lock ON

Tank Full/Tank reinstall failure

Operating the Control Panel

Use the Power button to turn the dehumidifier on and off. The machine's initial settings are: 50% relative humidity (RH), default automatic mode, and high-speed fan operation.

Power

1) Upon powering on, all indicators and the screen will illuminate for 1 second before turning off. Following a brief buzzer sound, the power indicator will remain on, indicating that the machine has entered stand-by mode.
2) Auto-Restart: If power to the unit is interrupted, the dehumidifier will restart itself in its last used mode/settings once power is restored.

Auto Mode

1) When the environmental humidity exceeds the set humidity level by 3% or more, the fan initiates operation, followed by the compressor starting after a 3-second delay.
2) Conversely, when the environmental humidity falls below the set humidity level by 3% or more, the compressor ceases operation, and the fan undergoes a delayed shutdown.
3) Additionally, under auto mode, both the fan speed and humidity settings can be adjusted to suit specific preferences and environmental conditions.

Note:
1)Auto mode cycles between continuous drying mode and sleeping mode.
2)Press the button once to switch between modes, with the corresponding indicator lighting up accordingly.

Continuously drying Mode

Although the machine continues to operate, it appears that the humidity adjustment feature is not functioning.

Sleeping Mode

To **activate** the sleep function, touch the sleep button, causing it to illuminate and initiate the sleep mode.
After 10 seconds of inactivity, all indicators gradually dim, and the fan speed automatically transitions from high to low.
To **awaken** the indicators, simply touch any button.
To **exit** sleep mode, touch the sleep button again.

Set Mode

1) In sleep mode, the fault code is not displayed, and wind speed adjustment is disabled; however, humidity adjustment remains accessible.
2) In automatic mode or sleep mode, you can utilize this key to adjust the set humidity level. Each press increments the set humidity by 5%, within the range of 30% to 80%.
3) To query the current room temperature, long-press this key. The display will show the current room temperature for 5 seconds, after which it will automatically revert to displaying the current humidity. Additionally, pressing this key for an extended duration will display the ambient temperature.

Operating the Control Panel

Timer Setting

To activate the timer function, press the designated key to set the timer for a duration ranging from 0 to 24 hours, with each press incrementing the value by 1 hour. The selected timing value is then displayed on the screen. To cancel the timer function, set the value to "00," causing the corresponding indicator to turn off.

Once the timer is set and activated, the timer LED illuminates throughout the designated timing period. Upon completion of the timing interval, the timer LED automatically turns off.

During normal operation, use the timer to schedule the machine's automatic shutdown. Alternatively, in standby mode, utilize the timer to schedule the machine's automatic startup.

Speed Mode

1) Wind speed adjustment is exclusively available in automatic mode.
2) Press this key to toggle between high and low wind speeds.
3) The corresponding wind speed indicator illuminates to indicate the selected speed setting.

Child Lock


To activate the child lock function, press and hold the designated key until the child lock indicator light illuminates, indicating that the function is active. Once enabled, all keys are locked and cannot be operated. To deactivate the child lock function, press the same button again, causing the indicator light to extinguish, and restoring the buttons to their normal operation.

Note:
the child lock function will automatically be canceled upon shutdown or powering off the machine.

Operating the Control Panel


3-Color Digital Display on the front Panel

Blue

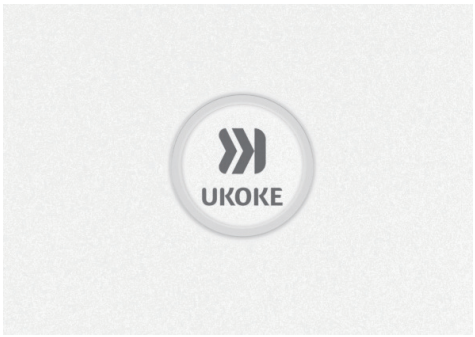

Ambient Humidity<46%

Green

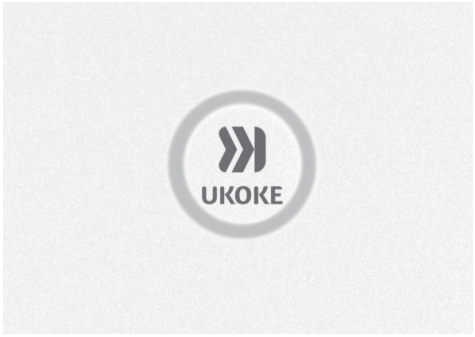

44%＜Ambient Humidity＜66%

Red




Ambient Humidity＞64%

If any of the error codes E1, CL, CH, LO, or HI appear, the indicator light will turn red.


Cleaning and Maintenance Drainage

Drainage

• When the water tank reaches maximum capacity, the dehumidifier will emit a buzzing sound, accompanied by the illumination of the "Water Full" indicator light.

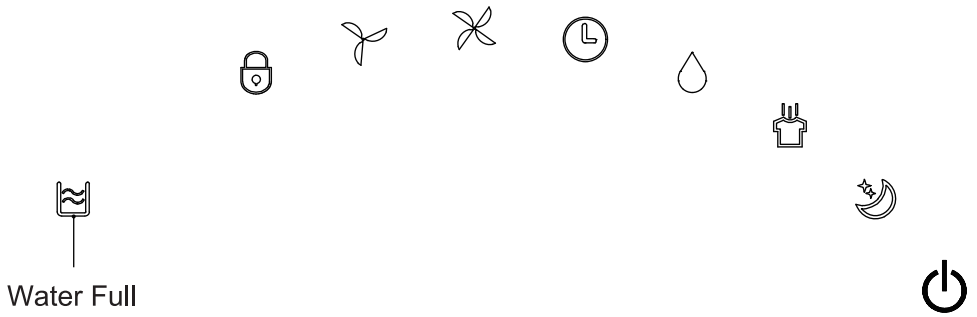


To address this, begin by pressing the POWER button to deactivate the unit, ensuring safe handling during maintenance.

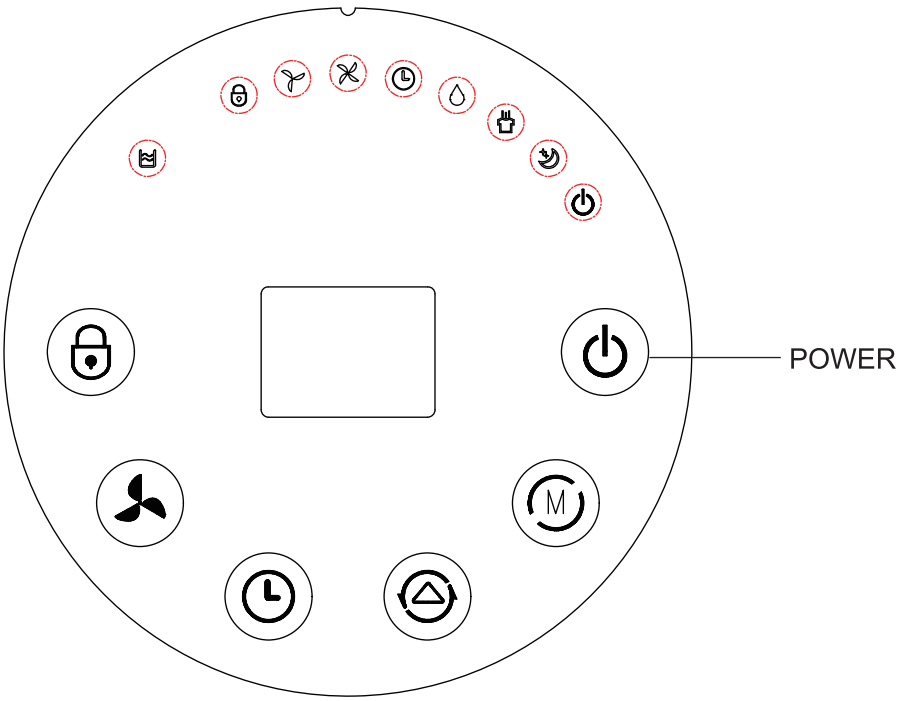

Cleaning and Maintenance Drainage

• Gently pull the water tank out of the dehumidifier body, effortlessly sliding it for removal. Proceed to carefully empty the accumulated water into a designated drainage area or outdoors, allowing for proper disposal.

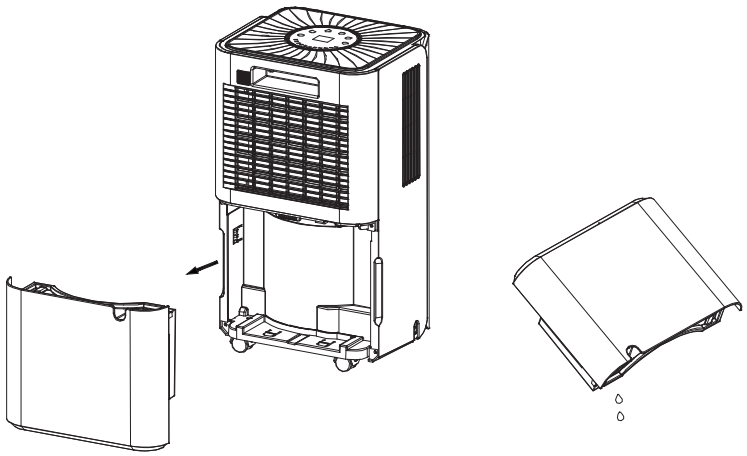

• Take the time to thoroughly clean both the interior and exterior surfaces of the tank, maintaining cleanliness and optimal performance.
• Once emptied and cleaned, reinsert the empty tank back into its original position within the unit, ensuring a secure fit.
• Press the POWER button once more to reactivate the dehumidifier, resuming its operation efficiently.
• Should the "Water Full" indicator persist despite emptying the tank, it is advisable to inspect the float mechanism, verifying its correct placement to facilitate proper functioning.

WARNING

1. Retain the water tank magnets and plastic rivets to ensure proper function. Failure to do so may result in the unit not automatically shutting off when the tank is full “FL”, leading to potential overflow and damage to the room's floor.

2. Important: Always clean the condensed water in the tank before resetting the machine's operation mode to prevent any issues.

3. Maintenance Tip: If the water tank becomes dirty, rinse it thoroughly with clean water. Avoid using detergents, steel wool, chemical cleaners, diesel oil, benzene, diluents, or other solvents, as they may cause damage and leaks to the tank.

4. Essential Step: Ensure the emptied tank is properly replaced into the unit to prevent the water full indicator from remaining red and hindering the machine's restart


Cleaning and Maintenance Drainage

Maintenance

Note: To avoid electrical shock, turn off the dehumidifier and pull the plug out before conducting maintenance and repair.

Frame Cleaning

1.Pull the plug before cleaning
2.Wipe with a soft cloth. Do not use chemicals. such as benzene, alcohol, gasoline, etc. to avoid damaging the machine's surface
3.Do not let water splash onto the machine

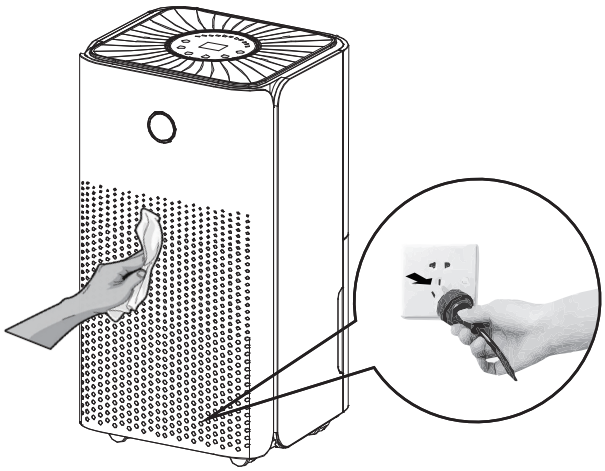


Cleaning the Air Filter

The dehumidifier efficiency of the unit may diminish due to dust buildup, hence it is advisable to clean the filter screen at least once every two weeks. The frequency of cleaning may vary depending on the indoor air quality. For specific cleaning instructions, please follow the steps outlined below:


Regular cleaning of the air filter is essential for optimal performance. The removable air filter facilitates easy cleaning; however, operating the unit without an air filter may lead to contamination of the evaporator. Follow the steps below for proper cleaning:

Cleaning and Maintenance Drainage


1. Ensure the unit is switched off by pressing the POWER button and unplugging the power cord.
2. Remove the water tank from the main body, then carefully extract the filter located at the bottom of the rear shell.

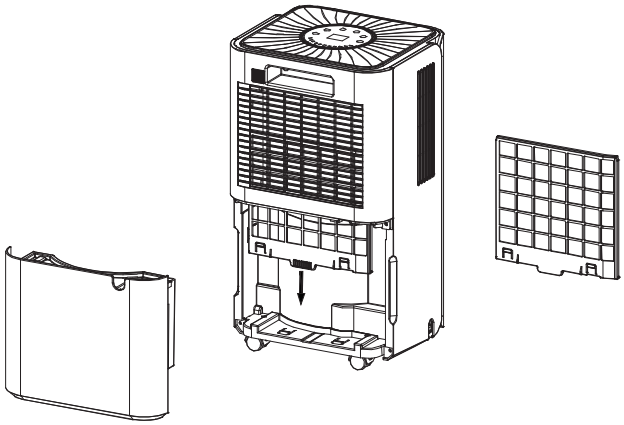

3. Use a vacuum cleaner to remove dust from the filter.

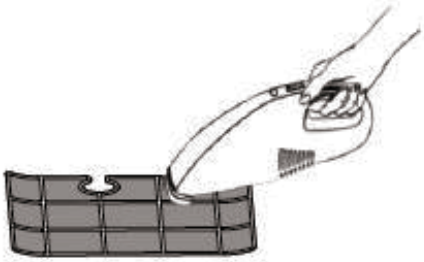


4. Flip the filter over and rinse it under running water, allowing the water to flow through in the opposite direction of air flow. Afterward, set the filter aside to air dry completely before reinstalling.

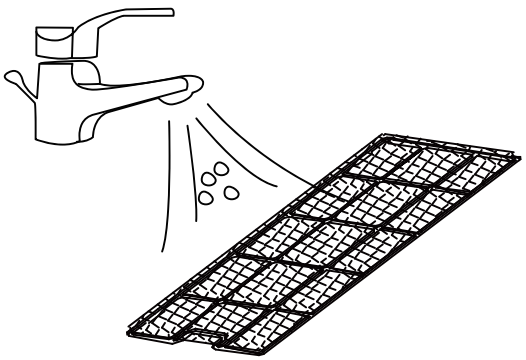

Cleaning and Maintenance Drainage

5. Reinstall the cleaned filter and water tank.

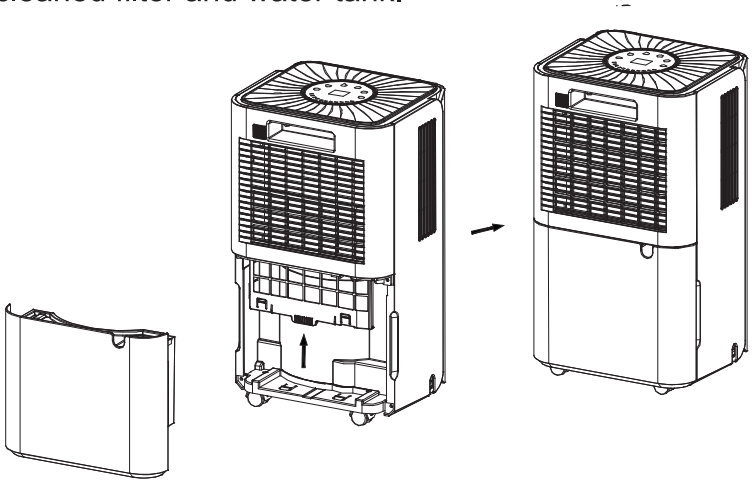


WARNING **• Do not touch the evaporator surface with bare-hand, or could cause injury of your fingers.**

• Use warm water to clean the filter screen. Do not use harsh detergents (such as alcohol, petrol, benzene etc.).

• In order to avoid damaging the filter screen, keep it away from heat and put it in a dry place.

Seasonal Maintenance

- If the machine will not be in use for up to 3 months, follow these guide lines to maintain your dehumidifier unit:
- Pull out the drainage cap to drain out the water
- Keep the machine working for 2 hours in the air distribution mode until the inside becomes dry
- Turn off dehumidifier and disconnect power
- Clean up the filter screen
- Coating a plastic bag to keep the dehumidifier unit dry
- Avoid direct sunlight

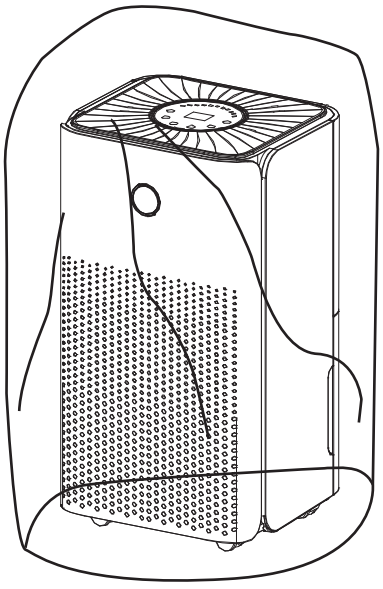

Cleaning and Maintenance Drainage

Managing Refrigerant Cleanup

Safety Measures:

- Recognize that the gas or vapor is heavier than air and may accumulate in confined spaces, particularly at or below ground level.
- Ensure the elimination of all potential sources of ignition.
- Wear appropriate personal protective equipment (PPE).
- Evacuate unnecessary personnel, isolate the area, and ventilate it.
- Avoid contact with eyes, skin, or clothing, and refrain from inhaling vapors or gas.
- Take measures to prevent entry into sewers and public waters.
- If safe to do so, stop the release at its source and consider using water spray to disperse vapors.
- Isolate the affected area until the gas has dispersed, ventilate it thor oughly, and conduct gas testing before entry. Promptly notify competent authorities in the event of a spill.

Long-Term Storage Instructions:

If you anticipate not using the unit for an extended period (more than a few weeks), it's advisable to perform a thorough cleaning and ensure complete drying before storage. Please follow these steps:

- Unplug the unit and storing them alongside the unit.
- Drain any remaining water from the unit.
- Clean the filter and allow it to dry fully in a shaded area.
- Gather the power cord and secure it near the water tank.
- Reinstall the filter in its original position.
- Ensure the unit remains in an upright position during storage.
- Store the unit in a well-ventilated, dry, non-corrosive environment indoors.

Attention:

Before packing the unit, it is essential to dry out the evaporator inside the machine to prevent potential damage to components and the growth of molds. To do this, unplug the unit and position it in a dry, well-ventilated area for several days to allow for thorough drying. Alternatively, another effective method is to adjust the humidity point setting to be at least 5% higher than the ambient humidity level. This adjustment prompts the unit's fan to operate and circulate air, facilitating the drying process of the evaporator over a period of a few hours.

Cleaning and Maintenance Drainage

Continuous drainage

For uninterrupted operation or unattended dehumidification, it's advisable to utilize the provided drain hose and connect it to the unit. This allows condensate water to flow automatically into a designated bucket or drain through the force of gravity.


• Ensure to switch off the unit before starting any operation.

• Ensure the drainage pipe is straightened out, taking note that the pipe diameter should be 0.43 inches for proper fit and functionality.

• Locate the cistern hole on the back or underside of the dehumidifier. Insert one end of the drainage pipe into this hole, ensuring a snug and secure fit to prevent leaks.

• Extend the other end of the drainage pipe to your desired drainage location

• If using a bucket or container for drainage, securely fasten the hose to the container's rim to prevent accidental displacement.

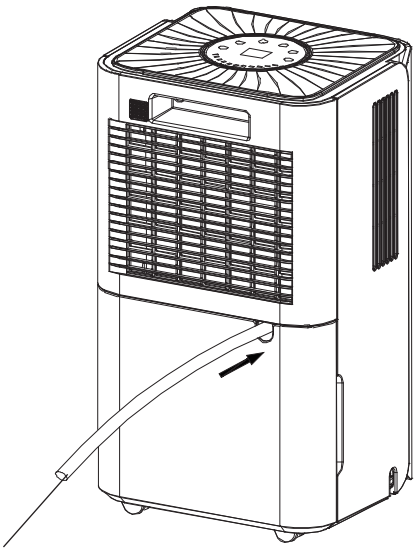

Pipe Φ0.43’’

TROUBLESHOOTING

To troubleshoot any issues with your dehumidifier, please refer to the troubleshooting chart provided below. If, after following the outlined steps, the dehumidifier continues to malfunction or fails to operate correctly, we advise contacting the Ukoke Tech customer service center for further assistance. It's important to note that customers should never attempt to troubleshoot internal components of the dehumidifier, as doing so may result in damage or pose safety risks. Your safety and satisfaction are our top priorities, and our dedicated customer service team is available to provide expert guidance and support to address any concerns you may have regarding your dehumidifier.

Error Code	Self-Diagnosis
E1	Humidity sensor problem (Contact the customer service)
LO	Ambient humidity is below 20% The dehumidifier shuts down for self- protection. The function will be restored once the ambient temperature returns to the specified range.
HI	Ambient humidity is above 90% The dehumidifier shuts down for self- protection. The function will be restored once the ambient temperature returns to the specified range.
CL	Low temperature protection, the ambient temperature < 41 ℉ The dehumidifier shuts down for self- protection. The function will be restored once the ambient temperature returns to the specified range.
CH	High temperature protection, the ambient temperature > 105 ℉ The dehumidifier shuts down for self- protection. The function will be restored once the ambient temperature returns to the specified range.

TROUBLESHOOTING

Common Malfunctions	Possible Reasons	Solutions
Unit does not start when pressing ON/OFF button	A.No power supply	A.Please connect to a working outlet and switch on the device
	B.The dehumidifier shuts down for self- protection	B.The function will be restored once the ambient temperature returns to the specified range.
	C.The water full indicator RED	C.Please drain the water tank and reset it, or reposition the water tank correctly
The dehumidifier is not functioning properly.	A.Exhaust air duct is not connect-ed or blocked	A.Connect the duct and make sure it can function properly
	B.Air filter is blocked by dust	B.Clean the air filter
Noisy or vibration	A. The filter blocked or obstructed	A.Wash/Replace the filter
	B. Loose or vibrating components producing noise	B:ensure they are securely tightened to prevent further movement or potential damage
	C.The surface is not level or not flat enough	C.Place the unit on a flat,level surface if possible

Limited Product Warranty

This Limited Warranty is applicable solely to the original purchaser of the system. It covers all Manufacturer-supplied items that are proven to be defective in material, workmanship, or factory preparation. Notably, this warranty pertains to parts only, with all labor explicitly excluded. Labor exclusions encompass services related to the removal, replacement, installation, adjustment, maintenance, and repair of the unit or its components.

Furthermore, any non-Manufacturer labor required for servicing the unit, including installation, adjustment, maintenance, and repair, is not covered by this warranty. The warranty period spans the first full calendar year from the date of purchase.

It is crucial to note that this Limited Warranty is contingent upon the system being installed, used, and maintained in compliance with all instructions and requirements enclosed with the system.
Failure to observe these conditions will render the warranty void:

- Damage to the appearance or exterior of the product, including any defacement or alteration in design or construction.
- Alteration, removal, or inability to determine the original serial number of the product.
- Damage resulting from power line surges, user-inflicted damage to the AC power cord, or connection to an improper voltage source.
- Damage caused by misuse, accidents, or acts of nature, such as floods or other natural disasters.
- Repairs performed by unauthorized service agents or the use of non-genuine parts obtained from unauthorized sources.
- Units that have been transferred from their original owner, thus voiding the warranty.
- Products sold as refurbished, like new, second-hand, or under "As-Is" or "Final Sale" terms, which are exempt from warranty coverage.
- Usage of the product in commercial or rental settings, where warranties may differ from those applicable to residential use.
- Use of the product in settings beyond ordinary household use or not in accordance with provided instructions, leading to warranty invalidation.
- Damages resulting from service calls made due to improper installations or user errors.
- Exclusion of warranty coverage for glass parts and other accessory items provided with the unit.
- Transportation and shipping costs associated with the replacement or repair of the unit, which are the responsibility of the consumer.

Limited Product Warranty

- Exclusion of coverage for losses resulting from floods or any loss incurred due to product failure or delays in service, repair, or replacement.
- Service calls conducted solely to instruct users on how to operate the product, rather than for repair or replacement purposes.
- Exclusion of warranty coverage for service calls related to house fuses, circuit breaker resets, or correction of house wiring issues, as these are not product defects but rather issues with household infrastructure.

The Manufacturer will not be liable for any incidental or consequential damages resulting from the unit's failure to comply with express or implied warranties or any defect in the unit. Such damages include, but are not limited to, lost time, inconvenience, damage to personal property, loss of revenue, commercial losses, postage, travel, telephone expenditures, or other similar losses. In the event that some states do not allow the exclusion or limitation of incidental or consequential damages, the option to return the system is available. However, if the system is retained, the aforementioned exclusions still apply.

As part of the Limited Warranty conditions, the owner must ensure that periodic maintenance of the system is performed as described in the literature enclosed with the system. Neglect, improper maintenance, abuse, modification, or alteration of the unit will invalidate this warranty. In the case of a defect or failure to perform as per this warranty, the owner should contact the retailer from whom the product was originally purchased.

The implied at-law warranties of merchantability and fitness for a particular purpose terminate one year after the date of purchase.

The Manufacturer holds no liability for determining the appropriate equipment needed to meet your specific requirements. Additionally, the Manufacturer does not authorize others to assume such an obligation on its behalf.

Limited Product Warranty


We offer a comprehensive customer support package, including a 30-day money-back guarantee, a 1-year manufacturer warranty, and lifetime tech support for all our products. Should you have any questions or concerns about your product, please feel free to contact us via phone or email. Your satisfaction is our top priority!

If you are pleased with our products and service, we would greatly appreciate your support by taking a minute to write a product review on platforms such as Amazon, Lowe's, Home Depot, and Walmart. Even just a single line from you means a lot to us. Thank you for choosing our products!

To request service, product literature, supplies, or accessories, please contact us at ***service@ukoke.com*** to initiate a ticket for exchange or repair. When contacting us, kindly provide the date of purchase, model number, and a brief description of the issue. A customer service representative will then reach out to you or provide detailed return instructions.
Please note that Ukoke does not guarantee the proper functioning of the appliance in all environmental conditions and makes no warranties or representations, either implied or expressed, regarding quality, performance, merchantability, or fitness for any purpose other than that identified within this user manual. While we have made every effort to ensure the accuracy of this manual, Ukoke disclaims liability for any inaccuracies or omissions that may occur. Information presented in this manual is subject to change without notice and does not constitute a binding commitment on the part of Ukoke Tech.

We reserve the right to make improvements to this manual and/or the products described herein at any time without prior notice. If you discover any incorrect, misleading, or incomplete information in this manual, please don't hesitate to contact us at **service@ukoke.com**.

Disposal:



When disposing of the packaging material, we encourage you to opt for environmentally friendly methods that facilitate recycling. It's important to note that the device adheres to the regulations outlined in the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Therefore, please refrain from discarding the device as regular domestic waste. Instead, ensure its disposal through an environmentally responsible process, preferably by engaging an officially approved disposal company. By doing so, you contribute to sustainable waste management and promote the proper handling of electronic equipment in compliance with regulatory standards.



Ukoke Tech Customer Service:

☎ +1909 606 4551

Service@Ukoke.com