Furinno®
Fits Space. Fits Budget

Assembly Instruction
Furinno Econ Multipurpose Computer Writing Desk

MODEL : **99914**

00:30
Approx. 30 minutes

Recomm. 2 Person

Tool Required
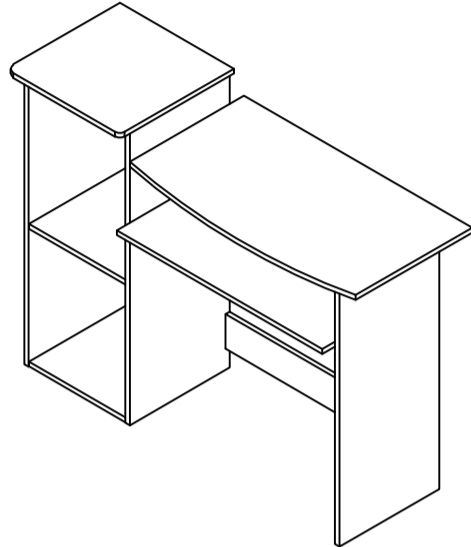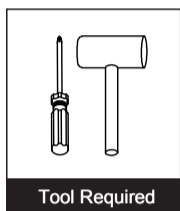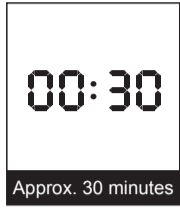
Customer Support
NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!
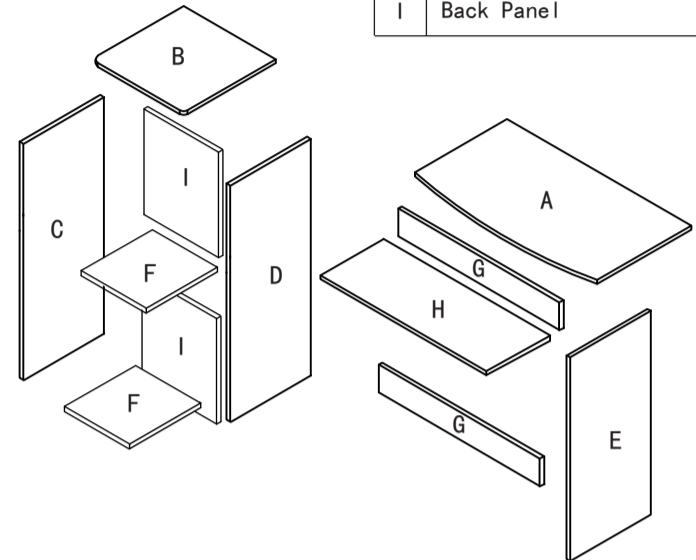
www.furinno.com

No	Hardware List	Qty
1	Screw	18pcs
2	Dowel	6pcs
3	Nail Leg	6pcs
4	Cam-Lock Nut	6pcs
5	Cam-Lock Screw	6pcs
6	Power Pin	16pcs
7	Drawer Slide	1pcs
8	Short Screw	8pcs

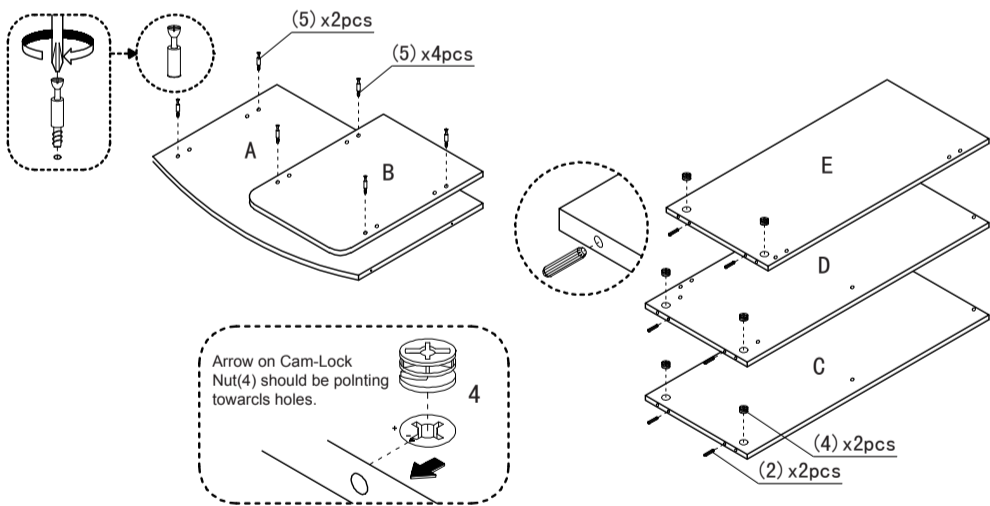| No	Parts List	Qty
A	Top Panel 1	1pcs
B	Top Panel 2	1pcs
C	Left Side Panel	1pcs
D	Center Panel	1pcs
E	Right Side Panel	1pcs
F	Shelf Panel	2pcs
G	Cross Bar	2pcs
H	Keyboard Panel	1pcs
I	Back Panel	2pcs

USEFUL HINTS BEFORE YOU START:
1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

STEP 1

1.1 Insert Dowel(2)and Cam-Lock Nut(4)to Panel(C)(D)&(E), as shown.
1.2 Screw Cam-Lock Screw(5)into the pre-drilled holes on Panel(A)&(B).

(5)x2pcs
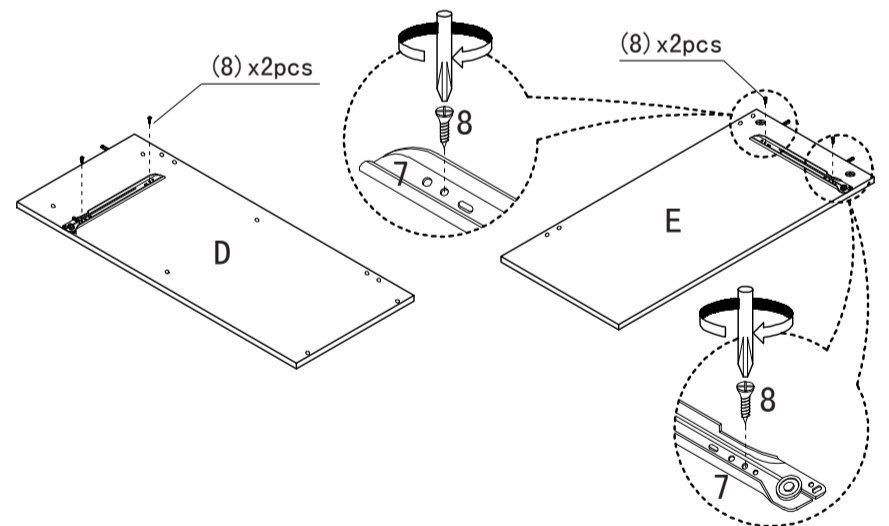(5)x4pcs

Arrow on Cam-Lock Nut(4) should be pointing towards holes.

(4)x2pcs
(2)x2pcs

STEP 2

Fix Drawer Slide(7)to Panel(H)using Screw(8).
Note: Please make sure left/right side of Drawer Slide(7) before attach it.

(8)x4pcs
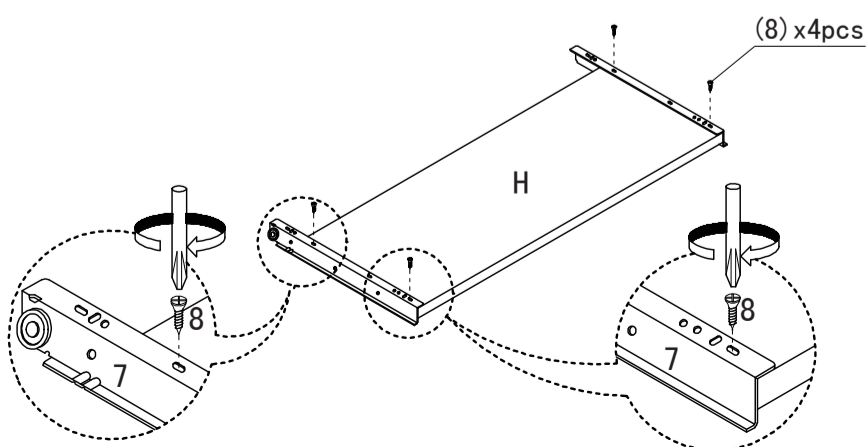
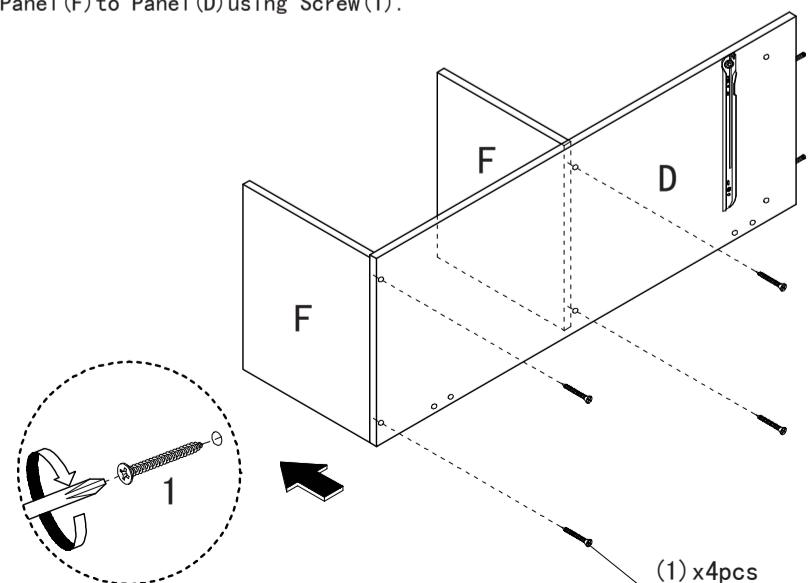## STEP 3

Fix Drawer Slide(7) to Panel(D)&(E)using Screw(8).
Note: Please make sure left/right side of Drawer Slide(7) before attach it.

(8)x2pcs
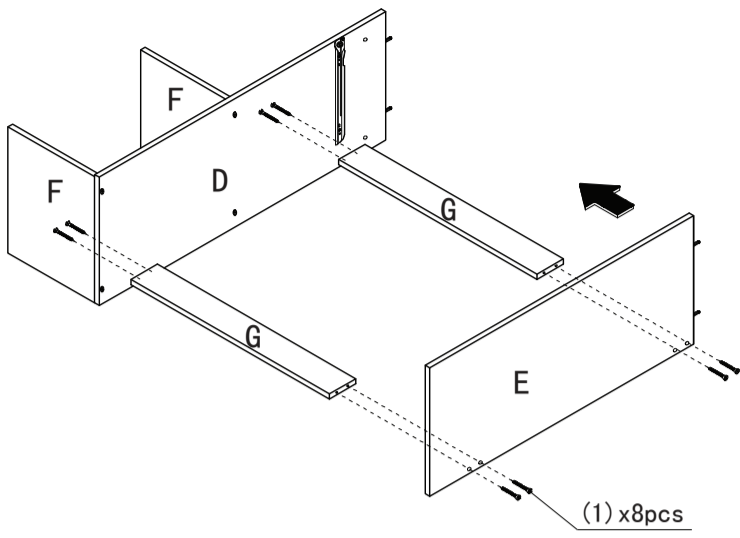(8)x2pcs
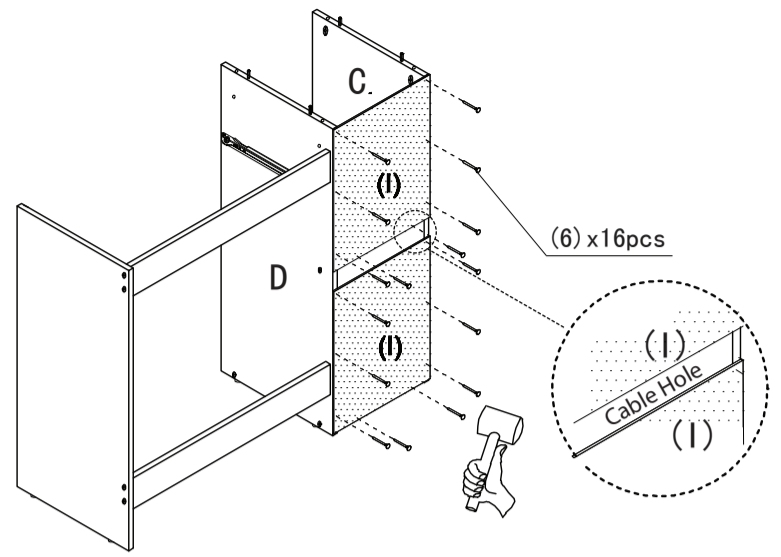

STEP 4

Attach Panel(F)to Panel(D)using Screw(1).

(1)x4pcs

STEP 5

Attach Panel(G)to Panel(D)&(E)using Screw(1).

(1) x8pcs

STEP 6

6.1 Attach Panel(C)to assembled parts using Screw(1).
6.2 Install Nail Leg(3)to the bottom of Panel(C)(D)&(E)using rubber mallet.
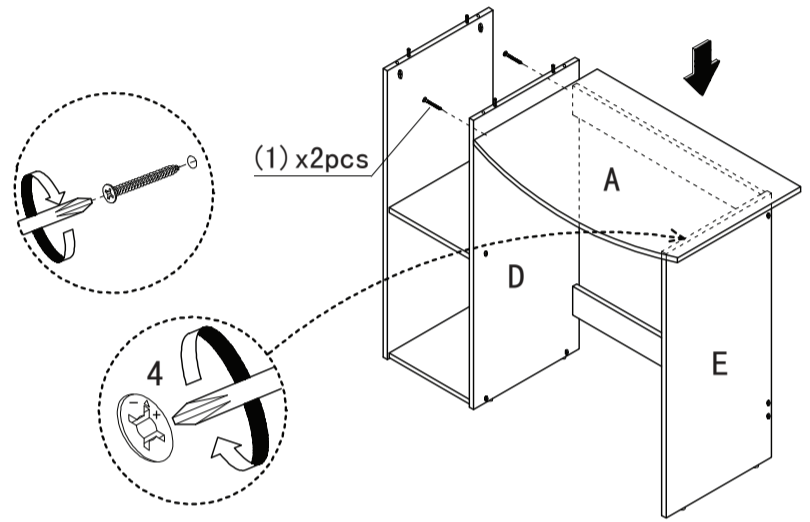

(1) x4pcs
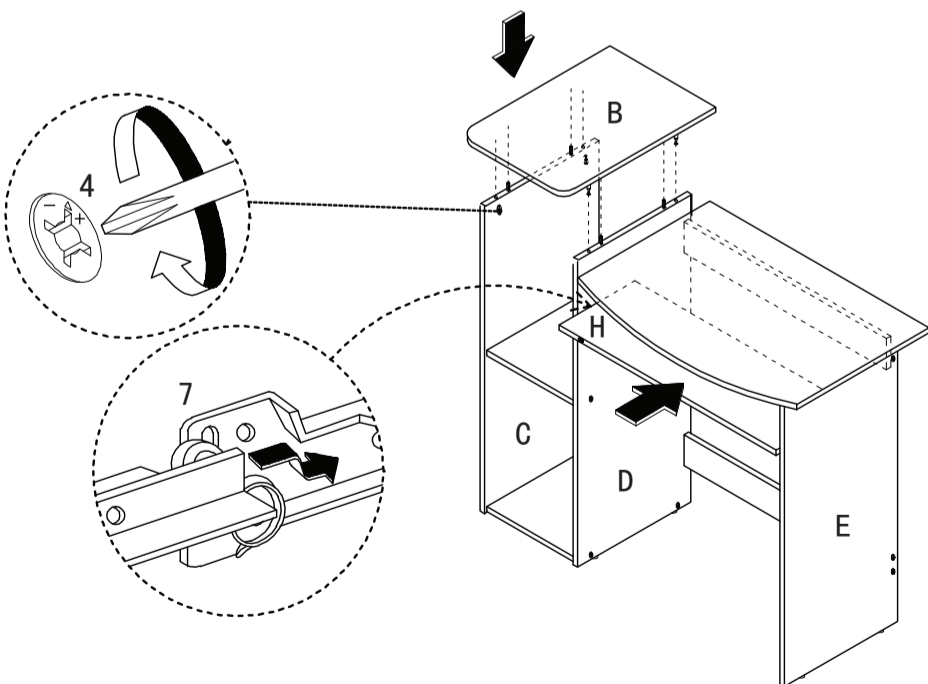
(3) x6pcs

STEP 7

Attach Back Panel(I)to the back position of Panel(C)&(D)using Power Pin(6).

(6) x16pcs

Cable Hole
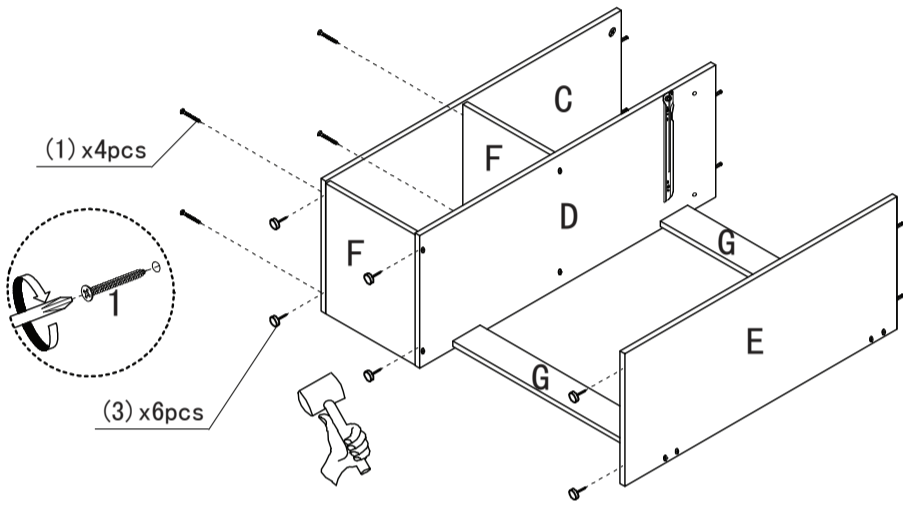
STEP 8

8.1 Attach Panel(A)to Panel(D)using Screw(1).
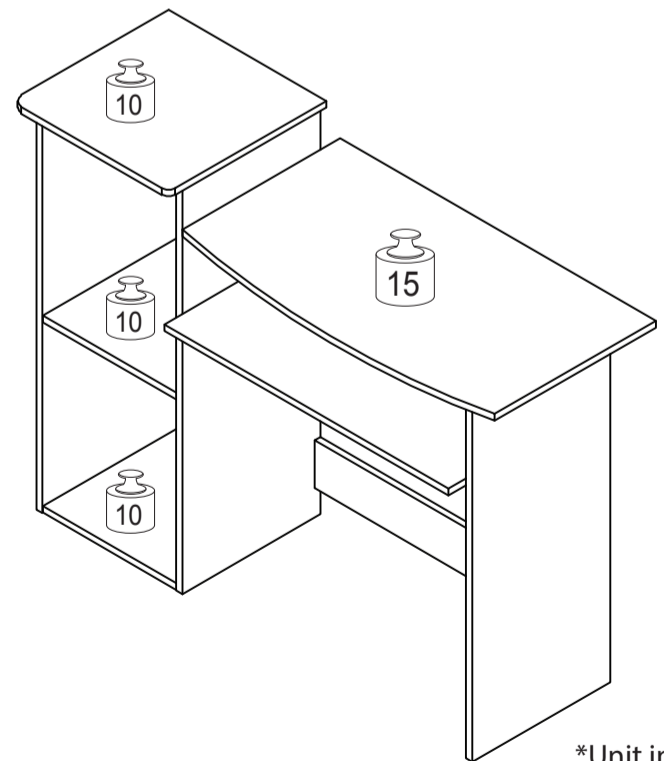8.2 Tighten Cam-Lock Nut(4)on Panel(E)by using screwdriver .

(1) x2pcs

STEP 9

9.1 Attach Panel(B)to Panel(C)&(D)and tighten Cam-Lock Nut(4)using screwdriver.
9.2 Slide the Keyboard Panel(H)to the assembled unit.

Recommended Maximum Weight

*Unit in Pound(lbs)