
Achim's Family of Home Furnishings

Camino

DECORATIVE ROD & FINIAL SET

TO INSTALL:

1

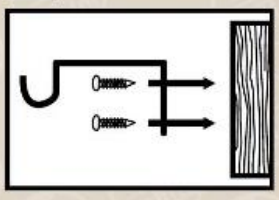


Attach brackets to window frame with included screws. (If not mounting directly into wood, pre-drill a 3/16 inch hole and install anchors.)

Instale los soportes de marco de la ventana con los tornillos incluidos.

(Si no se va a instalar directamente en madera, pretaladra un orificio de 3/16 pulgadas y instala los anclajes.)


2

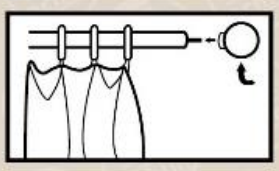

Place rod on brackets, tighten decorative screw caps to keep rod in place. Attach decorative finials.

Coloque la varilla en los soportes, apriete las tapas decorativas para tornillos para mantener la varilla en su lugar. Adjuntar remates decorativos.

3

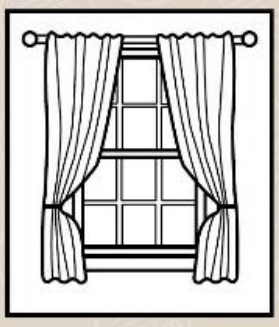

Hang curtain on rod and style.

Cuelga la cortina en la varilla y disena.