1005 873 887

EVERBILT™

FIXED MOUNT CONCRETE/STUD BACK WALL CLIPS

Montaje fijo en concreto/viga presillas de pared posterior

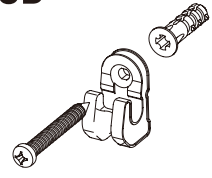

REQUIRED TOOLS / HERRAMIENTAS REQUERIDAS

Not Supplied / No incluido



Supplied / Incluido



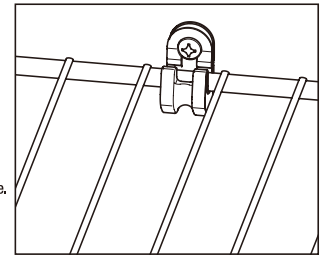

1. Place and level clip at your desired position then mark drilling hole, keep clip location 2 in from shelf end and max 12 in spacing between two clips. Space clips evenly between end clips and ensure all are marked in a level line.

   NOTE: DO NOT EXCEED 12 in spacing between two clips.

   Coloca y nivela presilla en la posición deseada y marca enseguida el orificio a taladrar; mantén la ubicación de la presilla a 5.08 cm del extremo del estante y dejando 30.48 cm como máximo entre dos presillas. Espacia las presillas de manera uniforme entre las presillas de extremo y asegúrate que estén marcadas en una línea nivelada.

   NOTA: NO EXCEDER de 30.48 cm en el espaciado entre dos presillas.

2. Drill 1/4 in holes at marked clip positions, do NOT punch holes.

   Taladra orificios e 6.35 mm en las ubicaciones marcadas para presillas (NO hacer orificios).

3. For stud installation, install screw directly into pre-drilled holes. For concrete installation, push anchor into hole with end of hammer or similar tool and then use screw to secure.

   Para instalación en viga, instala el tornillo directamente dentro de los orificios pretaladrados. Para instalación en concreto, empuja anclaje en el orificio con el extremo de un martillo o herramienta similar, e inserta tornillo para asegurar.

*CLOSETMAID® IS A REGISTERED TRADEMARK OF CLAIRSON, INC. EVERBILT™ SHELVING PRODUCTS ARE NOT MANUFACTURED OR DISTRIBUTED BY CLAIRSON.

*CLOSETMAID® ES UNA MARCA COMERCIAL REGISTRADA DE CLAIRSON, INC. EVERBILT™ LOS PRODUCTOS DE ESTANTERÍA NO SON MANUFACTURADOS NI DISTRIBUIDOS POR CLAIRSON.

Recycle
Recicla

MADE IN CHINA
HECHO EN CHINA

DISTRIBUTED BY:
DISTRIBUIDO POR:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

HOMEDEPOT.COM

8 20909 90195 2