## STEP 5

Attach Panel (E) with Power Pin (5).

5 x 20pcs

unfinished surface

E
E
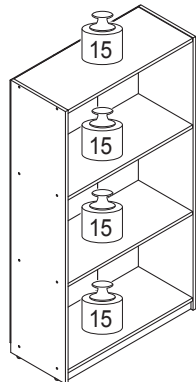E

turn the unit 180°

B
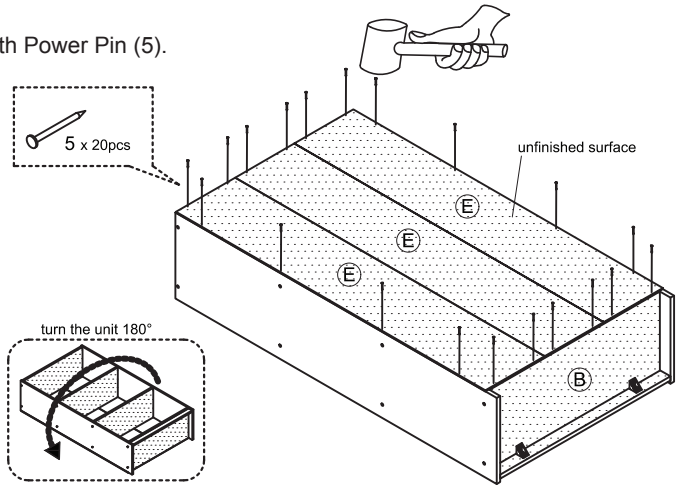
## STEP 6

Install Nail Leg (3) to the bottom of Panel (D) with Rubber Mallet.

E
E
E
D
B
3
3
3
3
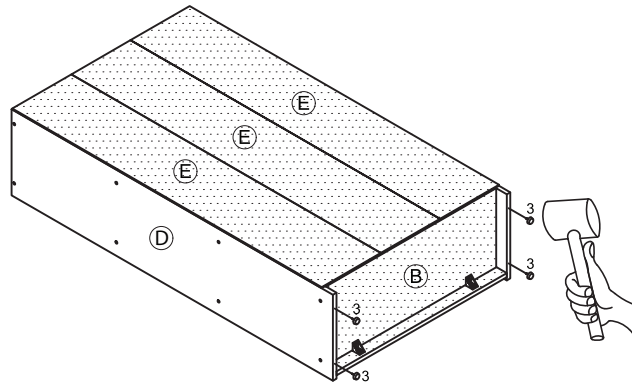
## Recommended Maximum Weight

15
15
15
15

*Unit in Pound(lbs)

### WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

# Furinno®
## Fits Space. Fits Budget

## Assembly Instruction
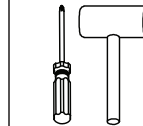
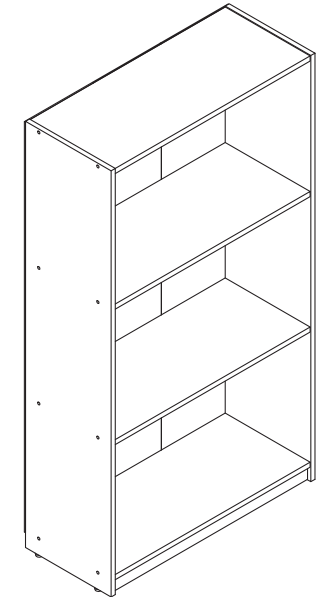Furinno Basic 3-Tier Bookcase Storage Shelves

MODEL : **99736**

00:30

Approx. 30 minutes

Recomm. 2 Person

Tool Required

## Customer Support

**NEED HELP?** For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

*www.furinno.com*

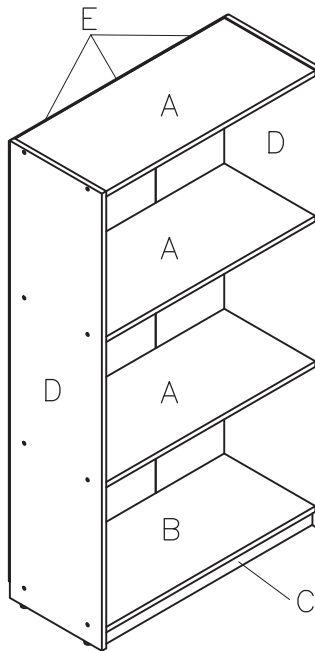| No | Hardware List | | Qty |
|---|---|---|---|
| 1 | Long Screw | | 16pcs |
| 2 | Short Screw | | 4pcs |
| 3 | Nail Leg | | 4pcs |
| 4 | L-Bracket | | 2pcs |
| 5 | Power Pin | | 20pcs |

| No | Parts List | | Qty |
|---|---|---|---|
| A | Shelf Panel | | 3pcs |
| B | Bottom Panel | | 1pc |
| C | Bottom Bar | | 1pc |
| D | L/R Side Panel | | 2pcs |
| E | Back Panel | | 3pcs |



## USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.

2. It is important that each step is performed in correct order to avoid difficulties.

3. Identify, sort and count the parts before assembly.

4. Assemble your furniture on packaging cardboard to prevent scratch or damage.

5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.

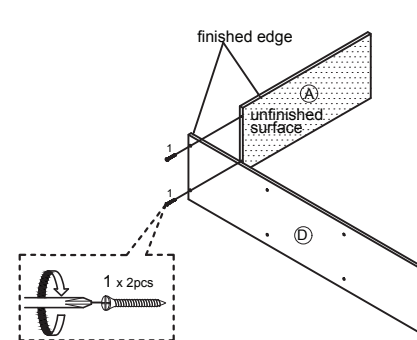6. Using uncompatible hardware might cause damage to product.

## STEP 1

1.1  Install L-Bracket (4) to Panel (C) with Screw (2).
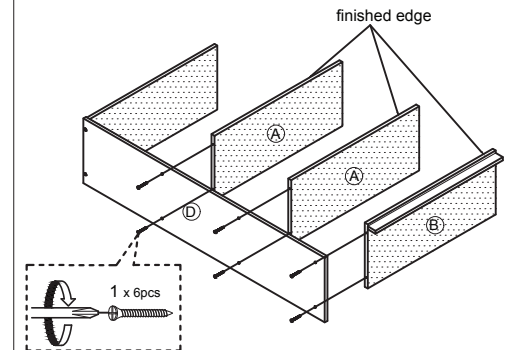1.2  Attach Panel (C) to Panel (B) and tighten with Screw (2).



unfinished surface
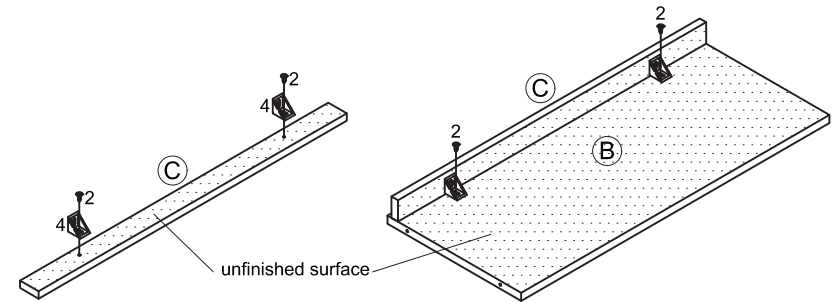
## STEP 2

Attach Panel (A) to Panel (D) and tighten with Long Screw (1).



finished edge

unfinished surface

1 x 2pcs

## STEP 3

Attach Panel (A) & (B) to Panel (D) and tighten with Long Screw (1).



finished edge

1 x 6pcs

## STEP 4

Attach assembled unit to another Panel (D) and tighten with Long Screw (1), as shown.



finished edge

1 x 8pcs