DRAPERY ROD SET
INSTALLATION GUIDE

28 in to 48 in

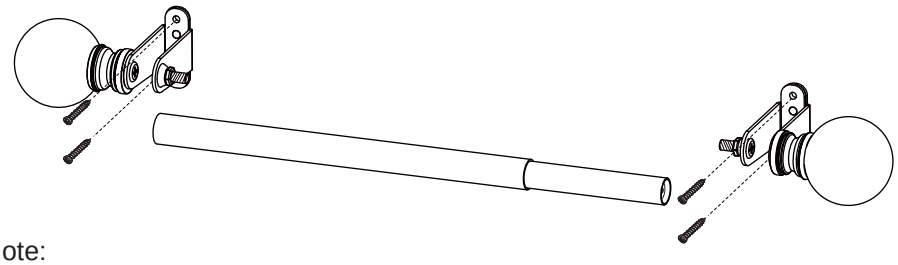

We hope you enjoy your new purchase!
If you have any questions regarding this product or the instructions
Please call Achim's Family of Home Furnishings
Customer Service at 1-800-54-ACHIM
Visit our website at www.achimonline.com
Made in Vietnam
V-30

Note:
Finial shown is for illustration purposes only.
It may not represent the style of finial purchased.
For larger width windows, two persons may be required for easier leveling.
Center bracket inculded only for longer lengths.

Tools needed:



Tape Measure | Pencil | Drill & Bit Set | Philipshead Screwdriver | Level

STEP 1.

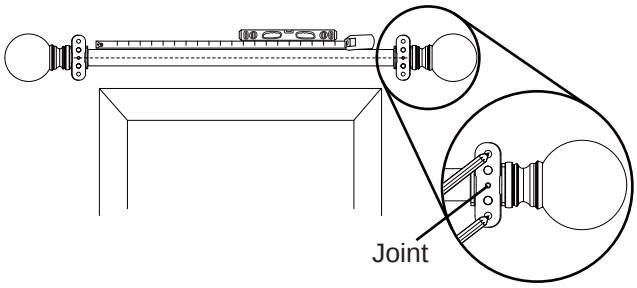

Place wraparound bracket/finial against wall Align wraparound bracket/finial joint. Use tape measure and level for alignment.

STEP 2.

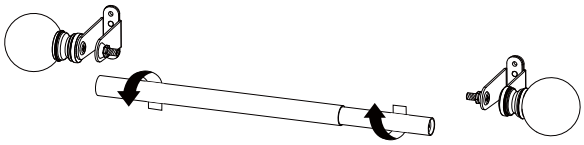

Uninstall the wraparound finial from Rod.

STEP 3.

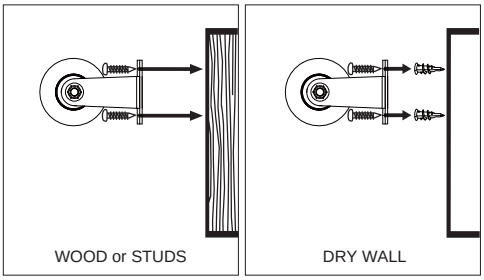

STEP A. (FOR MOUNTING TO DRYWALL OR PANELING)
Pre-drill two pilot holes for each bracket (1/4" drill bit), insert screw in anchors into wall and fasten screws into wall anchors.

STEP B. (FOR MOUNTING TO WOOD OR STUDS)
If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/8" drill bit) and install bracket on the wall with screws provided.

STEP 4.

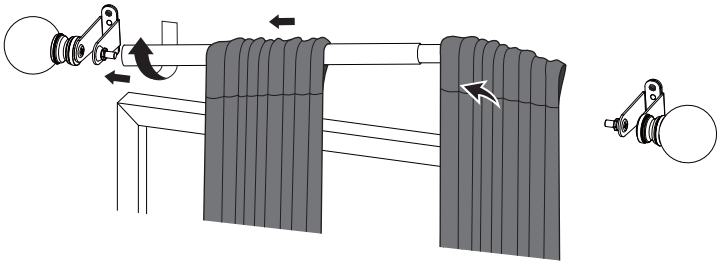

Screw in bigger rod diameter onto left or right side of wraparound bracket/finial and feed drapery panel.

STEP 5.

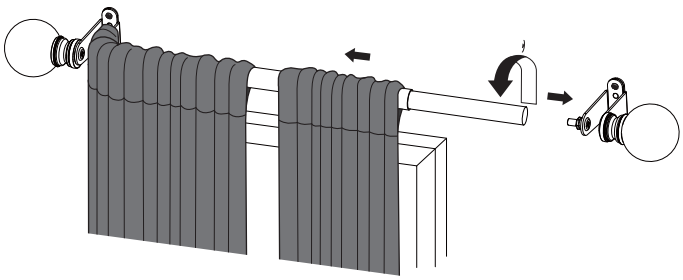

Screw rods back into wraparound bracket/finial.

STEP 6.

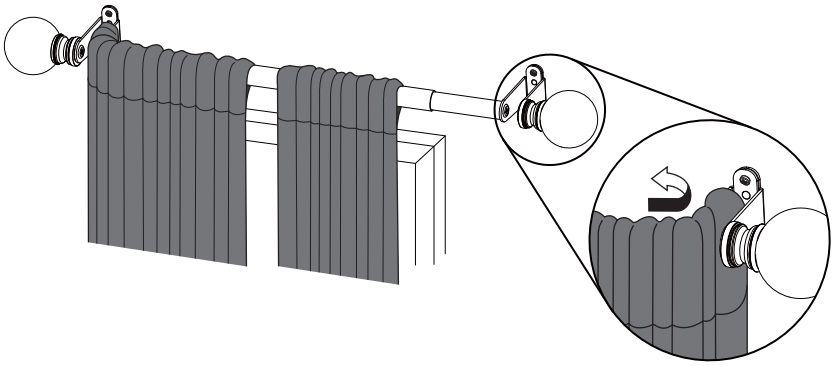

Wrap and tuck the panel around
both ends to increase privacy and opacity.

DRAPERY ROD SET INSTALLATION GUIDE

48 in to 86 in

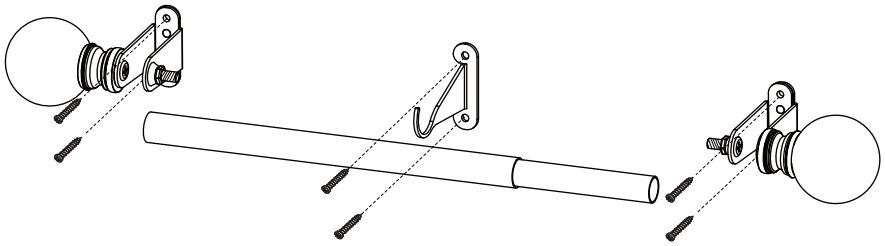

We hope you enjoy your new purchase!
If you have any questions regarding this product or the instructions
Please call Achim's Family of Home Furnishings
Customer Service at 1-800-54-ACHIM
Visit our website at www.achimonline.com
Made in Vietnam
V-30

Note:
Finial shown is for illustration purposes only.
It may not represent the style of finial purchased.
For larger width windows, two persons may be required for easier leveling.
Center bracket inculded only for longer lengths.

Tools needed:



Tape Measure | Pencil | Drill & Bit Set | Philipshead Screwdriver | Level

STEP 1.

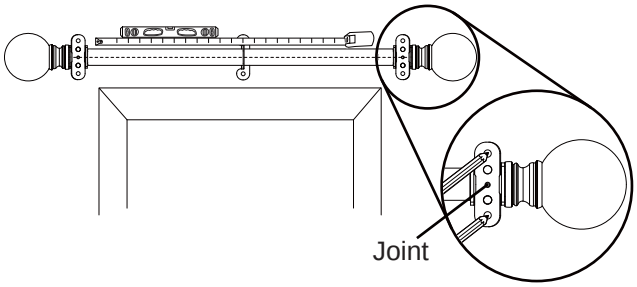

Place left and right wraparound bracket/finial against wall at desired locations and mark screw holes in reference to center bracket. Make sure to use a tape measure and level to ensure left and right are horizontal to each other.

STEP 2.

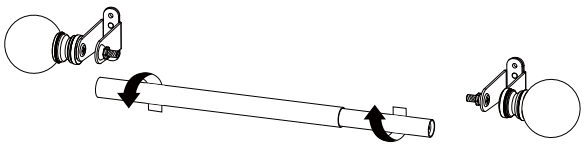

Uninstall the wraparound finial from Rod.

STEP 3.

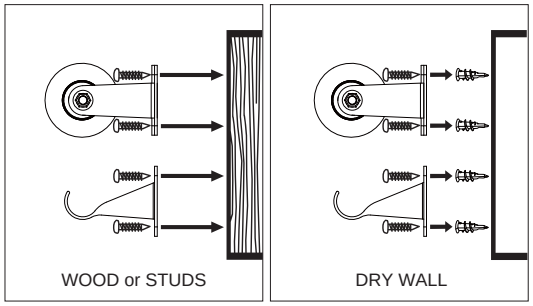

STEP A. (FOR MOUNTING TO DRYWALL OR PANELING)
Pre-drill two pilot holes for each bracket (1/4" drill bit), insert screw in anchors into wall and fasten screws into wall anchors.

STEP B. (FOR MOUNTING TO WOOD OR STUDS)
If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/8" drill bit) and install bracket on the wall with screws provided.

STEP 4.

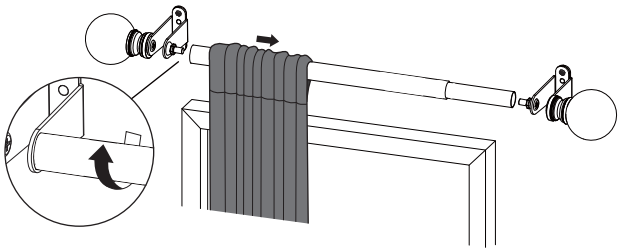

Screw in bigger rod diameter onto left or right side of wraparound bracket/finial and feed drapery panel.

STEP 5.

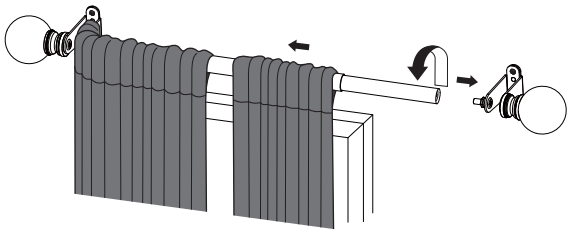

feed draprey panel on the right side and fasten rod back into right bracket.

STEP 6.

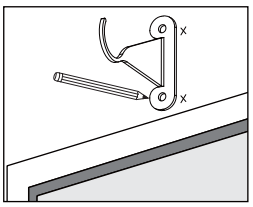

Place center bracket against wall at desired location and mark screw holes. Use mounting instructions from Step 3 to mount center bracket.

STEP 7.

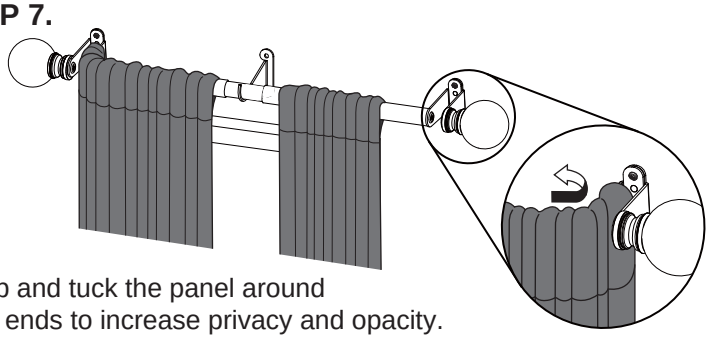

Wrap and tuck the panel around both ends to increase privacy and opacity.

DRAPERY ROD SET INSTALLATION GUIDE

66 in to 120 in

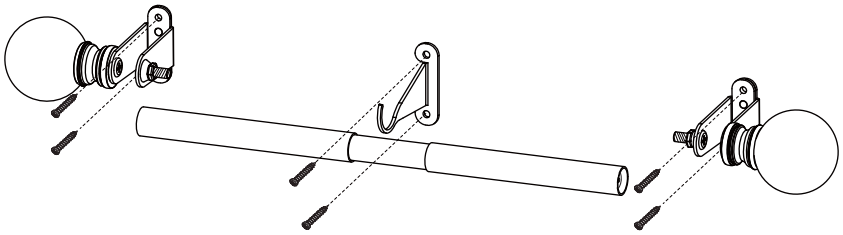

We hope you enjoy your new purchase!
If you have any questions regarding this product or the instructions
Please call Achim's Family of Home Furnishings
Customer Service at 1-800-54-ACHIM
Visit our website at www.achimonline.com
Made in Vietnam
V-30

Note:
Finial shown is for illustration purposes only.
It may not represent the style of finial purchased.
For larger width windows, two persons may be required for easier leveling.
Center bracket inculded only for longer lengths.

Tools needed:



Tape Measure | Pencil | Drill & Bit Set | Philipshead Screwdriver | Level

STEP 1.

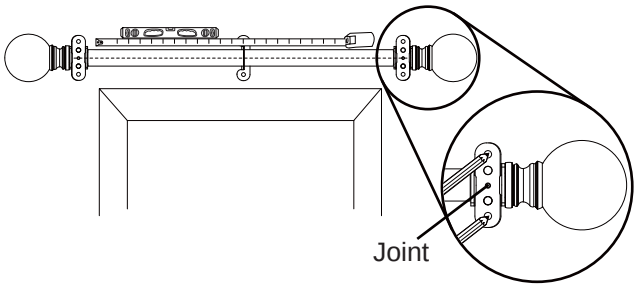

Place left and right wraparound bracket/finial against wall at desired locations and mark screw holes in reference to center bracket. Make sure to use a tape measure and level to ensure left and right are horizontal to each other.

STEP 2.

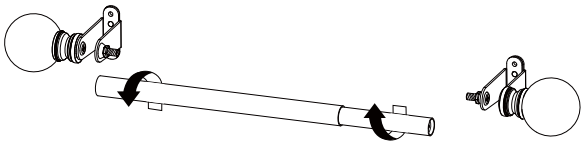

Uninstall the wraparound finial from Rod.

STEP 3.

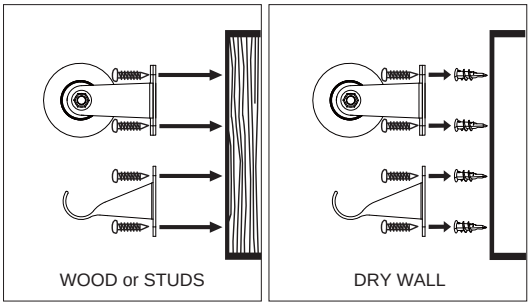

STEP A. (FOR MOUNTING TO DRYWALL OR PANELING)
Pre-drill two pilot holes for each bracket (1/4" drill bit), insert screw in anchors into wall and fasten screws into wall anchors.

STEP B. (FOR MOUNTING TO WOOD OR STUDS)
If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/8" drill bit) and install bracket on the wall with screws provided.

STEP 4.

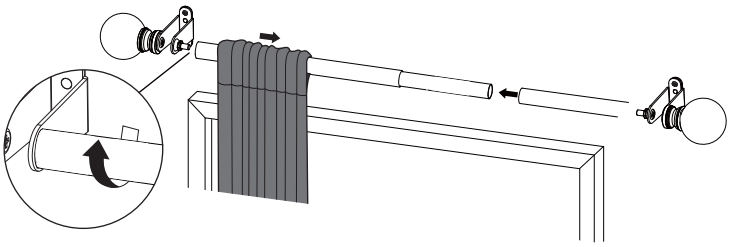

Screw in bigger rod diameter onto left or right side of wraparound bracket/finial and feed drapery panel.

STEP 5.

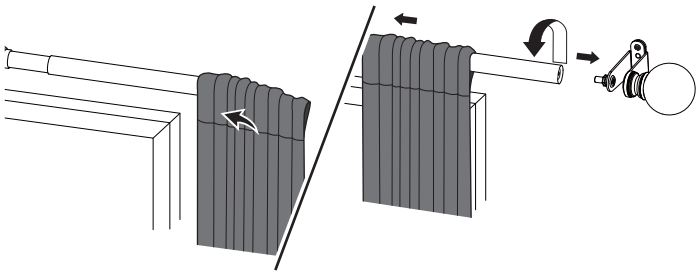

feed draprey panel on the right side and fasten rod back into right bracket.

STEP 6.

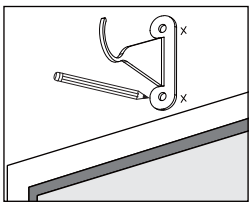

Place center bracket against wall at desired location and mark screw holes. Use mounting instructions from Step 3 to mount center bracket.

STEP 7.

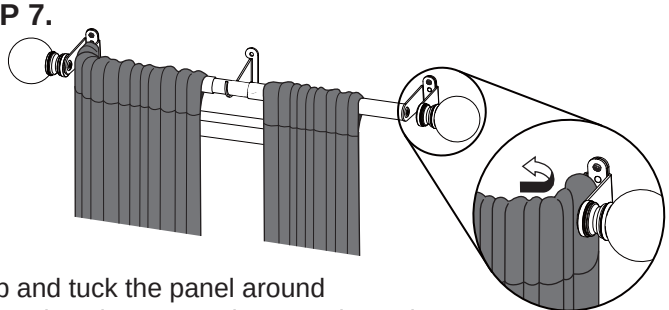

Wrap and tuck the panel around both ends to increase privacy and opacity.