ProVantage 3-Inch Thick Series Silicone Installation Kits

For use with 3-Inch Thick Series Clearly Secure/Seves Glass Block Only
(do not use with 4-Inch Thick Series or Metric 3-Inch Thick Series Glass

---

10 BLOCK KIT
Model #PVKIT310

ProVantage 3 in.Thick Series Silicone System Glass Block Installation Kit **(10 Block Kit for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)**

20 BLOCK KIT
Model #PVKIT320

ProVantage 3 in. Thick Series Silicone System Glass Block Installation Kit (**20 Block Kit for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)**

40 BLOCK KIT
Model #PVKIT340

ProVantage 3 in. Thick Series Silicone System Glass Block Installation Kit **(40 Block Kit for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)**

What's included and how to use:

ProVantage Horizontal Spacer

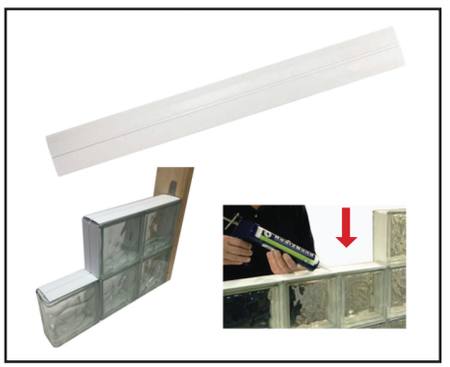

ProVantage Vertical Spacer

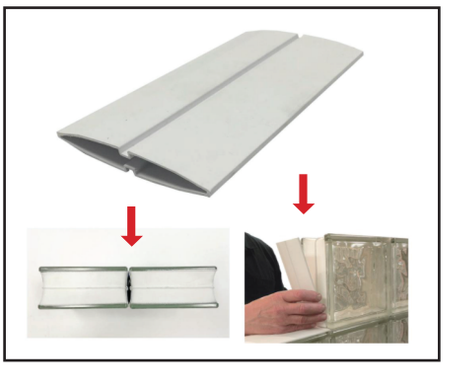

ProVantage Panel Anchor

Redi2Bond Glass Block Silicone

ProVantage Vertical Half Spacer

Vertical Half Spacer with 2 different sides
Flat side for use against vertical wall/jamb
Grooved side for use against block

Vertical *Half* Spacer vs. Vertical Spacer

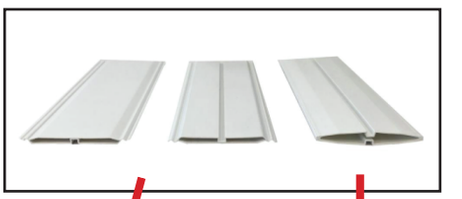

Vertical Half Spacer, with 2 different sides

Flat side for use against vertical wall/jamb

Grooved side for use against the block

Vertical Spacer, same on both sides

For use between each individual block