8077-1

PARTS

Identify parts before assembling.

Ax2
Side Frame

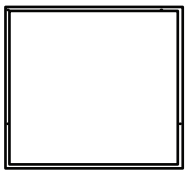

Bx2
Flat Panel

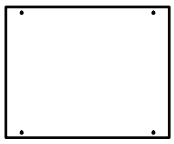

Cx8
Screw

Dx8
Cam Lock

Allen Wrench

ASSEMBLY

1 Insert cam locks (D) into underside of shelves (B).

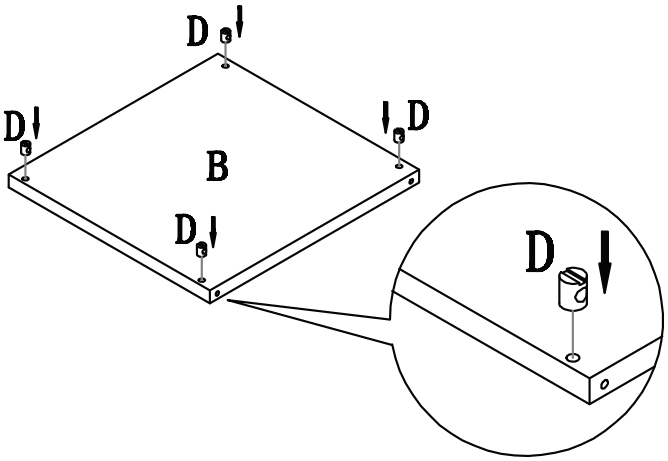

2 Attach shelves (B) to one side frame (A).

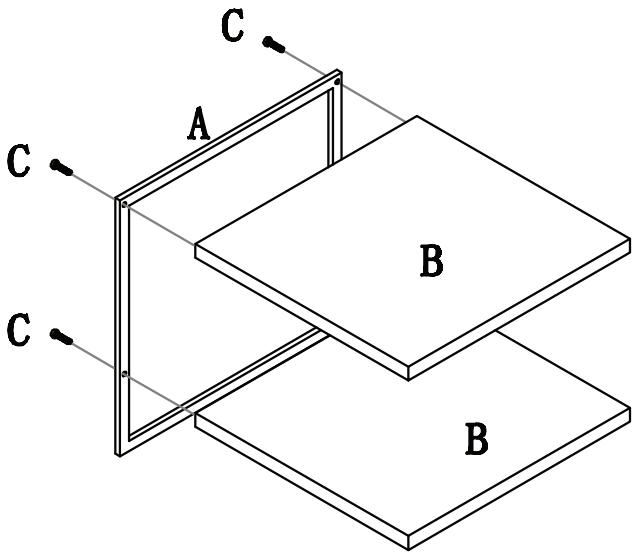

3 Attach remaining side frame (A) to assembly.

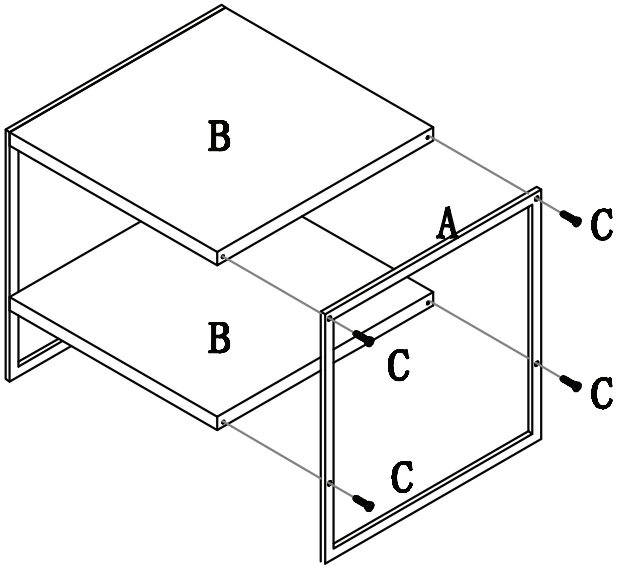

4 Turn cam locks to lock in place.

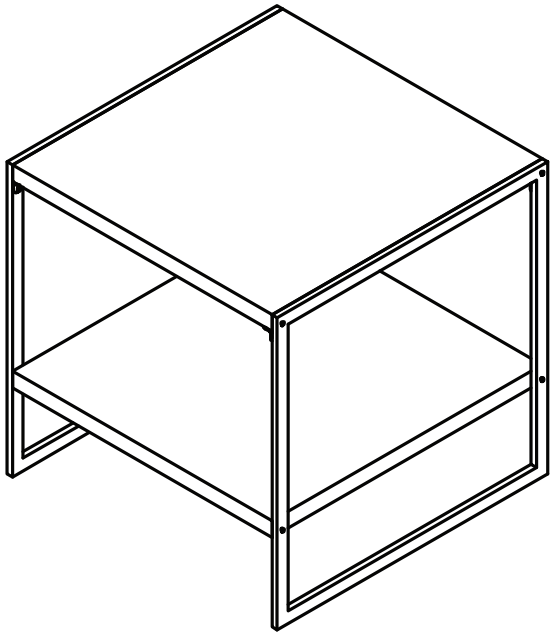

Customer Service
1-800-922-5524 • 1-314-428-5657

©2016 HOUSEHOLD ESSENTIALS, LLC
Hazelwood, MO 63042
1-800-922-5524
1-314-428-5657
www.householdessential.com

Made in China | Hecho en China | Fabriqué en Chine

3/2016