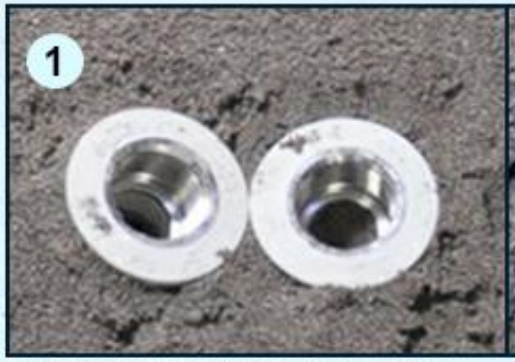

1..Pre-embedded hot and cold water inlet joints at an angle of 15 degrees

2..Wrap hot and cold water inlet with the teflon tape

3.Mark location of the hole with the brass base. And then drill the holes

4.Connect the part of the tube to the brass bas

5.Pass the water hose through tube

6.Set of the circle base plate

7.Connect the main body of the faucet,and tightenthe water hose into the tube

8.Inset the anchors into pre-drilled holes

9.Connect the faucet body to the water inlet

10.Put the faucet body into the anchor screw and tighten the screws

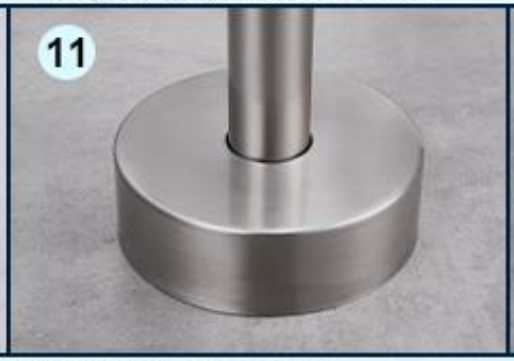

11.Set up the base plate

12.The installation is complete