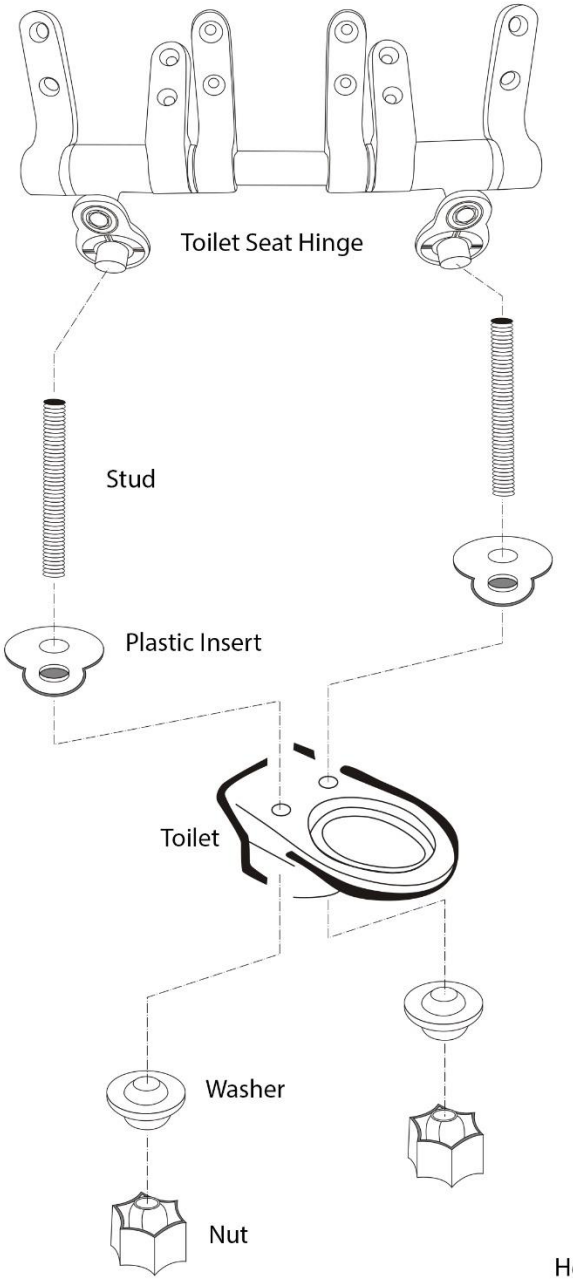

INSTALLATION

1. Install the Stud into the hinge (both sides).
2. Put the Plastic Insert between hinge and toilet top (both sides).
3. Put the Studs into the toilet left and right holes.
4. Reach beneath and put the Washer in (large hole facing down)
5. Put the Nut in (adjustable threads pointing up) and tighten until it stops (use plier to tighten more if needed)
6. After complete one side, you put another Washer and Nut in and tighten up like before.

Here is a video instruction:
https://www.youtube.com/watch?v=YlUVXMUGXrg