GIBRALTAR INDUSTRIES

INSTALLATION GUIDELINES

GALVANIZED RIDGE ROLL

#15636

Ridge Roll Ridge flashing for 2.5 inch corrugated metal roofing hips & ridges

Material: Ridge Roll ridge caps are made from galvanized coated steel for added corrosion protection. Manufactured to last the life of the structure.

Installation: Lay a strip of butyl tape near the top of the corrugated panel. Place the ridge roll cap on top of butyl tape and fastened by #9 x 1 ½" metal roofing screws in an opposing manor directly across from each other into the high rib of the panel approx. 6" O.C.

10' lengths. 10 per bundle.

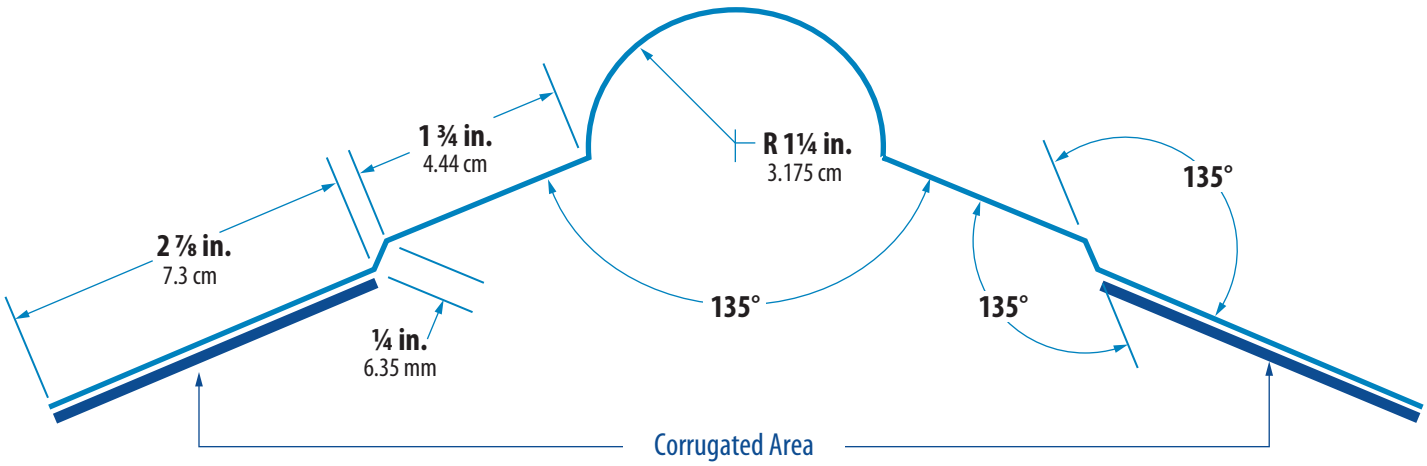

CAUTION!

Working above grade is inherently dangerous, be sure that proper fall protection measures are in place.
When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. Refer to Corrugated Roofing installation guide for panel and flashing install details. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.