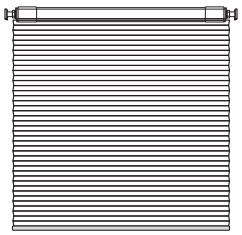


NO-DRILL CORDLESS CELLULAR SHADE


INSTALLATION INSTRUCTIONS

	Cellular shades x1
	Handle x1
	Adjustment Wrench x1


BEFORE YOU BEGIN

Verify that all parts are included and undamaged. Do not install or operate the shade if any part is missing or damaged. For replacement parts or assistance, please contact AOSKY Customer Service.


QUICK INSTALLATION

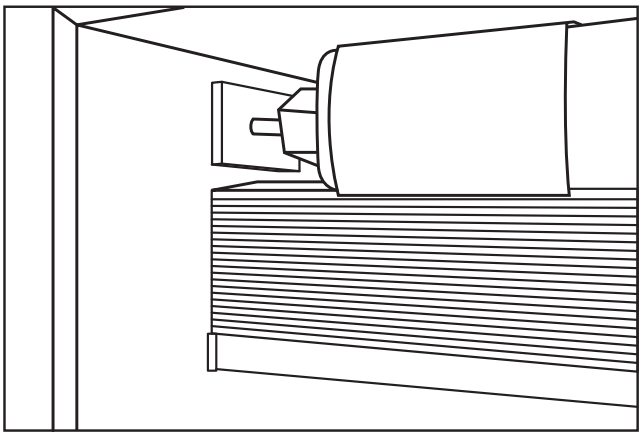


Step 1: Compress both tension mechanisms, then position the shade between the sides of the window frame.

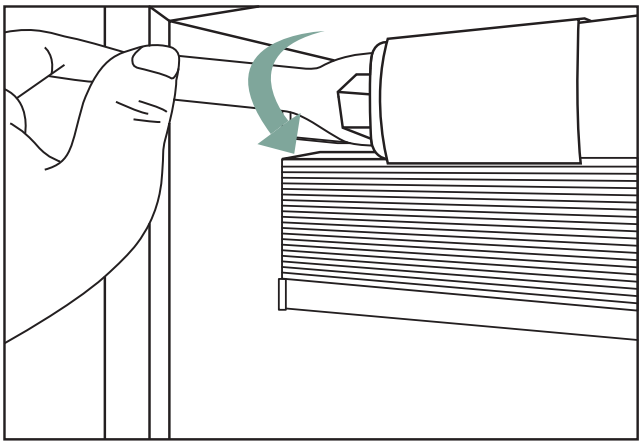

Step 2: Using the provided adjustment wrench, turn each tension mechanism clockwise until the shade is firmly secured. Tighten both sides evenly. Do not overtighten.

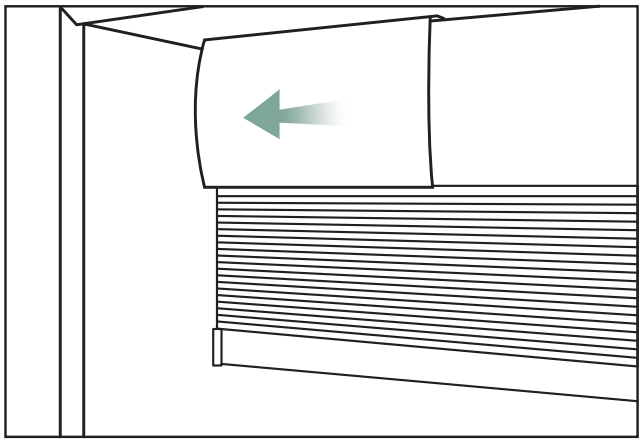

Step 3: Slide the end covers over the tension mechanisms until they are fully seated.

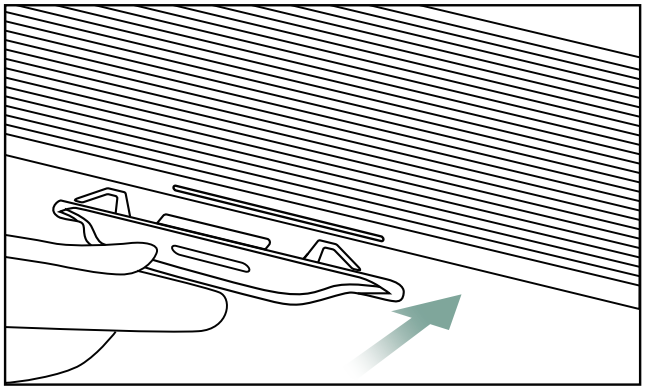

Step 4: Center the handle on the bottom rail, then press it firmly into place.

IMPORTANT INSTALLATION NOTES

1.Designed for inside mount only.

2.Before installation, clean the top of the window frame with a dry cloth or alcohol to remove dust, oil, and moisture.

3.Lightly mark the installation position with a pencil to ensure the shade is centered and level.

4.After installation, gently raise and lower the shade to confirm smooth operation and that all fasteners are secure.


NEED HELP?

If you have questions about installation, operation, or replacement parts, please contact AOSKY Customer Service.

Email **support@aosky.com**

HOW TO USE


Free-stop lift technology enables fast and accurate control, allowing the Cellular shades to stop in any position.

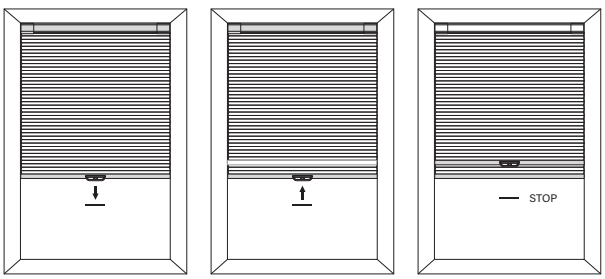

PLEASE RECYCLE

Guarantee applies to workmanship and materials only, product phofos are for illustrative purposes only.

OUR ADVANTAGE

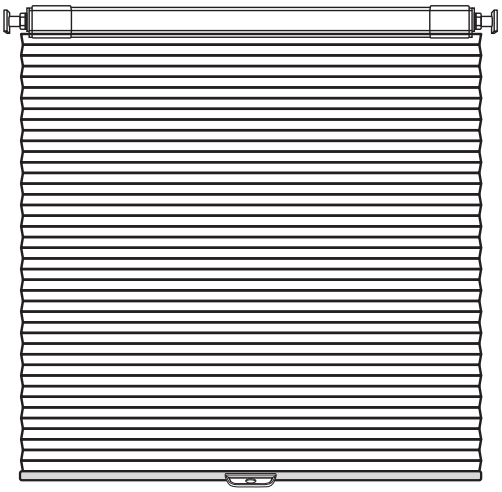

Upgraded Aluminum Valance and Bottom Rod

Exclusive Three-Layer Blackout Fabric



Free-Stop Cordless System

Frosted Handles Have a Remarkable Texture

- If you are satisfied with our products, pls don't hesitate to recommend our store to your friends!

- If you have any questions,pls feel free to contact us by message or e-mail for after-sale service.