ProGrade by Frost King®

INSTRUCTIONS FOR USE
INSTRUCCIONES DE USO

For installation of the following item: VA38B

DOOR SET
Vinyl Clad Foam

Installation:

1. Measure door width and height.
2. Shorten strips if needed.
3. Across top, press the short strip on door stop so the kerf presses firmly against the door when closed.
4. On sides, press long strips on door stop so the kerf presses firmly against the door when closed.
5. Mark hole locations, then drill and screw into place.
6. Make sure top strip fits snugly against side strips.
7. Holes are slotted to permit adjustment.

BURLETE
Aluminio y kerf con espuma cubierta de vinilo

Instalación:

1. Mida el ancho de la puerta.
2. Corte las tiras si es necesario.
3. A lo largo del tope, coloque la tira corta en la moldura de manera que el kerf quede firmemente en contacto con la puerta cuando esté cerrada.
4. En los lados, coloque las tiras largas en la moldura de manera que el kerf quede firmemente en contacto con la puerta cuando esté cerrada.
5. Marque los agujeros, taladre y atornille en su lugar.
6. Asegúrese que la tira corta quede bien ajustada entre las tiras largas.
7. Los agujeros tienen rendijas para permitir ajuste.
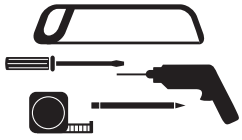
TOOLS NEEDED:
HERRAMIENTAS NECESARIAS: