ALPINE INDUSTRIES HAND DRYER
WALL GUARD

ITEM #400-WALLG

WALL GUARD



ITEM #400-WALLG

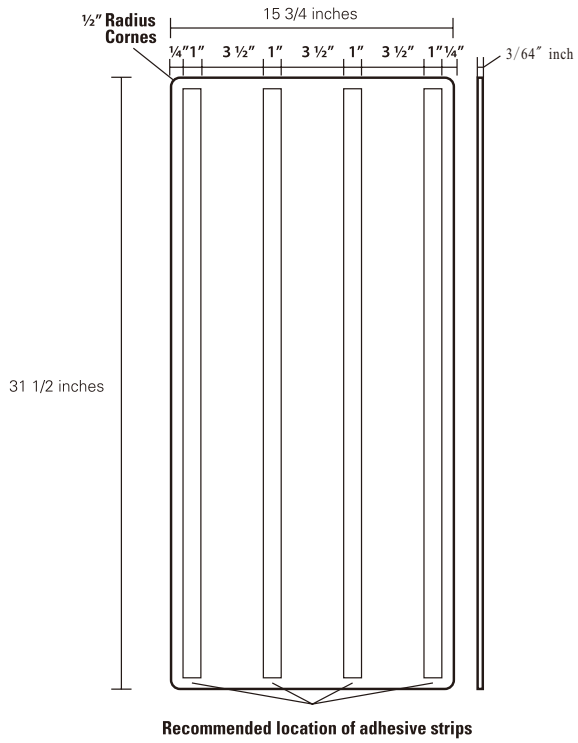

Recommended location of adhesive strips

SPECIFICATIONS

Size: 31 ¾" x 15 ¾" x 3/64"

Material: Brushed Stainless Steel

INSTALLATION:

Mounted with 4 strips of construction grade 3M adhesive tape (included)

INSTALLATION INSTRUCTIONS

1. Clean the wall surface with IS PR PYL ALC H L pri r t installati n and make sure that the surface is dry and free f any dust and debris.

2. Center the Wall Guard underneath the hand dryer s that the t p f the Wall Guard is 1" bel w the b tt m f the dryer.

3. Carefully measure and mark the wall surface f r placement f the Wall Guard with a pencil r temp rary marker.

4. F ur strips f d uble-sided adhesive are included f r each panel. Apply the tape strips t textured side f black r white panel and sm th side f brushed stainless panel as f ll ws:

- Lay ut tape strips acc rding t illustrati n at left.
- Rem ve ne strip and apply t either right r left side t start.
- Press each tape strip firmly nt the plastic as it is applied.
- C ntinue until all 4 strips are applied.

Note: Alignment is critical. Once placed on the wall, the Wall Guard cannot be re-positioned.

5. Align the t p edge f the Wall Guard with the markings n the wall and firmly press int place against the entire surface f the Wall Guard.

6. pti nal: After guard is applied t the wall y u may add silic ne sealant ar und the edge.

CLEANING INSTRUCTIONS

Clean the installed Wall Guard with mild s apy water and a s ft cl th. Mild dish s ap mixed with water in a spray b ttle w rks best.

DO NOT USE any cleaner that c ntains any amm nia r abrasive cleansers t clean the surface.