Commercial Electric™


CLIP-LOCK™ INSTALL SYSTEM

NO TOOLS REQUIRED

QUICK START GUIDE


Step 1: Lift & Install


Place bath fan housing in ceiling and make any necessary wiring & duct connections.

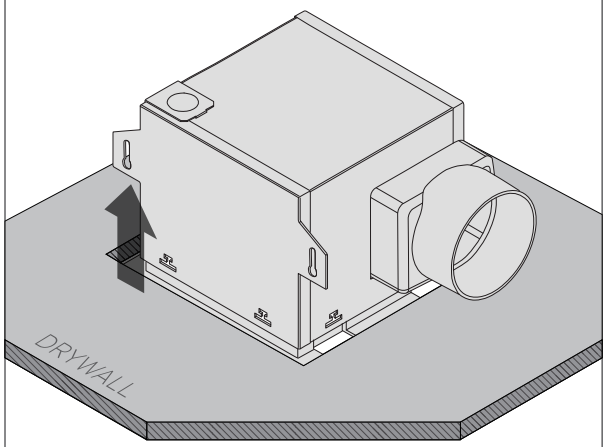

Step 2: Insert Holding Clips

Insert holding clips (Clip A) into the pre-stamped holes from inside the fan housing & set the fan in place above the drywall.

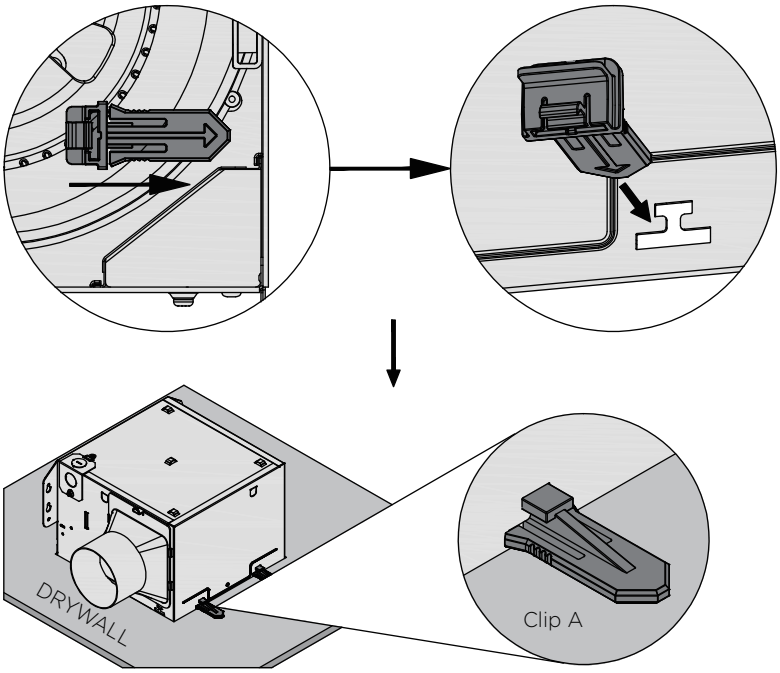

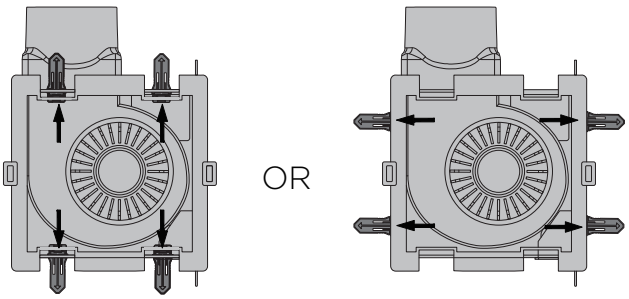


Primary configuration

Secondary configuration

Step 3: Attach & Secure Clips

Attach securing clips (Clip B) into holding clips (Clip A) to secure the fan against the drywall.

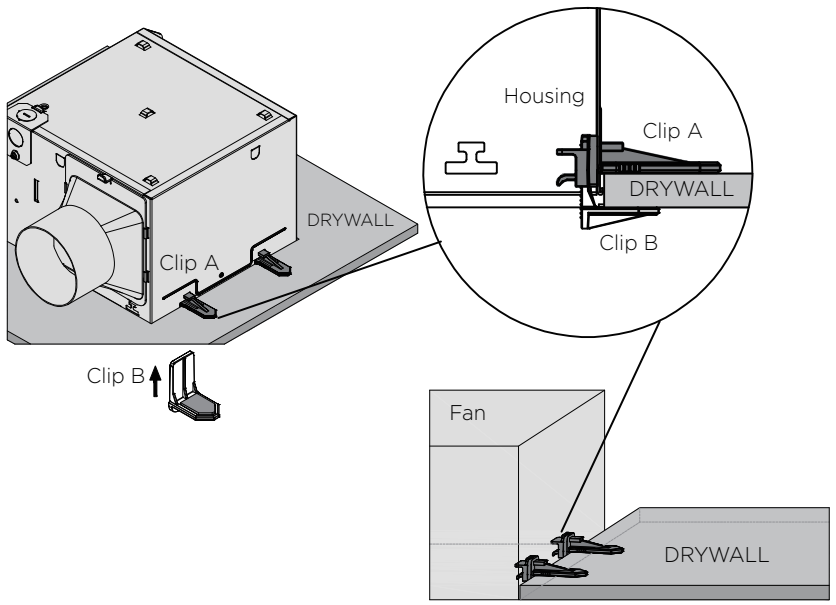

Commercial Electric™


CLIP-LOCK™ SISTEMA DE INSTALACIÓN

NO SE REQUIEREN HERRAMIENTAS

GUÍA RÁPIDA


Paso 1: Levantar e instalar


Coloque la carcasa del extractor en el techo y realice el cableado y la instalación de tubos necesaria.

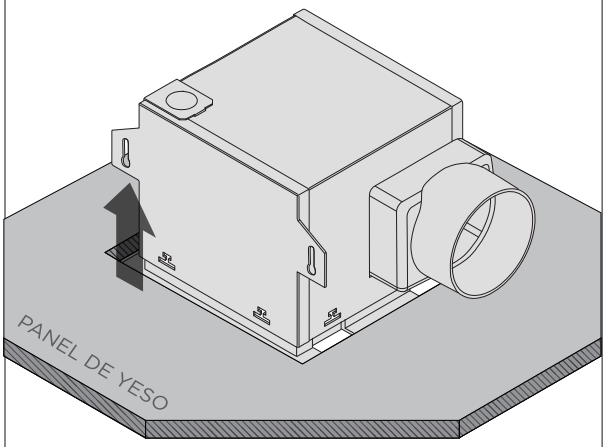

Paso 2: Insertar clips de sujeción

Inserte los clips de sujeción (Clip A) en los orificios pree-stampados desde el interior de la carcasa del ventilador y coloque el ventilador en su lugar sobre el panel de yeso.

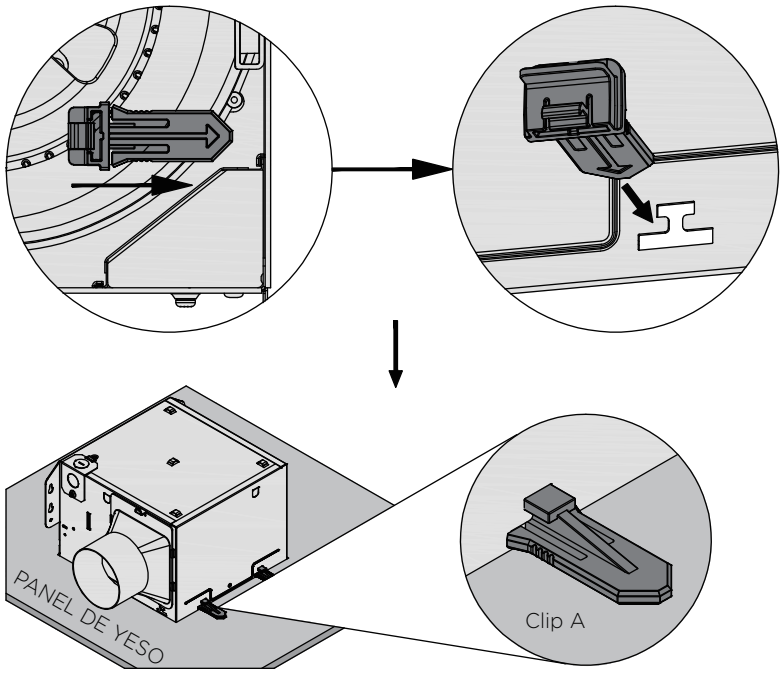

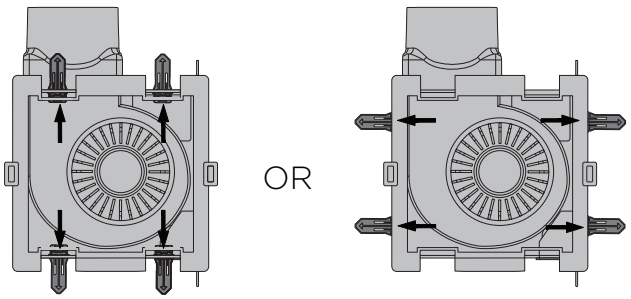

Configuración primaria

Configuración secundaria

Paso 3: Colocar y asegurar los clips

Coloque los clips de seguridad (Clip B) en los clips de sujeción (Clip A) para asegurar el extractor contra el panel de yeso.

