


LA CROSSE[®] TECHNOLOGY

Digital Thermometer

Hangs, Stands, or Attaches with Magnet

Model 314-152 | Instruction Manual

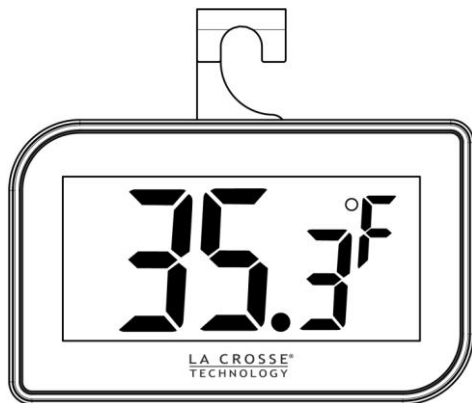

Features

- Temperature display in °F/ °C
- ON/OFF switch
- Mount with hook, magnet or just place on table.

Setup

- Use a coin to open the battery cover with a counter clockwise turn. Remove the protective plastic strip so the battery can connect. Or, insert 1 x LR1130, 1.5V button cell battery into the battery compartment.
- Replace battery cover.
- The display will show dashes for 3 seconds then the temperature will appear.



Function Buttons

°C/°F: Toggle between °C and °F temperature display



ON/OFF: Turn thermometer on or off.

Placement

- Use the hook on the back of the thermometer to hang from a refrigerator shelf.
- Use the magnet on back to attach to your refrigerator door.
- Fold the hook down and stand on a table or desk.



Battery Change

- Open the battery cover with a coin and insert a fresh LR1130, 1.5V button cell battery into the battery compartment. Positive (+) should face up.
- Replace battery cover.

Please participate in the preservation of the environment. Return used batteries to an authorized depot.



Specifications

Measuring Range: -4°F to 122°F (-20°C to 50°C)
Accuracy: +/- 2°F or 1°C
Resolution: 0.1
Checking Interval: about every 15 seconds
Battery: LR1130, 1.5V
Battery life: approximately 12 months
Dimensions 2.598"W x 1.574"H x 0.59"D
(66W x 40H x 15mm D)

Warranty Information

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse

Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology, Ltd
2817 Losey Blvd. S.
La Crosse, WI 54601



Contact Support: 1-608-782-1610
Product Registration:
www.lacrossetechnology.com/support/register



Online at:
www.lacrossetechnology.com/314-152