

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

HAND DRYER

MODEL:K2017

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

HAND DRYER

MODEL:K2017

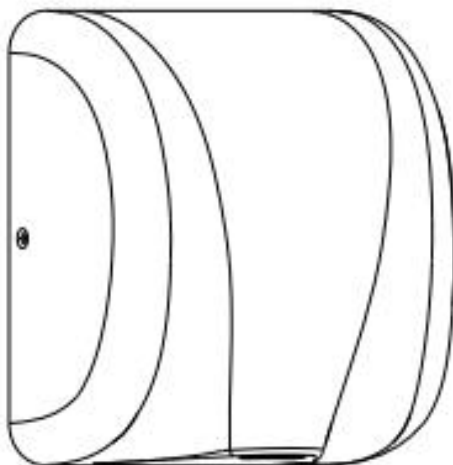




NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p style="text-align: center;">FCC statement:</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>Alternating current</p>

NOTE BEFORE INSTALLATION

⚠ Warning

1.  Warning:Do not use this appliance near water. Do not use this appliance near bathtubs ,showers,basins or other vessels containing water.
- 2.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance. This appliance is intended to be used in household only.
- 4,You must commission professional electrician to install power lines, or else it has electric shock hazard.
- 5.You must cut off power before operation and ensure the protection no power.
- 6.Requests to install leakage circuit breakers or protection against fire

hazards.





7. Do not decompose, repair or any alteration of this machine without authorization, otherwise there is a risk of electric shock, fire and other accidents.

 **Attention**

1. To ensure that no other things in the outlet around 400mm. Meanwhile, do not install it above the stainless steel or artificial marble such shining surface location, otherwise prone to misoperation.
2. The body should be firmly fixed to the smooth wall to avoid injuries caused by the decline of product or product damage.
3. Do not install the products in such place with corrosive or flammable gases or objects, it may cause fire or product failure and malfunction
4. Do not install the products in such environment with multi dust or in high temperature, it may cause product damage.

SAVE THESE INSTRUCTIONS

PACKING LIST

NO	PICTURE	NAME	QTY	NO	PICTURE	NAME	QTY
A		Main part	1	C		Hex Wrench	1
B		Install screw	4	D		Expansion pipe	4


TECHNICAL PARAMETERS

Rated Voltage	AC120V
Rated Frequency	60Hz
Rated Power	1300W
Ambient Temperature	0-40°C
Wind Speed	85m/s
Overall size	325*295*180mm


FEATURES


1. It is equipped with automatic infrared ray induction system, very easy to use, reducing waste, and no touching clean hands which effectively to avoiding pathogen cross infection and re-contamination.
2. It has outstanding performance with most advantage chip control technology and infrared sensor.
3. It has unified high speed motor with RPM of 23000, driers the hands with 7-12 seconds.
4. This series product is all with over current protection, which effectively eliminates accidents.
5. It only needs expansion pipe and screw hook when installation, then hang the machine, cut off the power when maintenance. It is suitable for all departments in hospitals, school, food and pharmaceutical manufacturers, airports, office buildings, hotels, government agencies and research institutions and other places.

COMPONENTS NAME

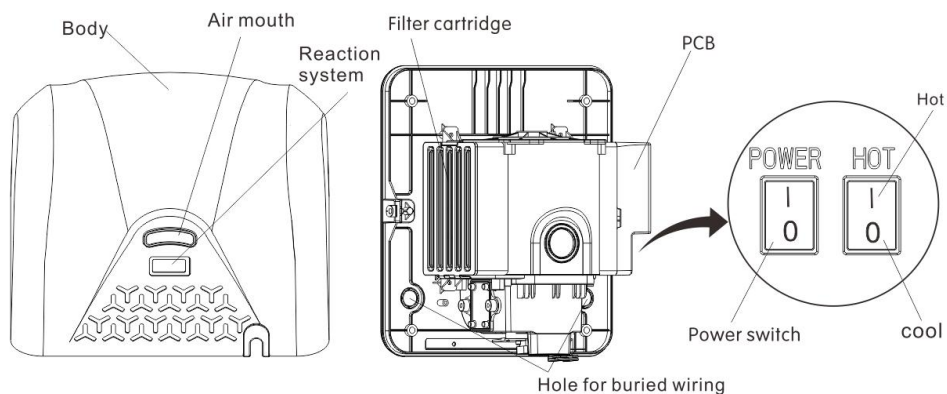

METHOD OF INSTALLATION

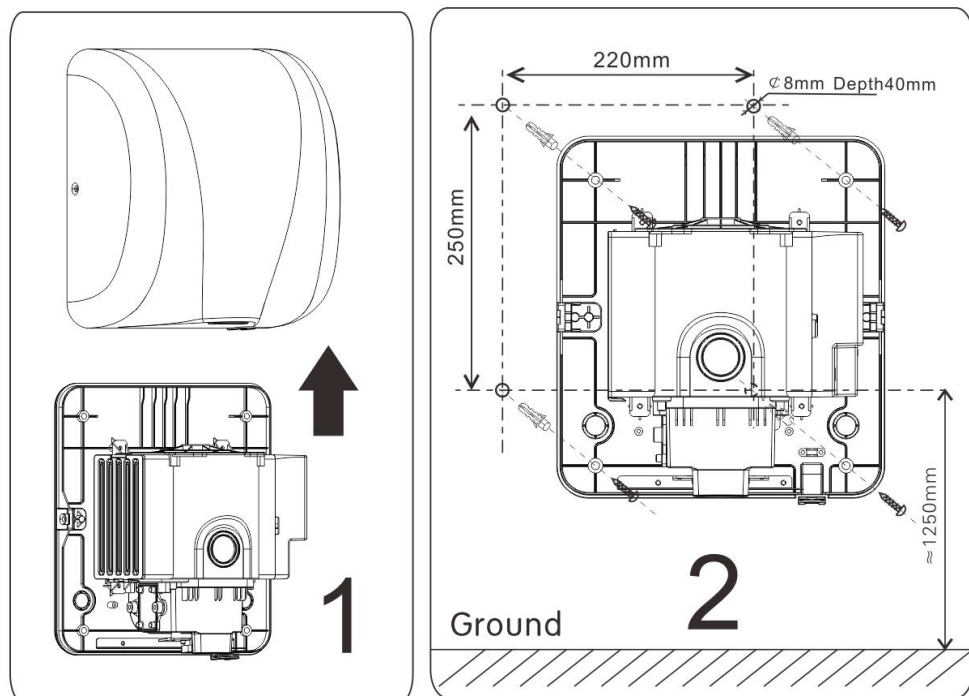


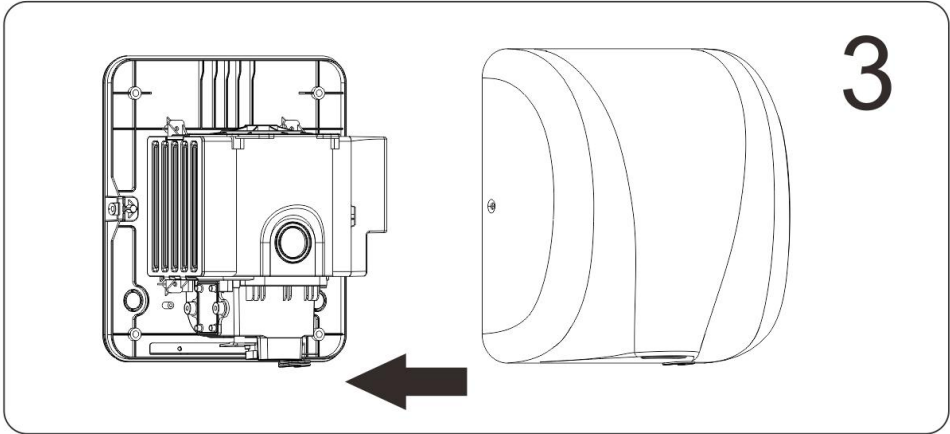

USAGE


1

Back up, fingers straight out into the outlet, slowly move back and forth.

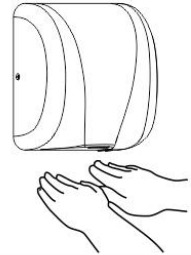


2

And then turned the hands palm upward and slowly move back and forth.

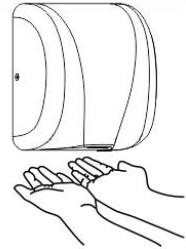

3

Finally rub the hands.

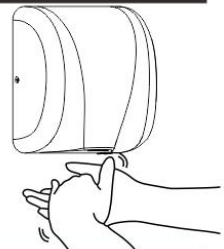


CLEANING OF FILTER CARTRIDGE

Attention

Attention: If the wind becomes weaker, please clean the filter screen in time. Generally, it needs to be cleaned one or two times. Water is not allowed.


1

Hold the bulge place which in the middle of the filter screen, then pull and get it out.

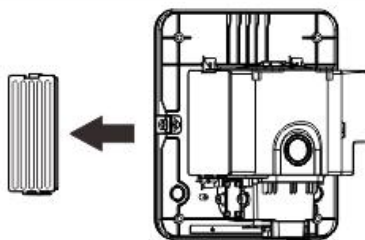

2

Get the filter screen from the filter cartridge;

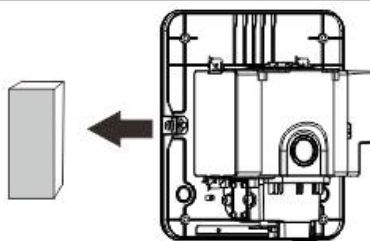


3

Clean the dust on the filter screen, do not wash. If there is too much dust, please replace it;

4

Put the filter screen at the right position in the filter cartridge, and inset the filter cartridge into the body.

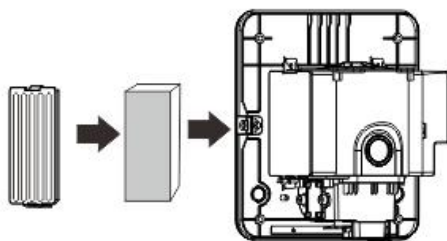

MAINTENANCE

1. Please cut off the power and clean the shell with natural detergent when it is dirty. The acid and alkaline bathroom detergent and BEN, lacquer thinner, abrasive etc are forbidden. Besides, do not use nylon brush such friction tool clean it avoiding be scratched.
2. When cleaning the shell prevent the water droplets into the machine, so as to avoid electric shock or short circuit.
3. It's better to cut off the power when off duty, to extend the service life;
4. If the power software cord is damaged, it should be replaced with specialized software or buy components from factories or dedicated maintenance.
5. If the machine breaks down, cut off the power quickly and stop work., please commission the professional to repair it.
6. If long time no use of this machine, please cut off the power, and store it in clean and dry indoors with sealed after cleaning.

TERMS OF GUARANTEE

1. The product warranty period is one year.
2. The service within warranty period for products, which came into effect from the date of buying the machine.
3. Within one year after purchasing, consumers find the machine failure

caused by the product itself reason, then they can go to the purchasing place to maintenance and replace the machine for free with original invoices and completed and the quality assurance card stamped by dealers.

4. The following are not in the scope of free maintenance:

- ◆ Improper use and the fault caused by demolition, alteration and repair by technical persons without our company authorization.
- ◆ Fires, earthquakes, thunder and other natural disasters cause faults, and abnormal voltage causes the faults.
- ◆ The faults caused by non matching power.
The faults caused by long time operation in bad working condition.
- ◆ Not quality assurance card or the cards is flit not explicitly or correctly.

5. Over warranty period or it is not free maintained products, while our company remains committed to serving.

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support