

LA CROSSE®
TECHNOLOGY

Digital Thermometer





SET UP GUIDE

Models: 314-152-B, 314-152-BL, 314-152-R, 314-152-W

Power Up

1. Use a flat tipped screwdriver to open the battery cover with a counterclockwise turn. Remove the protective spacer so the battery can connect.
2. Replace battery cover and tighten with a screwdriver.
3. The display will show dashes for a few seconds before readings appear. Place the Thermometer in your desired location.

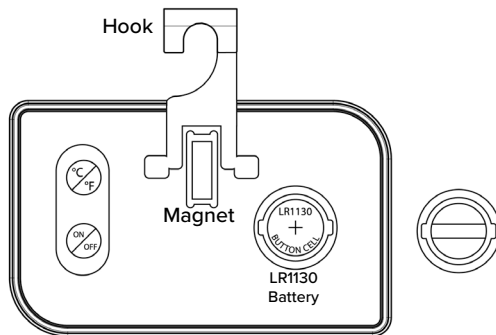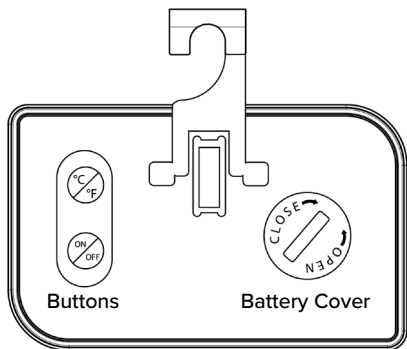

Buttons

°C/°F: Press and release to select Fahrenheit or Celsius Temperature reading.

ON/OFF: Press and release to turn the Thermometer Off or On.



Placement

Hook: Use the hook on the back of the thermometer to hang from a refrigerator shelf.

Magnet: Use the magnet on the back of the thermometer to attach to your refrigerator door or other metal surface.

Table or Desk: Fold the hook down and place it on a desk, counter, or table.

Specifications

Measuring Range: -4°F to 158°F (-20°C to 70°C)

Update Interval: 15 seconds

Power: LR1130, 1.5V Coin Cell Battery

Battery Life: 12+ Months

Dimensions: 2.598"W x 1.574"H x 0.59"D (66W x 40H x 15mm D)

Coin Cell Battery



WARNING: CHOKING HAZARD—Small Parts

Not for children under 3 yrs.

Replace the Coin Cell Battery

1. Use a flat tipped screwdriver to turn the Battery Cover to the left to unlock and remove it.
2. Pull back the metal pin and gently remove the battery.
3. Insert a fresh 105V, LR1130 battery with the + side up and snap it into place.
4. Replace the battery cover and secure it using the screwdriver by turning it right.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any body part.





INGESTION HAZARD:

This product contains a button cell or coin battery.

WARNING:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Coin cell battery type: LR1130 (1.5Vdc x 1).
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (158°F (70°C)) or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



WARNING: KEEP OUT OF REACH OF CHILDREN



1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
2. If you suspect your child has swallowed or inserted a coin cell battery, immediately seek urgent medical assistance. Call a local poison control center for treatment information.
3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
4. Do not use if compartment is not secure.
5. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
6. Flat batteries can still be dangerous. Even used batteries may cause severe injury or death.
7. Tell others about the risk associated with coin cell batteries and how to keep their children safe.

Warranty

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/pages/patents

La Crosse Technology, Ltd • 2830 S. 26th Street • La Crosse, WI 54601

California Residents



WARNING This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

We Are Here To Help!

If you need additional assistance, contact our friendly customer support team:

Self-Help: www.lacrossetechnology.com/products/314-152b

Our representatives are available M-F, 8am-6pm CT

Email: bit.ly/contact_techsupport

Phone: 1.608.782.1610



[Scan Here](#)

Stay In Touch!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).

