

## PARTS LIST:

One: 10" X 10" Shield – ABS Plastic

One: 2" X 7" Brace – ABS Plastic

Two: 13/16" Fasteners – Black Nylon Plastic

One: 1/4X20 Thumb Screw – Zinc Metal

One: 1/4X20 U-Clip – Sheet Metal

## PRE-ASSEMBLY:

Push U-Clip onto Brace & align w/ small hole on side

Partially Screw Thumb Screw into U-Clip & hole (see close up)

Push both Fasteners into Brace.

Pre-fold the Brace to get a feel for how it wraps around the J-Arm.


## INSTALLATION:

Pre-fold the Brace and get a feel for how it can wrap around the J-Arm.

Hold Shield in position against J-Arm and align Brace assembly for best fit.

Position high as possible (see video). Snap together.

Tighten the Thumb Screw to secure in place.

Optional – Loop emergency rope behind Thumb Screw to further secure it out of reach. This is not required as the rope would be very difficult to reach with the Shield in place. \*UL Code 325 requires emergency rope handle to be no further than 6 feet distance from the floor of the garage to the red handle.



**PUSH ON THE U-CLIP**



**FOLDED BRACE**



**COMPLETED ASSEMBLY**

**U-CLIP**




**THUMB SCREW**



**FASTENERS**



**BRACE**

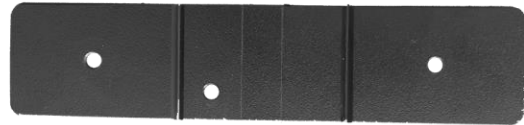

**SHIELD**

