

LA CROSSE®
TECHNOLOGY

Digital Thermometer




Setup Guide

Model: 314-1410



Power Up

1. Insert 2-AAA batteries into the Probe Thermometer.
2. Extend the attached Probe Wire and place in desired location to measure temperature.

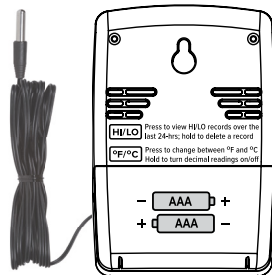

Fahrenheit/Celsius Display

Press and release the °F/°C button to select Fahrenheit or Celsius display.

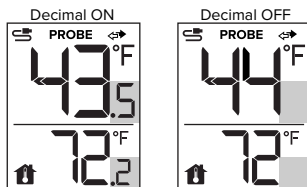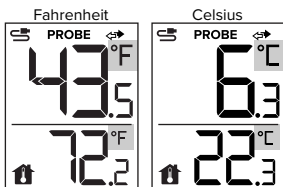

Temperature Decimals ON or OFF

Hold the °F/°C button to select show or hide the Temperature Decimals.

Temperature Trend Arrows

The Temperature Trend Arrows updates every 15 minutes. The arrows will reflect a change in temperature (2°F/1°C) over the past three hours.



Temperature is rising



Temperature is steady



Temperature is falling


High and Low Temperature Records

View Records

Press and release the **HI/LO** button to view High then Low Temperatures from the Thermometer and the Probe Wire. This is a rolling 24-Hour total.

Reset Records

Hold the HI/LO button to reset all high and low records to current temperatures.

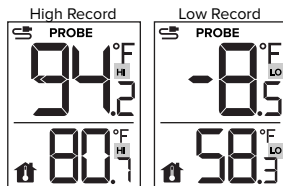

Specifications

Thermometer (314-1410)

- **Indoor Temperature Range:**
32°F to 122°F (0°C to 50°C)
- **Probe Temperature Range:**
-40°F to 140°F (-40°C to 60°C)
- **Power:** 2-AAA, IEC, LR3 batteries (not included)
- **Battery Life:** 12+ months
- **Thermometer Dimensions:**
2.56 in L x 1.11 in W x 3.76 in H
(6.49 cm L x 2.81 cm W x 9.55 cm H)
- **Probe Wire Dimensions:**
72 in L x 0.09 in W
(183 cm L x 0.23 cm W)



Stay in Touch

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).



Warranty & Patents

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty
Patents: www.lacrossetechnology.com/pages/patents

 **WARNING:** This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self Help: bit.ly/314-1410_support

Online: bit.ly/contact_techsupport

Phone: 1.608.782.1610

Our knowledgeable customer support team is available:
Mon-Fri 8am-6pm CST

SCAN HERE
Additional Info
and Support ✓



LA CROSSE®
TECHNOLOGY

DOUBLE YOUR WARRANTY

Scan the QR Code or visit: bit.ly/314-1410_register
to register your product and double the standard
1-year warranty for free by opting to receive
occasional product emails.

SCAN HERE

