

CRACK•RITE™

# CRACK•STIX®

## INSTRUCTIONS: HOW TO APPLY CRACK•STIX®

### Hot Applied Concrete Joint & Crack Sealant

**Model #2051:** 125ft (38.1M)  
of 1/2" (12.7mm) diameter  
**Model #2061:** 225ft (68.5M)  
of 1/4" (6.3mm) diameter



Available in 1/4"  
and 1/2" diameter

### GETTING READY...

CRACK•STIX® "hot applied"

Crack & Joint Sealant is simple to use and yields the same professional results that you would expect from contractors at a fraction of the cost. You can permanently repair concrete cracks & joints in a few easy steps using only three common tools.

**NOTE:** Cracks & joints must be dry.

CRACK•STIX® Model #2051: 125ft (38.1M) of 1/2" (12.7mm) diameter is designed for repairs 1/2" - 1" wide.

Model #2061: 225ft (68.5M) of 1/4" (6.3mm) diameter is designed for repairs 1/4" to 1/2" wide.

### TOOLS...

You will only need the following tools: a small whisk or house broom, a phillips or regular head screwdriver & a small, propane torch (self-igniting recommended, but not required). You may want to purchase a torch extender as well.

### BEFORE YOU START...

Read & follow instructions on the package and the tool / torch manufacturer's instructions, guidelines and warnings. We recommend safety glasses, gloves, a long sleeve shirt, long pants, proper footwear & protective head wear be used when applying CRACK•STIX® Crack & Joint Sealant.




### PREPARING THE SURFACE...

It is important that the surface (crack & joints) be prepared properly prior to applying the CRACK•STIX®. Using a screwdriver, clean & remove all plants/grass/roots, sand, dirt & other debris from inside the cracks & joints (dig down, scratch loose & sweep it out, using a back & forth motion along the length of the area to be repaired). It is best to clean only two or three feet at a time. Make sure the crack/joints & concrete surface are swept CLEAN & are totally DRY! **Important:** Do not apply in wet cracks or where frost, snow or ice is present. Do not apply if the ground temperature is below 40 degrees. The "hot applied" CRACK•STIX® sealant will not adhere/bond/seal to dirty or wet concrete.

### FILLING & SEALING...

**IMPORTANT:** Before starting, if concrete is cold we recommend pre-heating the concrete before applying CRACK•STIX®. The sealant is designed to be applied 1/16 - 1/8" below the concrete surface. **IN IT, NOT ON IT.** Cut the appropriate length of CRACK•STIX® for the crack/joint you want to seal (To cut, push a screwdriver through the stix onto the concrete surface). What if the crack is narrower than the

CRACK•STIX®? No problem! You can either splice the CRACK•STIX® with a razor blade or if the CRACK•STIX® have been outside in the sun and are warm just stretch them! For large cracks you can double over the CRACK•STIX®. For deep joints or cracks you can first put in a backer rod or sand. Do not fill to top as you must leave space for the CRACK•STIX® to be inserted into joint or crack.

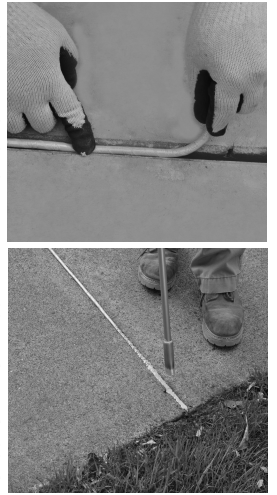

Take the cut CRACK•STIX® and push it down into the crack/joint inch by inch, until it is approximately 1/8" from the top of the surrounding concrete surface (slight recess for expansion & contraction). Light the propane torch & adjust the total flame until it is about 3-4" long & the bright blue tip of the flame is 1" long. Do not touch the flame, it is extremely hot & can cause severe burns (follow torch instructions). Hold the flame at a 45 degree angle 1-1/2" from CRACK•STIX® & begin heating. The "Melt-away" plastic wrapper will liquify immediately, continue to move the flame back & forth, side to side, in a slow even manner, heating about one foot at a time. The stix will start to liquify immediately but you should continue heating for about 1 - 2 minutes. The type of torch, along with wind, temperature conditions, and thickness of stix will affect melting time. Traffic Ready in approximately 20 minutes.

**NOTE:** For concrete to asphalt or concrete to concrete repairs, Portland concrete cement may contain trapped moisture which can cause "Popping/Spalling" when heated. To minimize this condition, dry the concrete prior to applying CRACK•STIX®, by "PRE-WARMING" the surface. In a slow side to side motion, move the torch flame back and forth approximately 12" from the concrete until it is completely dry (about 30-45 seconds... **DO NOT OVERHEAT ADJACENT concrete surface**). Always wear protective gear...in accordance with instructions.

If you have "burnt" the edges of the concrete, you can either sweep up the residue dust or you may need to rinse with soap and scrub with a stiff nylon brush.

**CAUTION:** Do not touch liquified sealant, which is very hot, until it has completely cooled 5-20 minutes. While it is cooling, you can continue on with your repairs to other cracks/joints. Once filling/sealing & cooling are completed, check your work. If you did not apply enough sealant, or used the wrong size, correct by adding more CRACK•STIX®.

**NOTE:** CRACK•STIX® can be reliquified at any future time if necessary to rebond or reseal the sealant to the sidewalls. Follow the original CRACK•STIX® instructions.

### FOR OUTDOOR USE ONLY KEEP AWAY FROM CHILDREN DO NOT INGEST

If accidentally swallowed, call physician immediately.

### STORAGE RECOMMENDATION...

CRACK•STIX® have an excellent shelf life...  
Keep in a dry, cool place between 35-70 degrees.  
0 VOC's



CRACK•RITE™ & CRACK•STIX® are trademarks of:  
DALTON ENTERPRISES, INC.  
131 Willow Street  
Cheshire, CT 06410 USA  
Copyright © 2013  
Protected by U.S. Patent 5,928,746  
[www.crackstix.com](http://www.crackstix.com)