


INSTALLATION

IMPORTANT

Please be advised that the provided Cold Water T-Valve should be installed at the Fill Valve under the toilet tank, and NOT at the cold water supply coming from the wall.

Note: the Hot Water T-Valve will be installed at your hot water supply under your bathroom sink.

If you do not have access to the Fill Valve under the toilet tank, contact Brondell Customer Service at 888.542.3355. We may be able to guide you through the process.

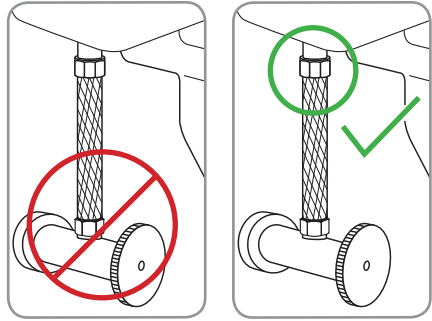

BEFORE INSTALLATION

Check the size of the hot water supply connection (most likely under the sink/wash basin). This needs to be a $\frac{3}{8}$ " connection for our T-valve to install.

Note: if the connection is a $\frac{1}{2}$ " connection, you will need to purchase the following reducing adapter available online and at many plumbing hardware stores:
Reducing Adapter, $\frac{1}{2}$ " Female NPT x $\frac{3}{8}$ " Male Compression.

Check Water Supply Line


Check the water supply line that connects the toilet tank fill valve to the water shutoff valve at the wall. If it is a rigid pipe, you will need to purchase a flexible water supply hose to replace it before installing the PureSpa. The length of the hose may vary and the top connection size should be $\frac{7}{8}$ " Ballcock to connect to the T-valve that you will install under the toilet tank and the bottom connection will vary (most common are $\frac{3}{8}$ " and $\frac{1}{2}$ " female compression).

INSTALLATION (cont.)

CONNECTING THE COLD WATER SUPPLY

1. Remove existing toilet seat


- Lift hinge covers and use flathead or Phillips head screwdriver to remove the mounting bolts. Alternatively, you may need to loosen mounting bolts underneath the seat.
- Remove the toilet seat and set the seat, mounting bolts and hardware aside.

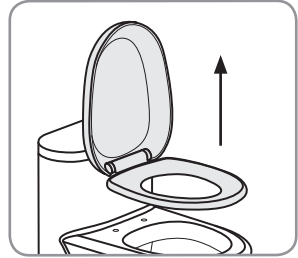

Step 1b

2. Turn off water supply valve and flush toilet


- Turn off water supply at the wall to stop flow of water.
- Flush toilet and hold down handle to completely empty toilet tank.
- Disconnect water supply hose from the fill valve under the toilet tank.

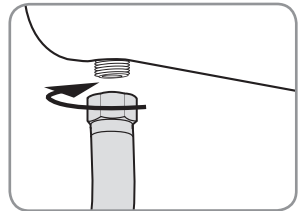

Step 2c


3. Connect 7/8" T-Valve to Water Supply Line and Fill Valve Under Toilet Tank.

- Install the 7/8" T-valve with one or both of the large rubber washers to the incoming water connection on the bottom of your toilet tank.

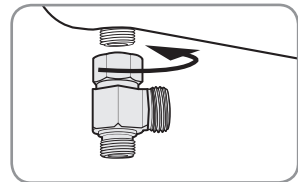

Step 3a


- Connect the cold water supply line coming from the wall to the bottom of the T-valve.

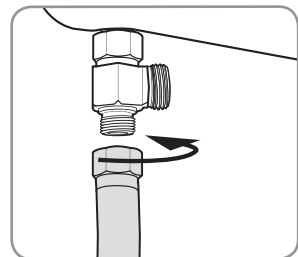

Step 3b

CONNECTING THE COLD WATER SUPPLY (cont.)

4. Connect Bidet Hose to T-Valve
 - a. Connect one end of the braided metal cold water bidet hose to the remaining open side of the installed T-valve.

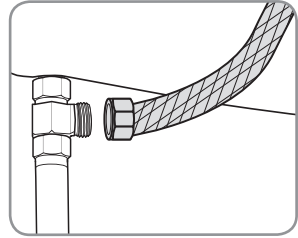

Step 4a


IMPORTANT

If you are only connecting the cold water supply, you must install the Hot Water Supply Cap (provided - see Page 3) over the hot water connection on your PureSpa (see diagram).

Failure to connect or cap the hot water supply will result in leaking during use.

After installing hot water cap, proceed to "Installing the Bidet Attachment" on Page 10.

If you wish to also connect your hot water supply, then proceed to "Connecting the Hot Water Supply" on Page 9.

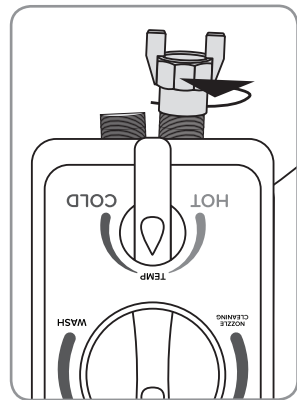


INSTALLATION (cont.)

CONNECTING THE HOT WATER SUPPLY


1. Connect the hot water supply
 - a. Locate the hot water supply line in your bathroom under your sink/washbasin and turn the water supply valve all the way off.
 - b. Drain the hot water line by turning on the sink tap on the hot setting until no more water comes out.
 - c. Disconnect hot water supply hose to sink from shut off valve. You may have to use a 3/8" compatible wrench or a similar tool (not supplied).

Note: there may be some residual water in the hose, use a small container or towel to catch any residual water.

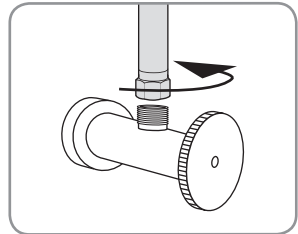


Step 1c

2. Install the Hot Water 3/8" T-valve and the small rubber washers as needed onto the hot water shut off valve under the sink.
3. Reconnect hot water supply line to open end (top) of T-valve.

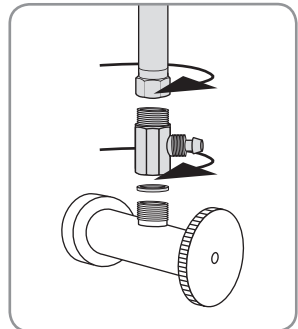

Steps 2 and 3

4. If it hasn't been removed already, unscrew the Pressure Cap covering the Pressure Connector.
 - a. Slide the Pressure Cap over the open end of the of Hot Water Flex Tubing with the inside threads facing towards the open end.

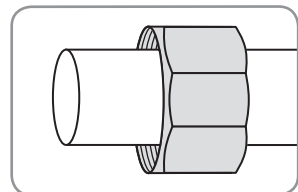


Step 4a

CONNECTING THE HOT WATER SUPPLY (cont.)

- b. Push the Hot Water Flex Tubing over the Pressure Connector.


IMPORTANT: Be sure to slide the Hot Water Flex Tubing over the Pressure Connector until the tubing slides past the “lip” of the pressure connector and it cannot go any further.

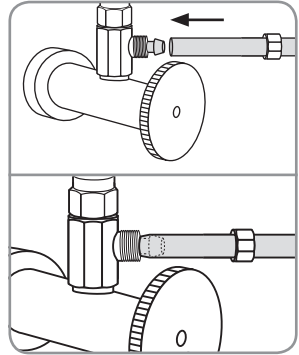

Step 4b

- c. Slide the Pressure Cap down until the cap meets the Pressure Connector. Screw the Cap onto the T-Valve until secure and tight.


Caution: Do not over-tighten the Pressure Cap. You will risk damaging the tubing.

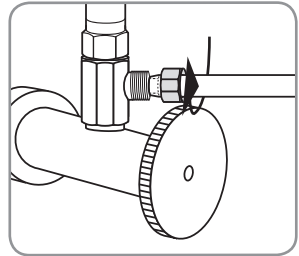

Step 4c

INSTALLING THE BIDET ATTACHMENT

1. Install Bidet Attachment on Toilet
- a. Place bidet attachment on the toilet so the nozzle is as close to the back of the toilet bowl as it will go. This will vary by toilet.

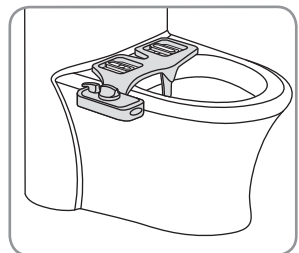


Step 1a

INSTALLATION (cont.)


INSTALLING THE BIDET ATTACHMENT (cont.)

- b. Make sure the adjustable brackets line up with the holes in the toilet fixture. You may need to move the adjustable brackets accordingly to line up properly.

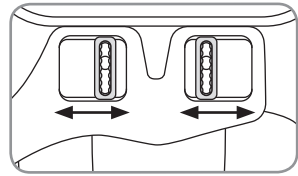

Step 1b



- c. Replace the toilet seat on top of bidet attachment and secure using original toilet seat hardware. Make sure to tighten so that the bidet attachment and seat do not move.

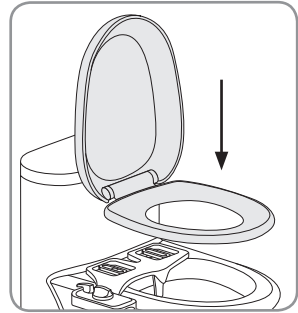

Step 1c

2. Connect Cold Water Bidet Hose to Bidet Attachment

- a. Connect the open end of bidet hose to the Cold connection on the back of the bidet attachment.

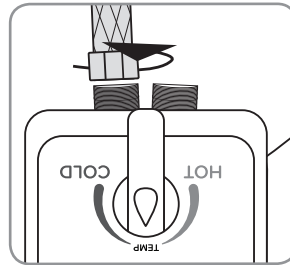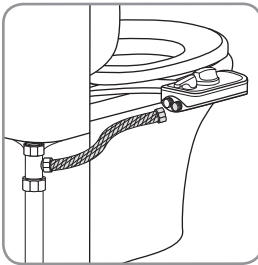


Step 2a

Note: If you have already installed the Hot Water Supply Cap over the hot water supply on your PureSpa, Skip to Step 3 on Page 12. Otherwise continue with the installation at the top of Page 12.

INSTALLING THE BIDET ATTACHMENT (cont.)


- b. Slide the Pressure Cap over the open end of the of Hot Water Flex Tubing with the inside threads facing towards the open end.

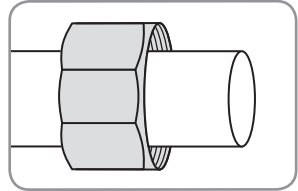

Step 2b


- c. Push the Pressure Connector into the open end of the of Hot Water Flex Tubing with the washer facing out.

IMPORTANT: Be sure to slide the Hot Water Flex Tubing over the Pressure Connector until the tubing slides past the “lip” of the pressure connector and it cannot go any further.

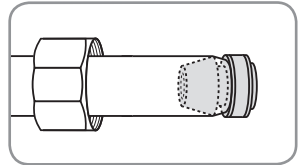

Step 2c

- d. Hold the Pressure Connector up against the hot water inlet on the bidet attachment. Slide the Pressure Cap along the tubing and screw the Cap onto the hot water inlet until the Pressure Connector is secure.

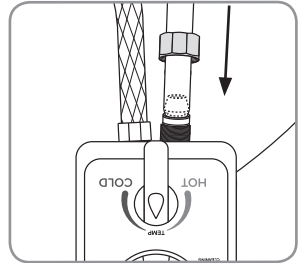

Step 2d

3. Turn on Water Supply & Check for Leaks

- Open the main water supply valve slowly and check for leaks.
- Wait 5-10 minutes, check again and if there are no leaks continue.

Note: If there is any leaking, check all rubber washers and make sure all water connections are tight and secure. If necessary, you can use plumbers tape for any leaking connections.