



Certifications & Information

- NSF Certified
- cUPC & UPC
- ADA Approved
- Limited Lifetime Warranty
- Lead Free Construction

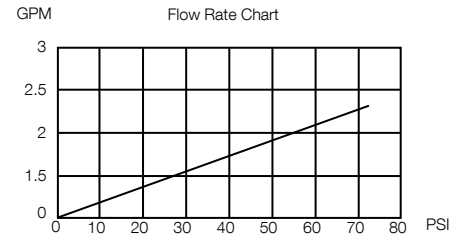


Tools

Gather the necessary tools as shown to complete the installation of this faucet.



Phillips screwdriver



Adjustable Wrench

The following tools are optional:




Safety Glasses



Channel Lock




Pliers




Flashlight

Configuration

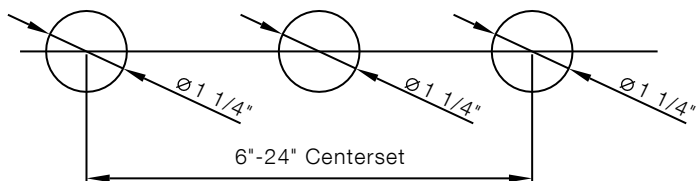


Three hole Installation
6"-24" Centerset

Connect to water supply lines with TWO
3/8" Compression Faucet Connectors

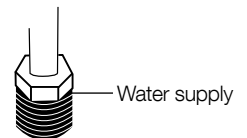

Water supply

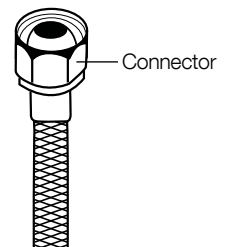

Connector

Faucet Installation

- A. Turn off the water supply. Remove the faucet and faucet handles with the mounting hardware attached from the package.

- B. Insert the shank of the faucet handle body into the hole of the sink deck.

From the underside of the sink or mounting surface, attach the gasket and washer, followed by the lock nut, onto the shank.

*Coupling nut and cone washer are optional for this installation depending on your waterline connection.


- C. (1) Using a phillips screw driver (2) tighten the mounting screws until secure. (3) Lower the the lock nut to onto the mounting surface (4) followed by the faucet handle.

Repeat above steps for second faucet handle.

- D. Remove all mounting hardware from the faucet shank.


- E. From the underside of the sink or mounting surface, attach the gasket and washer, followed by the lock nut, onto the shank. Tighten mounting screws until secure.

- F. Attach the Tee fitting to the faucet shank. Tighten using an adjustable wrench until secure.

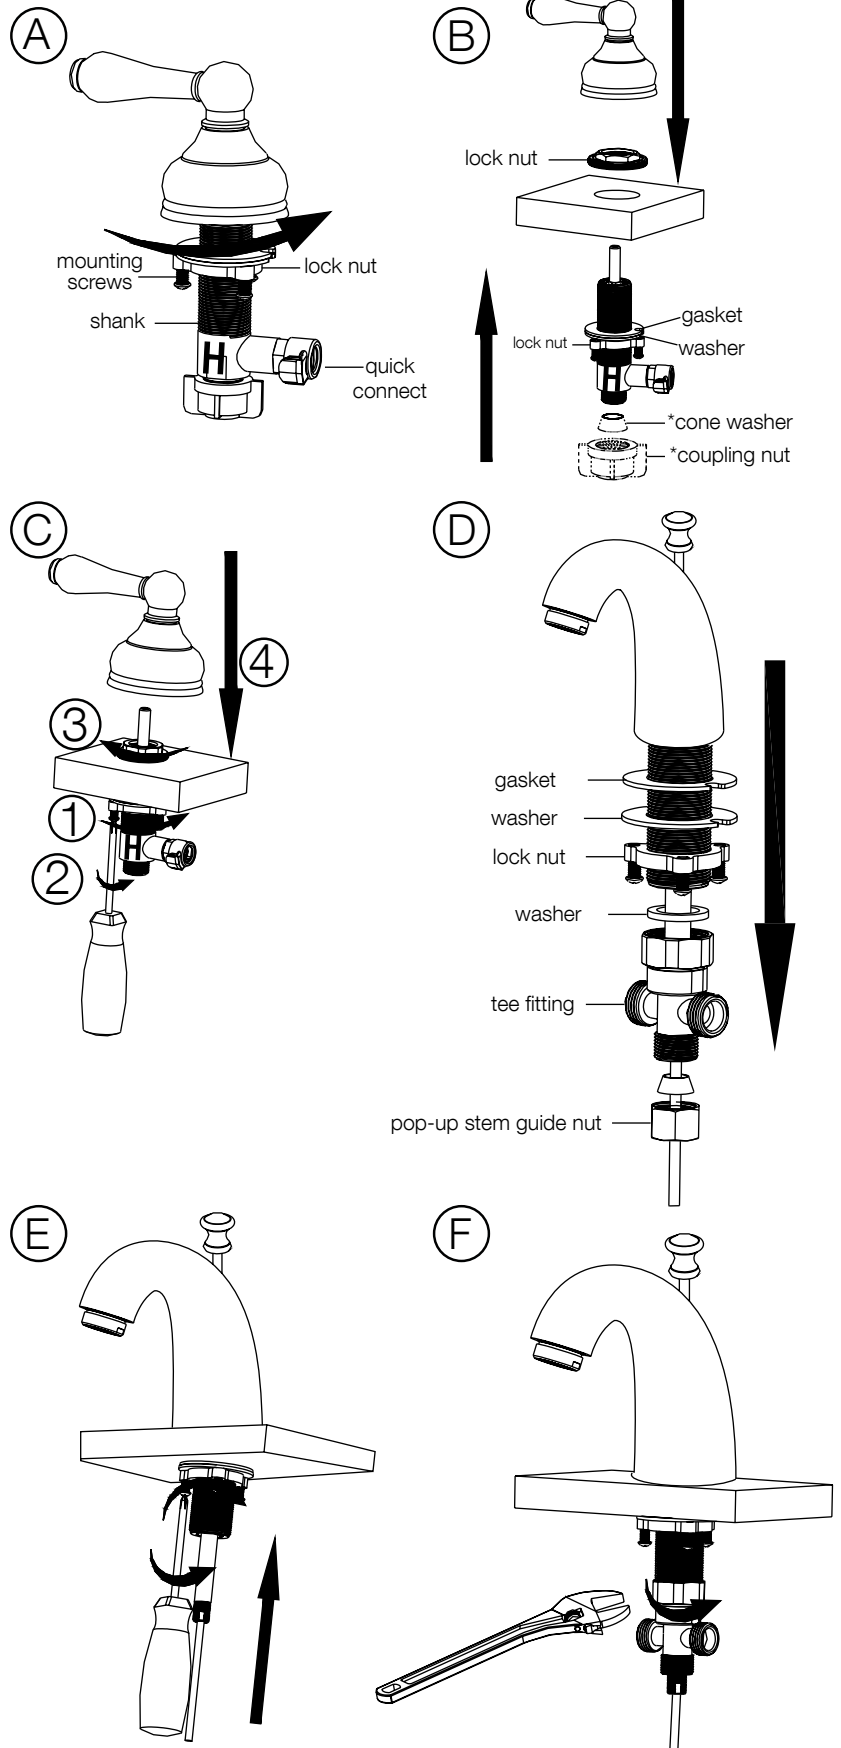





Faucet Installation Continued

- G. (1) Tighten pop-up stem guide nut.
- (2) Attach the hot and cold supply lines to the Tee fitting at the faucet base.
- (3) Attach the opposite end of each hose to the corresponding quick connect fittings by tightening the 3/8" compression fittings onto the lines. Secure all fittings with a 1/4 turn of a wrench.
- (4) Secure water line connections to each corresponding faucet handle shank base. Secure all fittings with a 1/4 turn of a wrench.

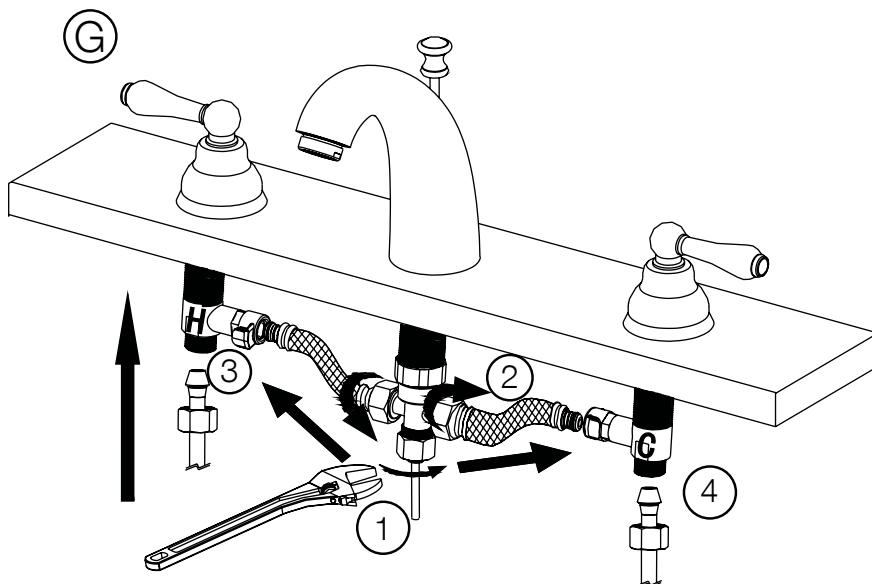



Pop-Up Drain Installation

- A. Remove pop-up drain stopper (6), and flange (7) with top rubber washer (8) from the pop-up assembly.
- B. Insert drain body (9) from underneath of sink drain hole. Replace flange (7) and top rubber washer (8) back to drain body (9). Tighten flange securely.
- C. Slide the bottom rubber washer (10) back on the drain pipe, up to and against the bottom of the sink. Tighten the washer (11) and the lock nut (12) firmly against the base to form a tight seal.
- D. Replace pop-up drain stopper (6) into the drain body (9) with o-ring (10) in place, and align the hole in the stopper with the guide rod opening.
- E. Remove the rod guide nut (11) and rod ball rubber gasket (12).
- F. Insert rod ball assembly (13) into the drain body (9) and through the hole in the drain stopper (14).
- G. Replace the rod guide nut (11) and the rod ball rubber gasket (12) and tighten securely.
- H. Insert pop-up stem (15) through the hole in the faucet body (16). Connect rod ball assembly (13) to the lift rod (18) using the spring clip (17) to hold and adjust.
- I. Attach the lift rod (18) to the pop-up stem (15) by inserting the stem through the hole in the lift rod (20). Then, adjust the pop-up stem (15) to the correct height and hand-tighten the lift rod screw (19).

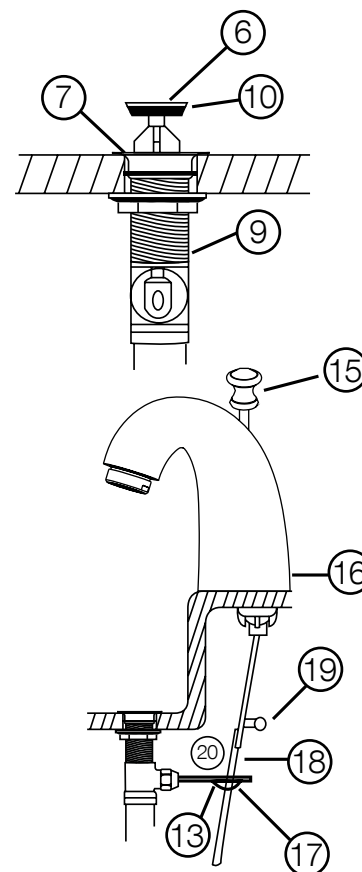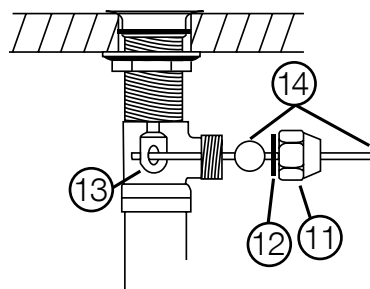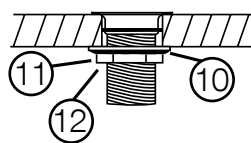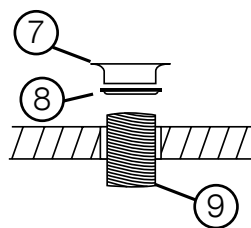


Important

Turn on the water supply SLOWLY, to test for leaks before completely opening the water lines.

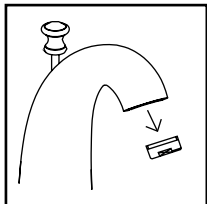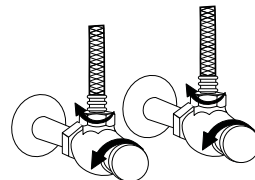

Remove the aerator from the end of the faucet by carefully unscrewing it. Let hot and cold water run through both water lines for at least one minute before replacing the aerator. This will help to clear any debris in the line, which could otherwise clog the system.

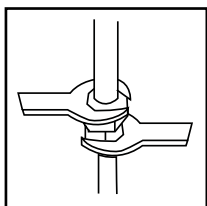

To prevent damage to the tube body, tighten the connections by carefully using two wrenches as shown. Use caution to not bend the stem. Check for leaks.

Cleaning Information

Simply rinse and dry faucets with a soft towel every week to prevent mineral deposits from forming. Clean spills and splatters as they happen. Do not let soap, toothpaste or other contaminants dry on the faucet, this can stain or pit the finish. Use a mild soap and soft sponge or towel to remove residue. Rinse and dry thoroughly.



Never use an abrasive cleaner or rough sponge to clean or dry your faucet. Harsh cleaners could dull or scratch the finish. Use only a soft disinfectant that does not contain bleach or chlorine and apply with a soft towel.

Warranty Information

MR Direct warrants to the original consumer purchaser that our sinks and faucets will be free from defects in material and workmanship under normal use for the lifetime of the product. MR Direct may elect to repair or replace any defective MR Direct product covered by our warranty.

Our warranty does not cover defects caused by misuse, abuse, negligence, alterations, environmental conditions, improper installation, storage and handling; nor any labor expenses.

From time to time we will change design specifications and materials as conditions require and improvements are developed. We have no obligation to incorporate such changes in products we previously manufactured.

This warranty is in lieu of any and all other warranties, express or implied, including any warranties of merchantability and of fitness for a particular purpose; and excludes any incidental or consequential damages. No representative has the authority to change or enlarge the above warranty.

This warranty is only valid in the United States of America. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

One-Year Accessory Warranty

MR Direct warrants to the original purchaser that all of our accessories will be free from defects in material and workmanship under normal use for one full year.

Our warranty does not cover defects caused by misuse, abuse, negligence, alterations, environmental conditions, improper installation, storage and handling; nor any labor expenses. MR Direct may elect to repair or replace any defective MR Direct accessory covered by our warranty.