


HOME DECORATORS COLLECTION

Item #1003 422 689
1003 422 701
1003 422 704
Model #7979HDCBNDI
7979HDCGLDI
7979HDCVBDI

USE AND CARE GUIDE

BOSWELL QUARTER 3-LIGHT VANITY

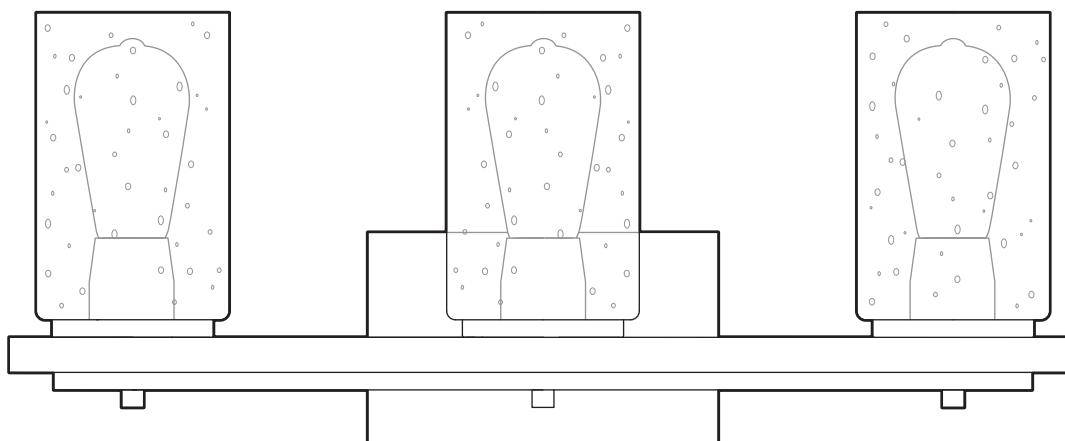

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m.- 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this light fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Safety Information	2
Warranty	2
Pre-Installation	3

Installation	5
Care and Maintenance	7
Troubleshooting	7

Safety Information

Read and understand this entire manual before you attempt to assemble, install, or operate this product.



WARNING: Read instructions carefully and turn off the electricity at the main circuit breaker panel before you begin this installation.



WARNING: If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.



WARNING: Risk of fire. 90°C supply conductors. Consult a qualified electrician to ensure the correct branch circuit conductor.



WARNING: This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.



CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of three (3) years from the date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-800-986-3460 or visit www.HomeDepot.com/HomeDecorators.

Pre-Installation

PLANNING INSTALLATION

Before beginning installation, make sure all parts are included using the Hardware Included and Package Contents sections. If any part is missing or damaged, do not attempt to assemble, install, or operate the product.

To avoid damaging this product, place it on a soft, non-abrasive surface, such as carpet or cardboard

TOOLS REQUIRED



Phillips
screwdriver



Pliers



Wire stripper



Safety glasses



Electrical tape



Ladder


HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA

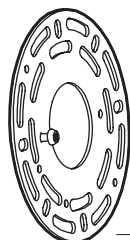

BB



CC




DD

Part	Description	Quantity
AA	Wire nut	3
BB	Round mounting plate with ground screw	1
CC	#8-32 Screw with hex nut	2
DD	Cylinder nut	2

Pre-Installation (continued)

PACKAGE CONTENTS

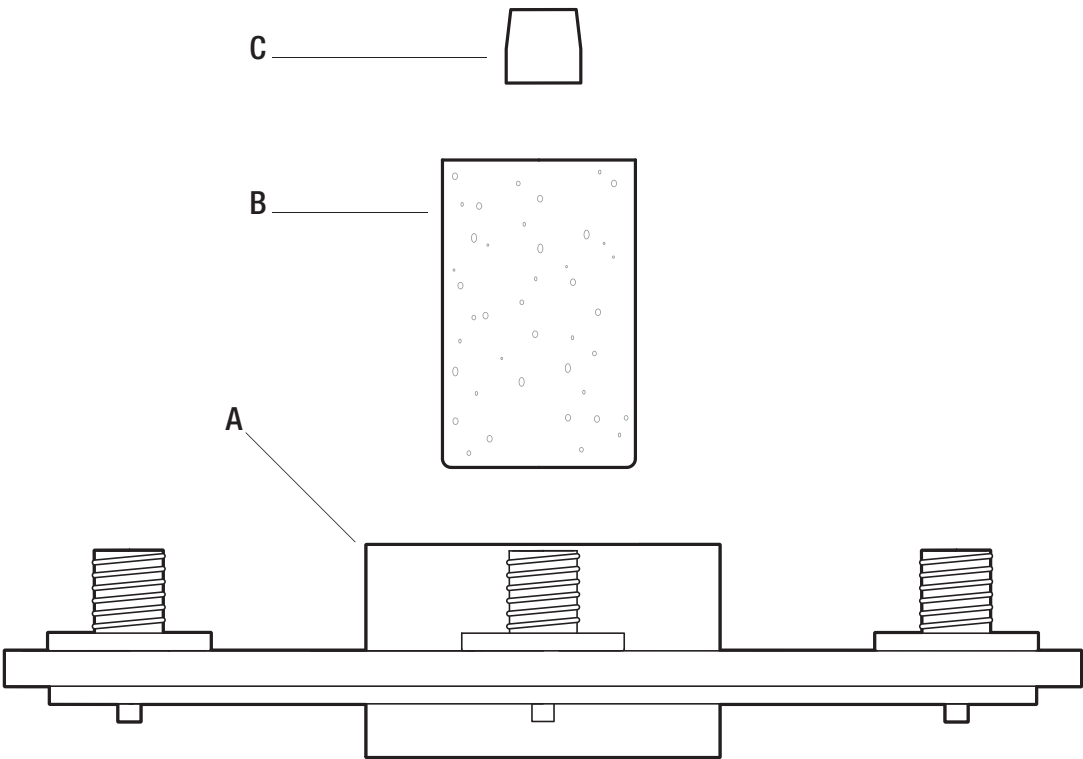


Part	Description	Quantity
A	Light fixture	1
B	Glass shade	3
C	Socket ring	3

Installation


1 Installing the mounting plate

- Install the two mounting screws with hex nuts (CC) into the holes in the round mounting plate (BB). Make sure they line up with the holes in the back plate portion of the light fixture (A).
- Attach the round mounting plate (BB) to the outlet box using the outlet box screws (not included). Ensure the mounting screws (CC) protrude away from the junction box as shown.

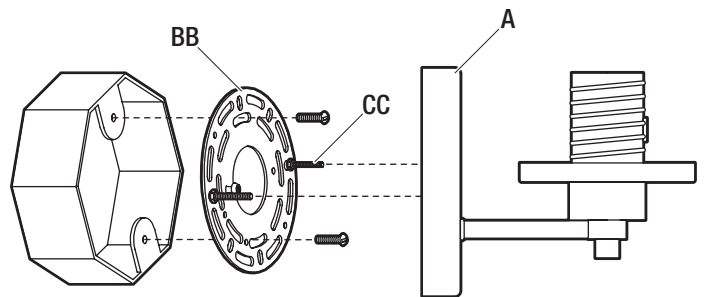

2 Connecting the wires


- Strip 3/8 in. of insulation from the wire ends of the fixture.
- Using wire nuts (AA), connect the white fixture wire to the white (neutral) supply wire from the junction box. Then connect the black fixture wire to the black (live) supply wire from the junction box.
- Connect the ground wire from the junction box and the ground wire from the fixture to the ground screw on the round mounting plate (BB). Tighten the ground screw to secure both ground wires to the round mounting plate (BB).
- Wrap electrical tape (not included) around the wire nuts (AA), and ensure they are secure. Then push all wire connections into the outlet box.

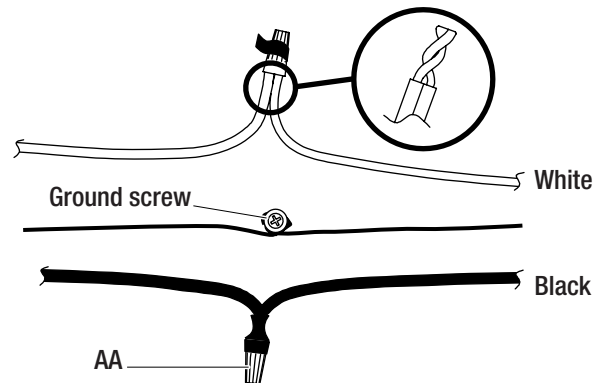

Installation (continued)


3 Installing the fixture

- ❑ Push all excess wires into the outlet box.
- ❑ Place the fixture (A) on the wall by aligning the holes in the fixture (A) with the mounting screws (CC).
- ❑ Push the fixture (A) against the wall and secure it by screwing the cylinder nuts (DD) onto the mounting screws (CC).

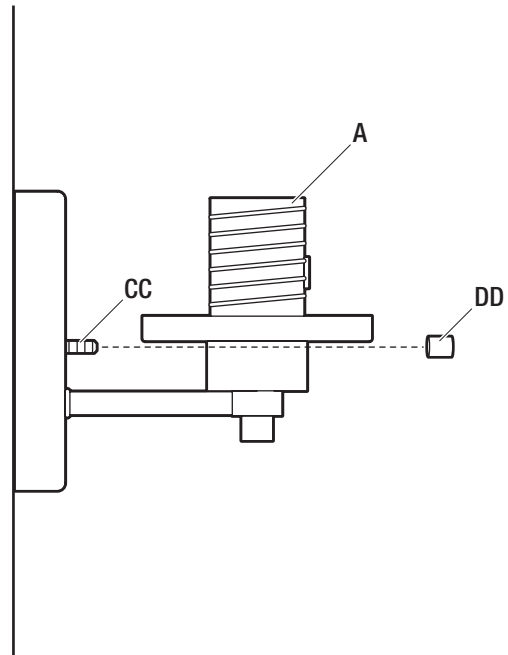

4 Installing the glass shades and bulbs

- ❑ Place the glass shades (B) over the sockets on the light fixture (A).
- ❑ Screw the socket ring (C) over the light socket to secure the glass shade (B) to the light fixture (A).
- ❑ Screw the bulbs into the fixture sockets. This fixture uses 100-watt MAX, incandescent, medium-base, or equivalent CFL or LED bulbs. Ensure that you do not exceed the recommended wattage.

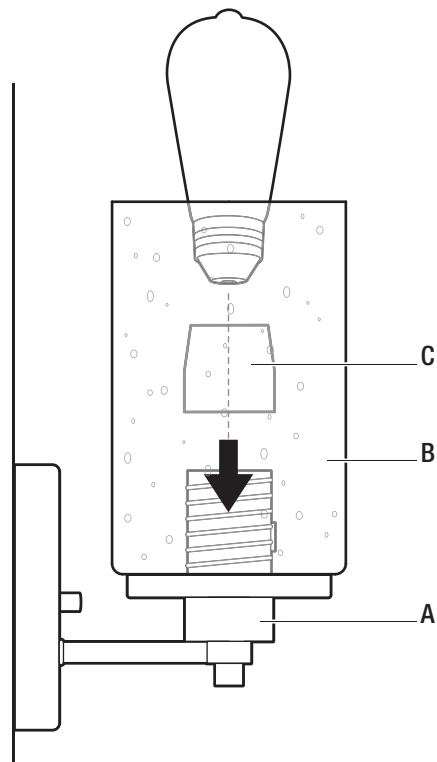

Care and Maintenance



WARNING: Before you perform any cleaning or maintenance work, turn off the electricity at the main circuit breaker panel.

- ☐ Wipe the fixture with a damp, soft cloth. Do not use any abrasive cleaners or cleaners that contain alcohol.
- ☐ When replacing bulbs, use 100-watt MAX, incandescent, medium-base, or equivalent CFL or LED bulbs.

Troubleshooting

Problem	Possible Cause	Solution
The light will not turn on.	A bulb is burned out.	Replace the bulb.
	The power is off.	Ensure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Discontinue use of the fixture. Check the wire connections or contact a qualified electrician.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m.- 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.