


Use and Care Manuel

For AC736

- Pull on both ends of the Window Air Purifier to adjust the width till the Window Air Purifier touches the sides of your double hung window sill.
- Lower the double hung Window onto the top of the Window Air Purifier holding it in place and making a seal with the gasket on the Window Air Purifier
- Replace Filter every 6 Months for Particulate and every 3 months for odors.
- Store in a plastic bag when not in use to extend life of filter.
- To avoid exposure to allergens keep same side facing out and handle with gloves and a mask when taking out for the season or changing the filter.
- See page two for instructions on how to change filter.
- Replacement Cartridges are available for all sizes use chart to pick correct size and put VC on the end when ordering.

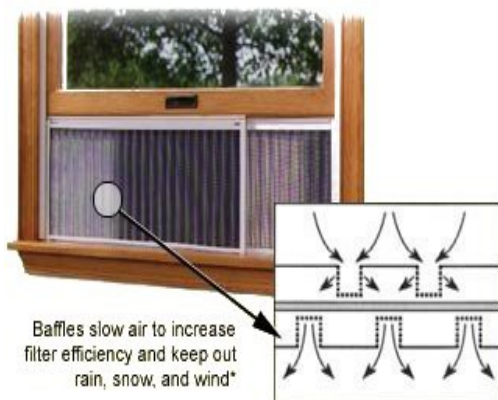

| Manufactured Sizes Fit Most Double-Hung Windows | | |
|---|--------|-----------|
| Style | Height | Adjusts |
| AC736 | 7" | 20" - 36" |
| AC744 | 7" | 24" - 44" |
| AC1136 | 11" | 20" - 36" |
| AC1144 | 11" | 24" - 44" |

Window Ventilator Replaceable Filter Cartridge

► In order to replace the filter in your window ventilator you will need a standard phillips head screwdriver and the appropriate sized cartridges (i.e. 736 cartridges for a model 736 ventilator).

► Please read the directions carefully before attempting to change the cartridge.

► First remove the ventilator from the window to a surface that is easily cleaned. When removing the old filter, trapped dirt and dust may fall off. If you are particularly sensitive to dust, pollen and dirt you may want to wear a mask or have someone else replace the cartridge for you.

► Put the ventilator in a closed position (*figure 1*). Keeping the ventilator closed, remove the two **silver** screws from the plain plastic endcap closest to you (*figure 2*).

► Pull the old filter toward you and discard (*figure 3*). If this is the first time the filter has been replaced, it will be in three pieces.

Do not remove the plastic rails on the outer edges of the replacement cartridge. These rails stay on the cartridge even in use.

► Take the new filter cartridge and slide it into the channel leaving the black rails in place (*figure 4*). These rails facilitate installation and removal and should be left on the filter.

Replace the two screws and the endcap. The endcap will slightly compress the screen when you replace it.

► Turn the ventilator over and repeat the process for the other panel.

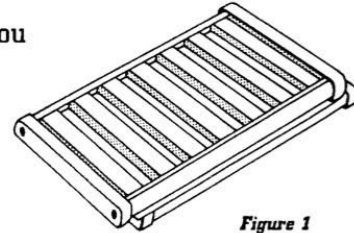


Figure 1

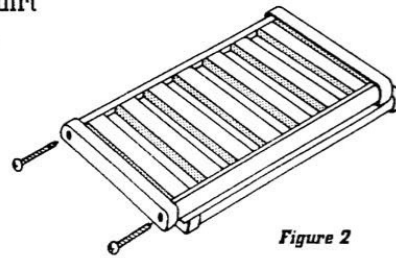


Figure 2

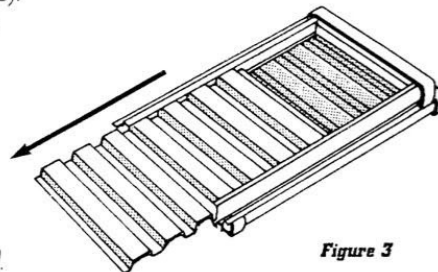


Figure 3

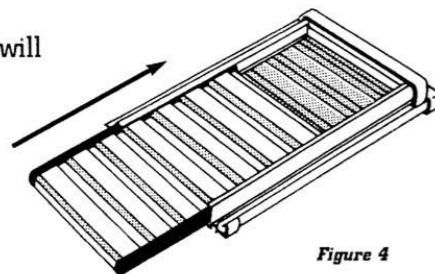


Figure 4

REP Industries, Inc
312 Walnut Street, Lansdale, PA 19446
215/368-0154

