



The Choice of Professionals



DTA USA GROUP Inc
Tiling Tools, Accessories & Floor Trims



Use and care manual for the DTA Wedge Lippage System

The DTA Lippage Levelling Systems are designed to create a lippage free surface when tiling by preventing the movement of tiles during the drying process.

The Wedge Levelling System comprises of 3 parts; wedge, spacer and gun. The spacer is placed under the tile with the wedge pushed through the spacer to secure it, using the gun to tighten. The pressure applied between the wedge and the spacer provides a lip free finish. This system is ideal for both walls and floors.

Install Instructions;

1. Determine your width of your joint grout line and use the appropriate size spacer.
2. Place the spacer under the tile Place your spacers under the tile.
3. Be sure to use the lippage on all the corners and more along the sides of the tile for larger pieces.
4. Slide the wedge into the spacer.
5. Tighten with wedge lippage tool.
6. Once the thin set has dried remove with a mallet or kick off with foot.
7. Reuse the wedges over and over again. Spacers are a single use item.

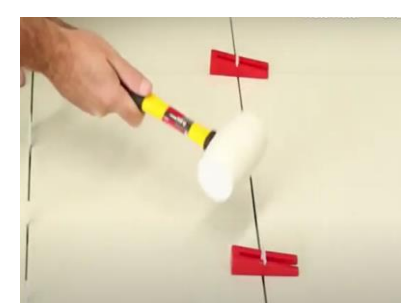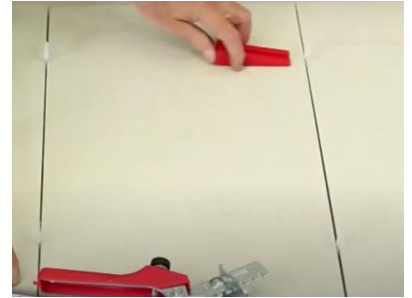

DTA USA GROUP INC
230 South Vasco Road
Livermore, CA 94551
E: sales@dtausagroup.com
P: 925 371 7101

www.dtausagroup.com

