
KAHUNA MASSAGE CHAIR


ARETE

MANUAL



PRODUCT COMPONENTS


| Main body diagram (front) |

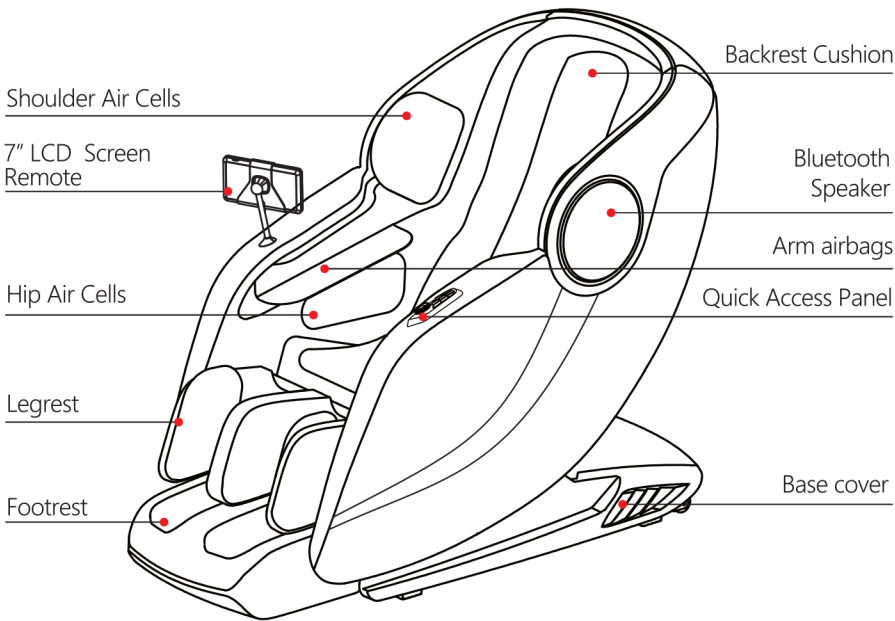

Built in Premium Bluetooth Speakers



| Main body diagram (rear) |

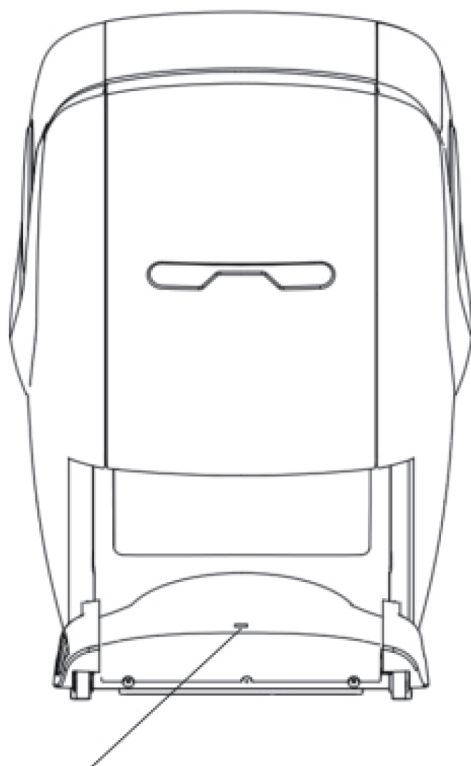


Power Switch

CHAIR INSTALLATION

1. Before use


Use the controller to place the backrest frame to the extreme position, raise the calf to the highest position and raise it to the longest position. Make sure there is sufficient space around the massage chair before operation.

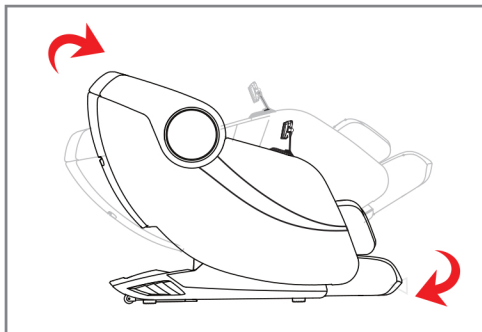

Use the controller to place the backrest frame to the extreme position, raise the calf to the highest position and raise it to the longest position. Make sure there is sufficient space around the massage chair before operation.

2. Moving the massage chair

After completing the installation, put the chair in incline / upright position to move the chair easily.

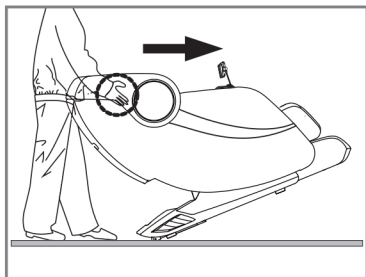


- As illustrated, tilt the chair back onto it's wheels at 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

CAUTION

- * Do not move massage chair when occupied or in use.
- * Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rugs or carpet).
- * Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- * Two persons are recommended when moving and extra care when handling the massage chair.
- * Make sure power plug & remote is disconnected to prevent damages. Warranty will not cover the power cord & remote if the chair is moved with the plugs connected.

| 3. Place the massage chair in an open area |

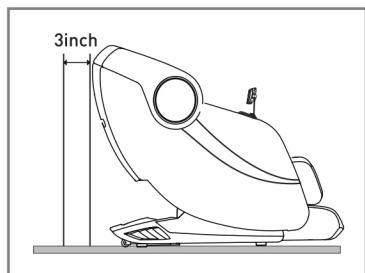

- Allow sufficient space around the chair for recline purposes.
- 3 inch distance for the back side and 19.7 inch in front of the foot rest.




PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	ARETE
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	180 W
Dimension (LxWxH) Inches	59 x 32.3 x 46.5 inches
Weight (LBS)	Net Weight : 227 lbs Gross Weight : 260 lbs



Product Massage Chair
Model ARETE
Developed by AJX Distribution INC
11125 Knott Ave, Suite D
Cypress, CA 90630
Tel 1-855-646-9500
Email INFO@KAHUNACHAIR.COM

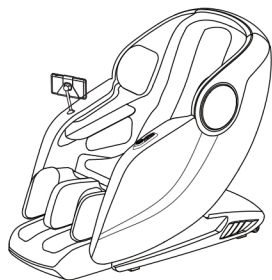

You must register warranty at www.kahunachair.com/services/