

NuvōMed™

Car Air Purifier with HEPA Filter



ITEM: 357203

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

Getting Started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Car Air Purifier with HEPA Filter
- 12C DC Car Plug Adapter
- 2 pairs of Velcro
- Instruction Manual

Key Features

- Car Air Purifier with HEPA Filter
- Built-in high-grade HEPA Filter (Removable)
- HEPA Filter removes 99% of air impurities such as dust, pollen, smoke, bad odors, mold & pet dander
- Less airborne allergies & pollutants creates healthier and safer environment
- Perfect for people who suffer from allergies
- Quiet model & 12V DC Car Plug Adapter powered
- Fresh air for your driving car

IMPORTANT SAFETY INSTRUCTIONS


When using the appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to person. Incorrect operation due to ignoring instructions may cause harm or damage.

WARNING!


1. Read all instructions before using the appliance.
2. Do not operate this or any other appliance with a damaged cord.
3. Connect 12V Car Plug Adapter plug properly to 12V cigarette lighter socket of a car only.
4. Do not cover the cord, and submerge in water or any other liquid.
5. We do not recommend the use of an extension cord, as it may overheat and become a risk of

fire.

6. Never use the power cord to pick up, carry, drag, pull, or lift the appliance. Do not pull the cord against sharp corners and edges. This could result in injury to the user or damage to the cord.
7. Unplug the appliance before cleaning or making any repairs or servicing.
8. Exercise caution and use reasonable supervision when appliance is used near children.
9. Do not clean the appliance with flammable fluids. The fumes can create a fire hazard or explosion.
10. This appliance operates inside a car with 12V battery only.

 The appliance must be secured on a flat surface inside your car, by using the included 2 pairs of Velcro at the bottom of the unit.

Description of Parts

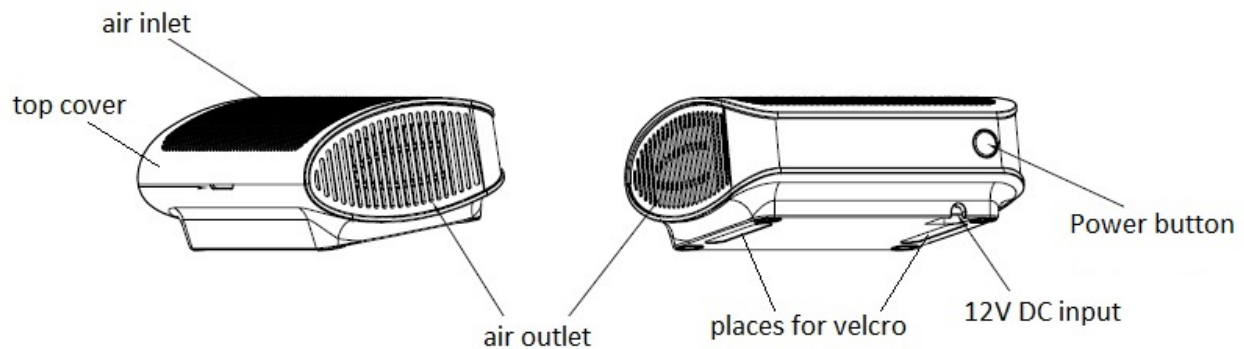

INSTRUCTIONS FOR USE

Note:

1. This appliance has a four-stage purification process that includes the use of a pre-filter, HEPA Filter, activated carbon fiber and an ion booster.
2. The 2-speed fan setting lets you select the desired air purification level.
3. The ion booster generates millions of negative ions making the air purer and fresher.
4. The appliance will stop working immediately when the top cover is removed.
5. Replace the filter every 6 - 9 months of usage.

Operating process

1. Connect the power supply

Insert the output end of supplied 12V DC Car Plug Adapter into the 12V DC input jack at the bottom of the appliance (see drawing). Make sure the filter and the top cover are fully assembled, then, secure the appliance on a flat surface inside your car, by using the included 2

pairs of Velcro at the bottom of the unit.

Plug the adapter into the 12V cigarette lighter socket of your car.

2. Turn on/off and settings

Once the appliance is plugged in, press the power button to turn the appliance to low speed (the indicator LED surrounding the power button will turn blue in color).


Press the power button the 2nd time to turn the appliance to high speed (the indicator LED surrounding the power button will stay blue in color).

Press the power button the 3rd time to turn the appliance off.

3. Ion function

The ion generator inside the appliance provides millions of negative ions and turns on automatically when the appliance is on. The ion generator turns off when the appliance is turned off.

Care and maintenance

 Always make sure the appliance is turned off and unplugged before cleaning.

1. Lift up and remove the top cover.
2. To change the filter, please remove the filter box from the appliance and replace the inside pre-filter, HEPA Filter and activated carbon fiber with new ones.
3. Put back the top cover and make sure it is secure.
4. The appliance can now be operated normally after being plugged in.

HEPA Filter replacement

Replace the HEPA filter every 6 - 9 months of usage.

To buy new HEPA Filter, please visit www.nuvomed.us

Cleaning the surface of the housing

1. Turn off the appliance and unplug the 12V Car Plug Adapter.
2. Use a soft cloth to clean the surface of the housing.

Troubleshooting

Problem	Possible Cause	Solution
The appliance does not work.	The 12V Car Plug Adapter is not properly connected to the appliance.	Check if the 12V Car Plug Adapter power cable is correctly inserted into the bottom of the appliance.
	The 12V Car Plug Adapter is damaged	Replace the 12V Car Plug Adapter.

<p>On switching to the high mode setting, the airflow does not increase OR there is no airflow at all.</p>	<p>The outlet airflow is being blocked by something.</p> <p>Damage may have incurred within the appliance.</p>	<p>Clean the outlet of anything blocking it and wipe the outside surface with a soft dry cloth.</p> <p>Contact the customer service to repair.</p>
-------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------

Product Specifications:

Rated Voltage: DC 12V

Rated Power: 1.5 - 1.8W

CADR (Air Flow): 12m3/h

Noise level: <49db

Removes >99% of air impurities (like dust, pollen, smoke, bad odors, mold and pet dander) within 20mins under 1m3 space

Unit Size: 5.8" (L) x 4.2" (W) x 2.4" (H)

Unit Weight: 11.2 oz

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 30 days warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 days warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Nuvomed Inc. Customer Service at info@nuvomed.us or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.