



Keep Your AC Going!

QUICK INSTALL GUIDE

Congratulations!

You can finally say goodbye to A/C shut downs
& drain pan overflow due to a clogged
condensate drain line.

Installs in as little as 5 minutes.

...let's get you started!




1 DOWNLOAD iFLO® APP



To start, download the iFLO® APP from the APP store or scan QR code above. Then install the batteries into iFLO® device to begin setting up the iFLO® system.




2 FIND YOUR AIR HANDLER

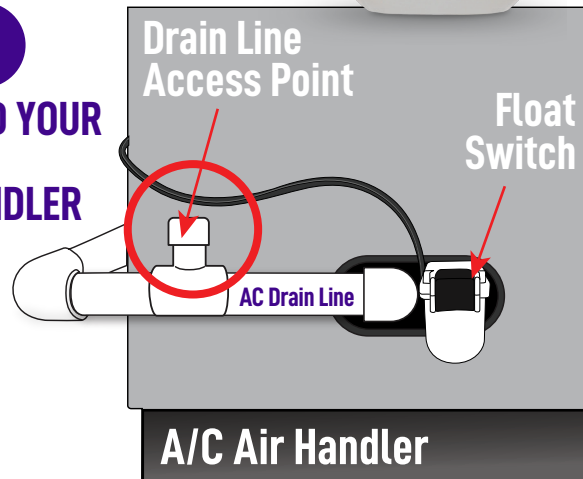

Locate Air Handler and AC Drain Line Access Point, if you have one.

BEST INSTALLATION IS 3A BECAUSE IT ALLOWS THE FORMULA TO FLOW DIRECTLY INTO THE DRAIN PAN TO BREAK UP ZOOGLA BEFORE IT FORMS. IT THEN FLOWS THROUGH THE DRAIN LINE FOR ADDED PROTECTION



3A BEST INSTALL DIRECT DRAIN PAN ACCESS

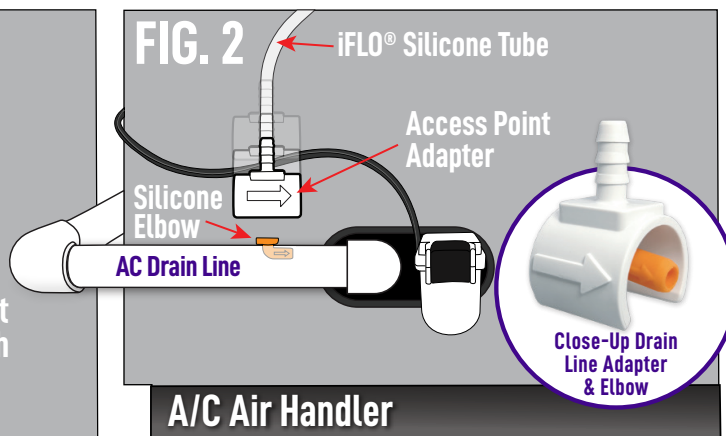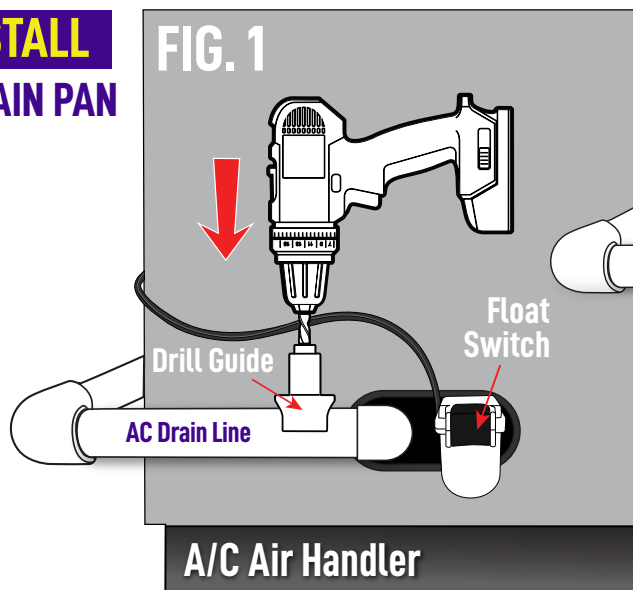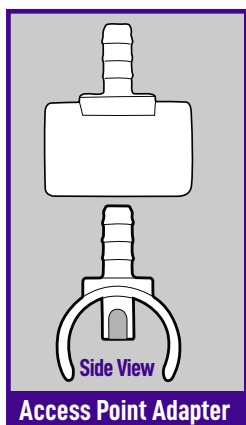


STEP 1 - Using the provided Drill Guide, drill a hole into the drain line as close to the air handler as possible. Guide will prevent drilling through the drain line (**FIG 1**).

STEP 2 - Once hole is drilled, insert orange silicone elbow towards the air handler then place Access Point Adapter over it with arrow also facing the air handler. Then attach silicone tube from base of iFLO® Drain Line Adapter (**FIG 2**). **Proceed to step 5.**

3B GOOD INSTALL OPEN DRAINLINE CONNECTOR

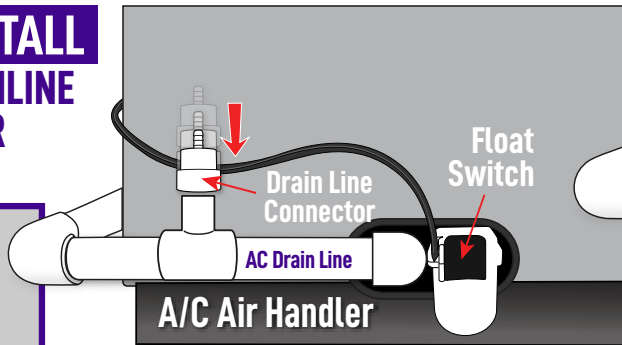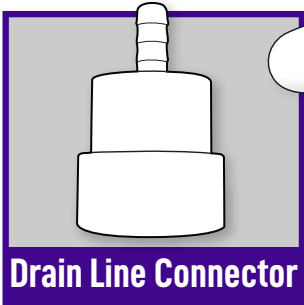


STEP 1 - Remove Drain Cap from Access Point & place Drain Line Connector over open line

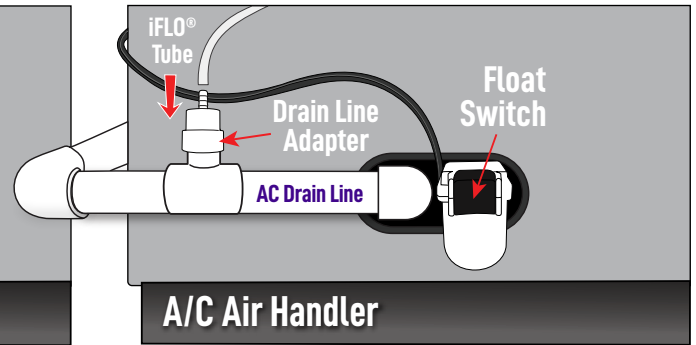


STEP 2 - After Drain Line Connector is in place, attach iFLO® silicone tubing snug onto Adapter. **Proceed to step 5.**

4A ATTACH IFLO® DEVICE TO AIR HANDLER

Place Hanger Template approximately 18 inches above the A/C drain line. Once spot is confirmed clean with alcohol wipe provided and let dry. Then remove tape backing and press and hold Hanger against air handler for **30 seconds**.

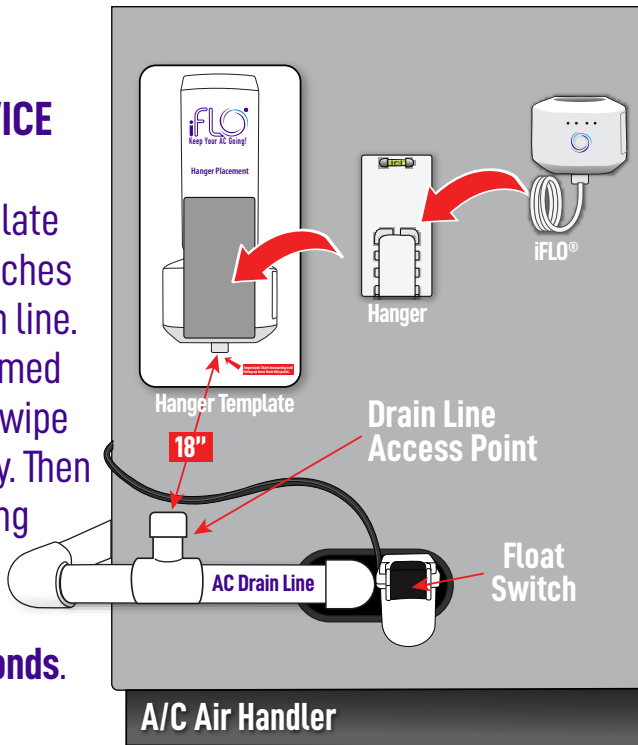

4B

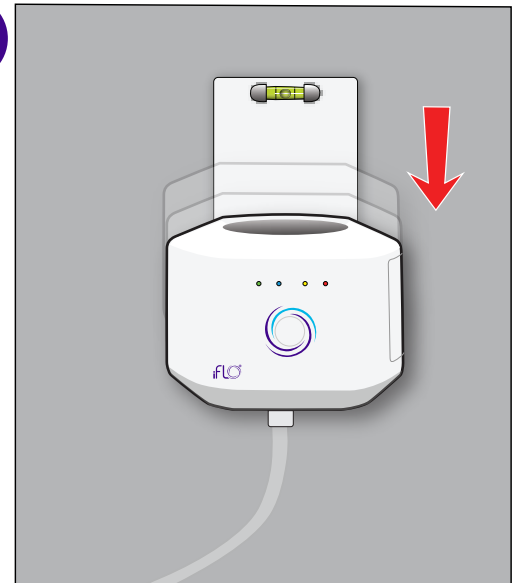

Then slide iFLO® unit onto hanger Device, once attached to air handler you can proceed to next step.

5 COMPLETE INSTALLATION

Scan QR code on cartridge to validate then remove cap from cartridge and insert into iFLO® base. Push down and twist into place until it clicks then turn the iFLO® device on and open the APP to follow instructions and complete installation.



If You Need Further Assistance Please Call (888)979-4356