



Steel Basket Utility Cargo Carrier with Ramp

Instructions for Part # UCC500




General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.

Safety

- Do not exceed the carrying capacity of 500 lbs.
- Most Class III hitches are rated for 500 lbs; most Class IV hitches are rated for 1,000 lbs. Your hauling weight may be limited by your vehicle's capacity to carry a load. Please check with your dealer to find out your vehicle's carrying capacity.
- Will not work with Class II or smaller receivers.
- Not for use with 1-1/4" hitches.
- Some vehicles may require air shocks or heavier springs to stiffen up the suspension to prevent sagging.
- NOT recommended for use with hitch adapters/extensions.

Parts

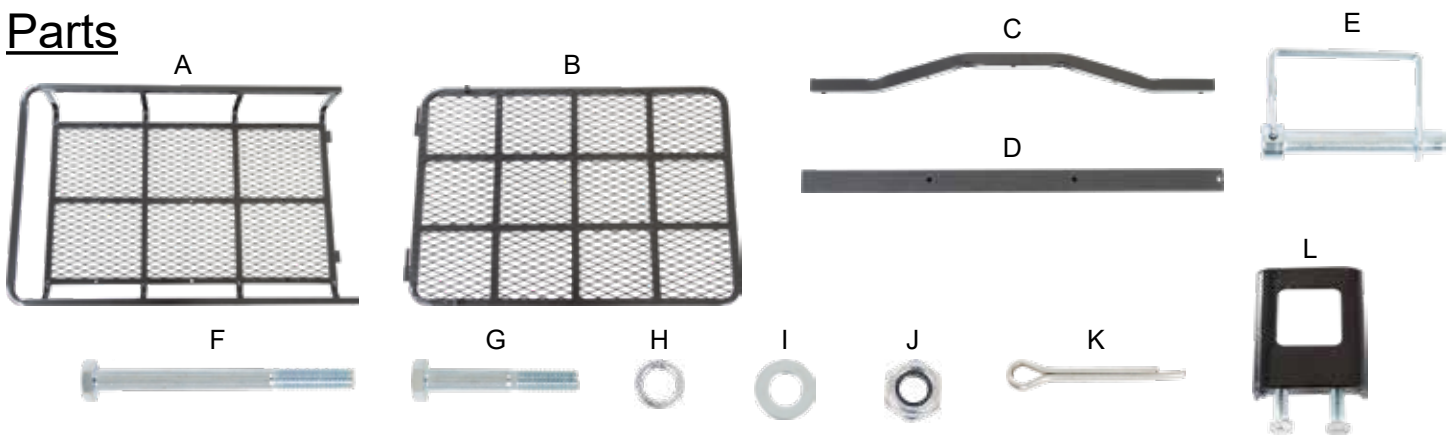

Part	Description	Quantity
A	Basket	1
B	Ramp	1
C	Support Arm	3
D	Main Support Tube	1
E	Lock Pin	2
F	M10x120 Bolt	3



Part	Description	Quantity
G	M10x70 Bolt	6
H	Lock Washer	9
I	Washer	27
J	Nut	9
K	Cotter Pin	2
L	Anti-Tilt Device	1

Tools Required



- 17mm or 11/16" wrench
- 19mm or 3/4" wrench

Assembly

Step 1. Align the main support tube (D) and the support arms (C) to the holes in the basket (A).

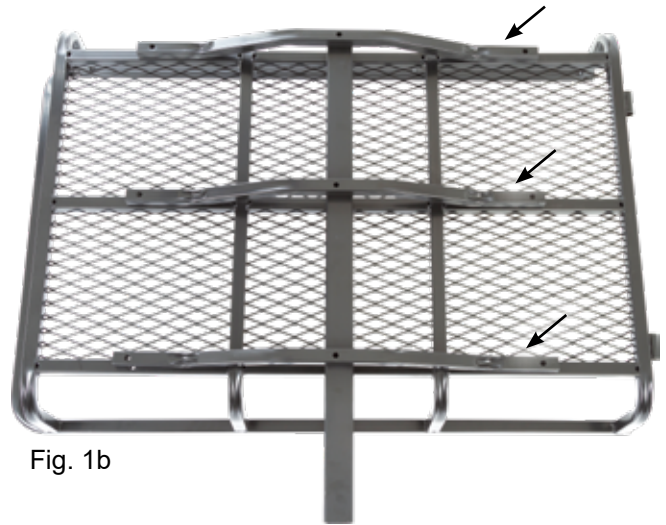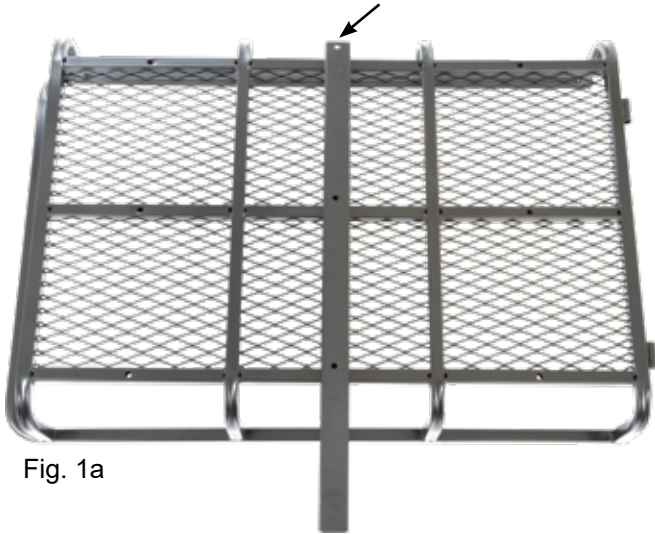

Step 2. Secure the supports to the basket. Attach the main support tube to the basket with the three M10x120 bolts (F), lock washers (H), washers (I), and nuts (J). (Hand tighten until all supports are attached.) Attach the support arms to the main support tube and basket with the six M10x70 bolts (G), lock washers (H), washers (I), and nuts (J). When all hardware is in place, tighten securely using 17mm or 11/16" wrenches.

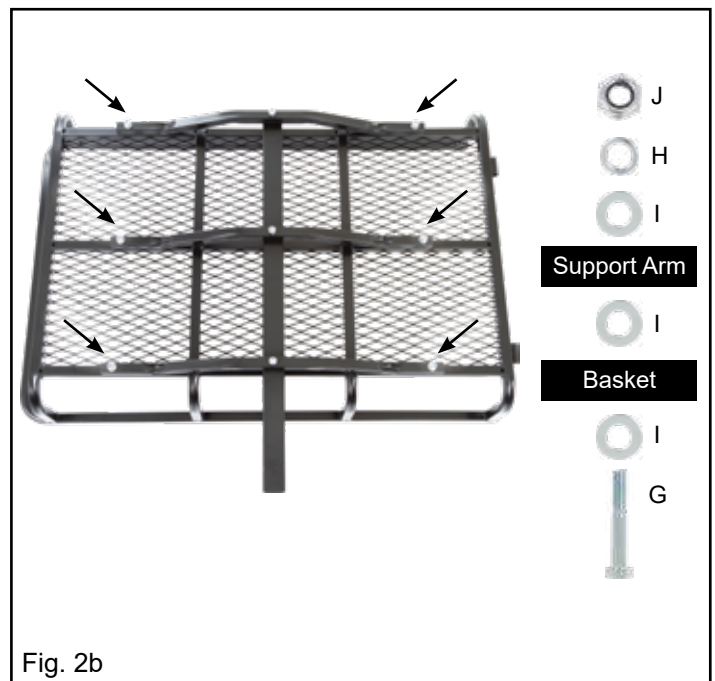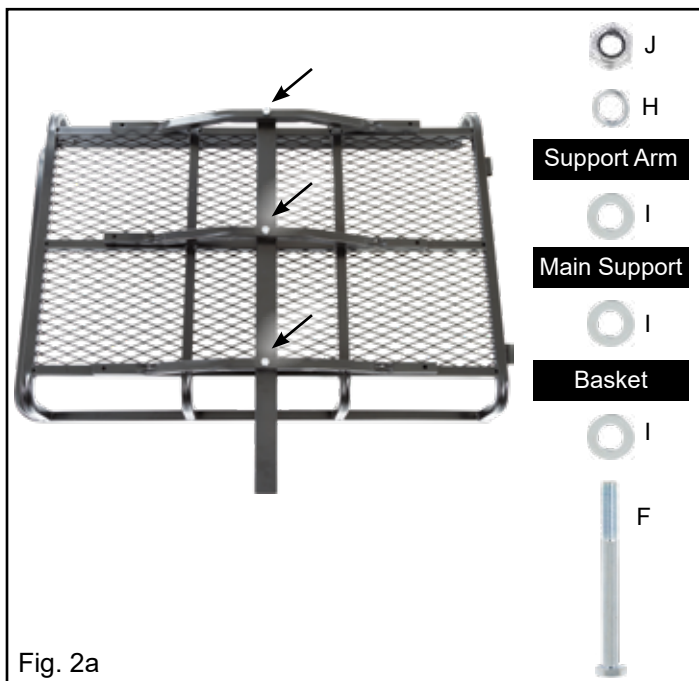

Step 3. Attach the ramp (B) to the basket (A). Align the connecting pins on the ramp to the brackets on the basket. Slide in place. Secure using the cotter pins (K).



Fig. 3a



Fig. 3b



Fig. 3c

Step 4. The ramp can be folded up and secured in place with the lock pins (E).



Fig. 4a



Fig. 4b

Installation

Always use the anti-tilt device with this carrier to help with stabilization. Place the anti-tilt device on the carrier hitch tube so that the bolts can be tightened against the vehicle hitch receiver. Place the carrier hitch tube into the vehicle hitch receiver and secure with a hitch pin (sold separately). Securely tighten the bolts on the anti-tilt device using a 19mm wrench.

Be sure all bolts on the carrier are securely tightened before use.



Fig. 5

Product Warranty and Liability

GENERAL PRODUCT WARRANTY: Products purchased from the Authorized Dealer (original place of purchase) or Merchant (“Dealer”) will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer’s website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

*****Warranty claims must be made directly to the original place of purchase.*****

WARRANTY PERIOD: This warranty remains in force for one year from the date of the product’s accepted delivery. The Authorized Dealer offers a one year manufacturer’s warranty for most products unless otherwise specified on the product advertisement.

WARRANTY SERVICE: The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

WARRANTY LIMITATIONS: The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

LIMITED LIABILITY: In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

