



Instructions : ERF - ERB - Bulk Storage Rack

Safety Instructions


This storage rack unit must be placed on a level surface. Failure to do so can result in unit failure, poor product performance, or a possible “tipping” safety hazard. **DO NOT STAND ON THE UNIT OR USE THE UNIT AS A LADDER ! DO NOT OVERLOAD !** Evenly distribute the weight on each shelf, and keep the heaviest loads on the bottom shelf. Use care and the proper attire when working with metal parts.

General Instructions


Muscle Rack Bulk Storage Rack is engineered to offer maximum flexibility as well as ease and quickness of assembly. The rack units can stand individually, or for greater stability, be joined together using the common post. Individual beams can be adjusted without disturbing the beams in adjoining units. These instructions should be followed exactly. All parts supplied must be used as shown. Any alteration or deviation from this instruction sheet can result in unit failure. After the unit is assembled, it must be placed on a level surface for safety, and optimal product performance.

Assembly Instructions


Attach the beams to the welded end frames as seen in figure 1. Use both welded end frames to establish the left and the right sides of the units. After a beam has been placed to the end units, tap down with a hammer to help drive the beam end clip tabs into the end frame post slots to secure the beam to the end frame (see figure 1). **Note: If the beam end clip tabs become bent due to mishandling. It may be necessary to adjust the tabs back to their proper form.**

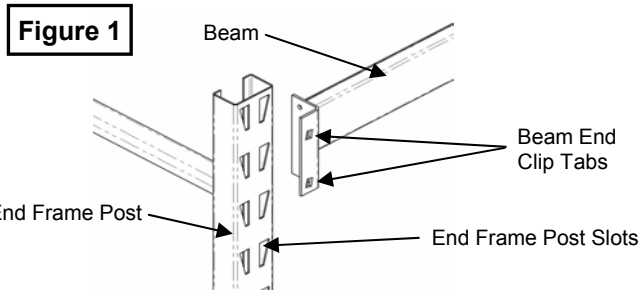

Attach the tie bars to the beams by aligning the hole of the tie bar to the hole of the beams. Insert the plastic clips through the hole of the beam and tie bar to fasten the tie bar to the beam (see figure 2).

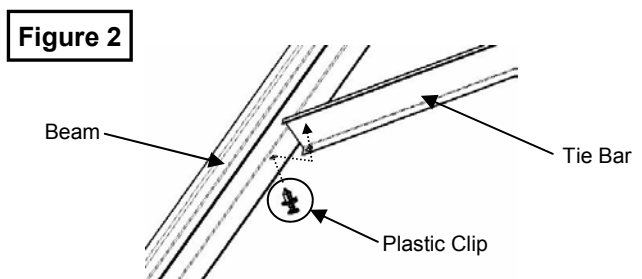

Steel, or particle board shelving can be added to each level to complete the unit. Each end frame can be used as a common end, add on units can be purchased to expand storage capacity (see figure 3).

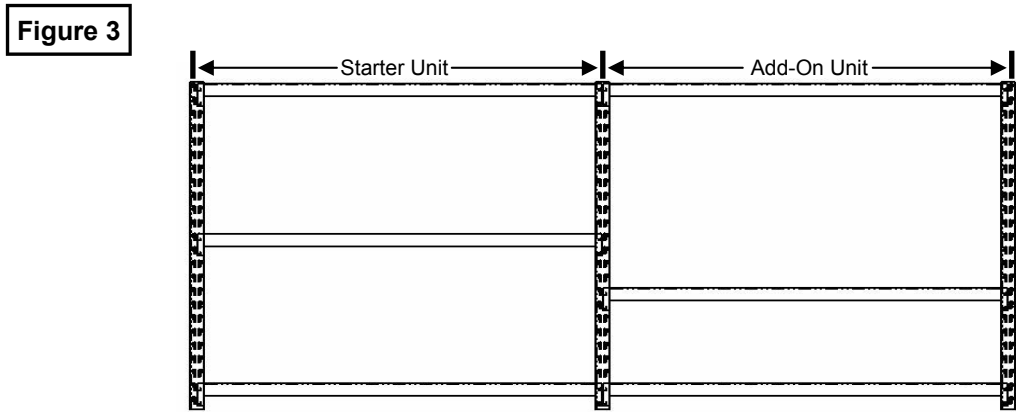

Should you have any comments, damage, missing parts, or problems with assembly of this unit please feel free to contact our **Muscle Rack** manufacturing facility at, (773) 475-3000 and request customer service. To obtain replacement parts, please provide the following information :
 - Model # - Part # & Description - Location Purchased - Date Purchased

**Industrial Products Division
 Edsal Manufacturing Company**
 4400 South Packers Avenue
 Chicago, IL 60609
 www.edsal.com