


Product KAHUNA Massage Chair
Model HM-KAPPA
Developed by AJX Distribution Inc
11125 Knott Ave, Suite D
Cypress, CA 90630
Tel 1-855-646-9500
Email INFO@KAHUNACHAIR.COM

You must register warranty at www.kahunachair.com/services/

K A H U N A M A S S A G E C H A I R

HM-KAPPA

USE AND CARE MANUAL

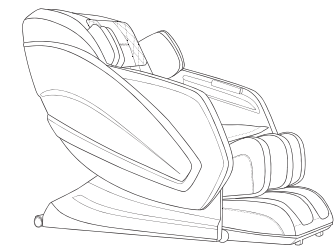

Please read this user manual thoroughly prior to operating the massage chair. Store this booklet for future reference.



KAHUNA  CHAIR®

Introducing the new Rhythmic Human Massage Chair

HM-KAPPA


Sensual Touch, Refined Design with state-of-the-art technology, Luxurious contemporary massage chair.









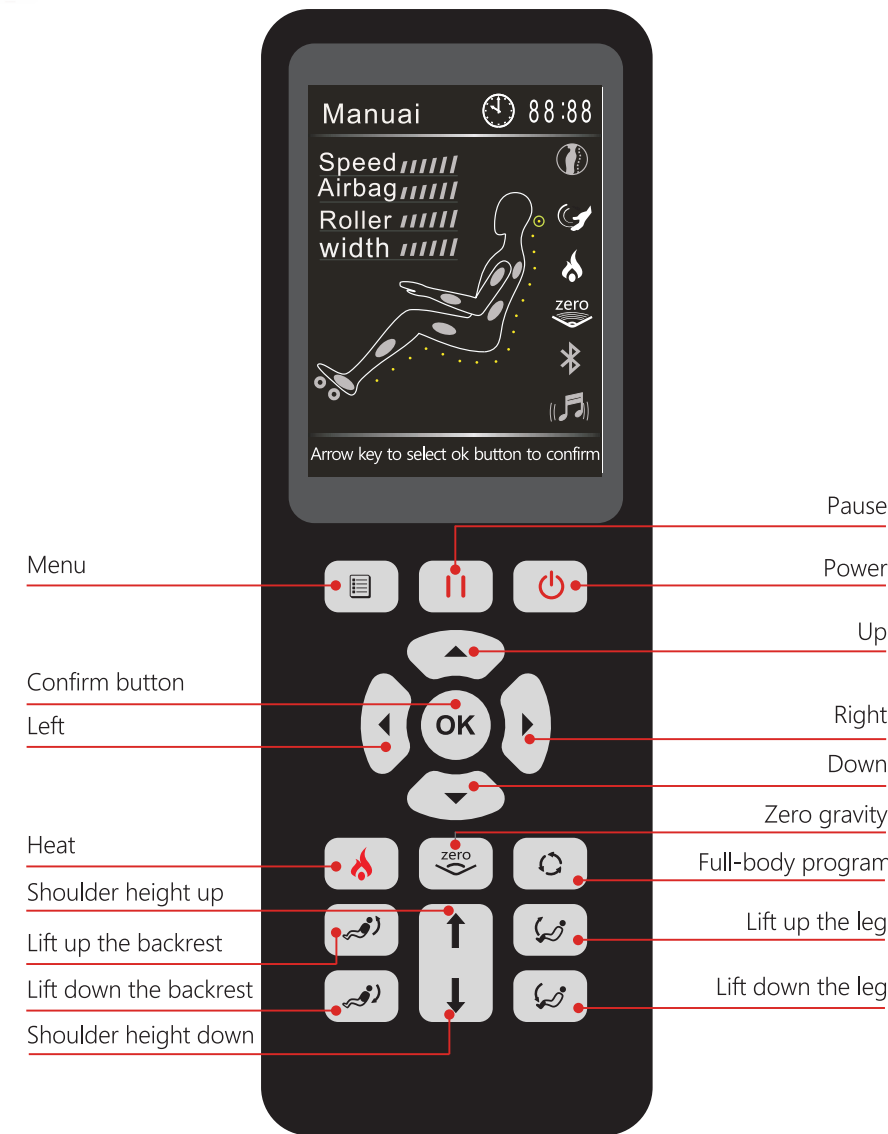






- New **4D RHYTHMIC SKMS-09M-225L** massage system - Over 10,000 experienced user feedback, we have precisely improved our system based on UX. Based on kahuna chair user's reviews, we have developed a more intelligent and sensual massage chair. It will improve your body condition to be at it's best when using our new and improved massage chair.
- **Hyper SL-Track** (51.2 inches) is the most ergonomic massage chair track that can reach every inch of your spinal curvature.
- **Rhythmic Kahuna air-cell movement** system contains 96 individual air-cells that help promote better blood circulations and increase oxygen levels.
- **Smart User memory function** will remember your favorite features such as heating, zero gravity angle, spine roller speed, foot roller speed and air intensity settings to assist you to get in a faster comfort zone.

- **15 unique massage programs** to accommodate all type of body conditions.
- **New Backlit remote control** will give you total control in the dark and our soothing led light on the side of the chair will relax your mood and give you better vision at night.
- **Kahuna Tablet** and holder are also included for multi-purposes. Tablet equipped with a fast quad-core 1.5 GHZ CPU can be used as a remote and able to connect online to watch youtube or do other fun activities while enjoying the massage. You can connect to our premium Bluetooth speakers on the chair to enjoy full premium sound quality.
- Mix and match color options will give you up to 16 Different color options to match your home decoration.
- Able to accommodate user's height between 5' to 6.2' and weight up to 330 lbs.




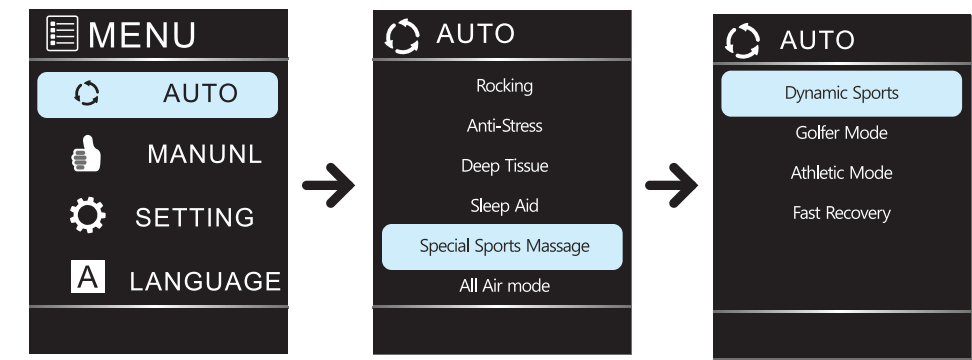
REMOTE CONTROLLER



-  **Power** : On/off key of the chair.
- Press this key, the chair will start to work.
- Press it again, the chair will shut down and go back to the reset position.
-  **Pause** : When the chair is working, press this key, all actions will be suspended, press it again, all the actions will recover.
-  **Menu** : You can choose programs, massage methods, setting functions by pressing this key.
-  **Shoulder position adjustment** : Adjust the height of the back rollers by holding down button for either direction.
-  **Auto program switch** : Press this key to choose and switch between pre-saved auto programs.
-  **Direction** : You can press the up/down key to choose, and press right key to enter sub-directory, press left key to back parent directory, the OK key is for confirm selections.
-  **Leg extension position adjustment** :
 -  Leg will manually extend the length
 -  Leg will manually shorten the length
-  **Zero gravity** : Press this key to enter zero gravity position, the zero gravity icon on the display will be light up, and will turn off when you adjusting the backrest / leg part angle by manual, which will make the chair out of Zero gravity position.
-  **Position up the legrest** : By holding down this key, the leg part will lift up.
-  **Position down the legrest** : By holding down this key, the legrest will put back down.
-  **Position up the backrest** : By holding down this key, the backrest will lift up.
-  **Position down the backrest** : By holding down this key, the backrest will put back down.
-  **Heating** : Pressing this key, the heating system will be turn on, and the heating icon on the display will be light up, press it again the heating system will be turned off, and the icon turn into grey.

AUTO PROGRAMS

Press "  " button to enter "Auto program" or press menu button to enter auto program list.



Renew
New Kahuna full-body massage program with strong rhythmic 3D dimensional air squeeze techniques and moderate massage with kneading, tap, and roll techniques from neck to glutes to recharge your body. Sophisticated massage performance to covers acupuncture points to relieve tension to renew your day.



Kahuna Yoga Stretching
Inspired by yoga movements, Kahuna Yoga Stretching mode massages the spine with a sequence of rolling and kneading and intensify the stretching with pausing movements. It also has a side to side twist motion with hip airbags while it stretches full-body and areas not stretched on the daily.



Kahuna Twist Stretching
The most popular Kahuna signature auto program for full-body stretching with firm glute massage and thigh stretch. Airbags inflate to hold upper and lower body as chair changes into different positions.



Kahuna Active Stretching
The Most active stretching program that combines Kahuna & yoga stretching techniques along with unique hamstring pressure massage to target overused and tense muscles.



Kahuna SV-Chiro

Inspired by Chiropractic movements, massage begins with knocking and tapping motion to relax the muscles next to spines and rolling and kneading action expands the gaps between the spines and help better alignment of your core.



Rocking

Gentle rocking motion movements with soft full-body massage auto program that provides soft rolling technique along the back muscles to stimulate circulation with light full body air-cell massage with foot rollers that cradles you to sleep.



Sleep Mode

Daily use program with a combination of gentle roller and light air-cell massage system to promote relaxation and soothes body to help to fall asleep better. Soft transitions of kneading, rolling and rocking up and down the spine for full relief.



Anti-Stress

Strong upper body care massage program with a full motion that starts with a shoulder to head air-cell massage to blow away your tension. With deep rolling on the entire back while it fixes points in specific areas to massage acupressure points. Air-cells also squeezes waist and hip tightly to help promote better circulation. This program will be beneficial for people who have desk jobs that have a stiff neck and performs instant relief for the stressed body.



Golfer Mode

Golfer massage program focuses on lower body massage that especially targeted for tension around the hip region. Also provides stretching in pelvic and waist area by multi squeezing actions using air-cells. Air-cells on calves and foot shift side to side creating a slight twisting motion to boost overall massages.



Kahuna Twist Chiro

More active Chiro massage program that includes Kahuna Chiro movements with side to side twist motion for waist, thigh and helps better strengthen your core more actively.



All Air Mode

The New special auto program that only performs with rhythmic air-cell pressure massage system to massage full-body. Kappa equipped with 107 airbags that gradually inflate, squeeze and embrace your entire body with wave-like motion promoting blood circulation and loosens tense muscles.



Deep Tissue Massage

Intensive body care massage program that penetrates deeply into the tissues. Deep knocking and tapping roller actions on lower back and firm acupressure calf massage from air-cells to complete strong full-body care.



Dynamic

Dynamically massages with rollers along the spine that allows muscles to get flexible before work out with a variety of different sequence while stretching lumbar and glutes. Enjoyable massage anytime for your need before the active day.



Athletic

Combination of Dynamic massage program with light tapping motion that relaxes and warms up your muscles before game time.



Fast Recovery


Recovery massage program is a recommended program after the exercise. Combination of gentle kneading and tapping roller actions to relax muscles along with rhythmic air-cell massage system on full-body to promotes better circulation allowing more oxygenated blood to muscles for faster recovery and reduce possible injuries.

AIR BAG

This subdirectory is for managing the air bag system, contains part and intensity option.

Section : In this subdirectory, you can turn on / off some air bags by choose it and select the off / on button.


Intensity : This is for adjusting the air pressure intensity, offer 5 degree for option.

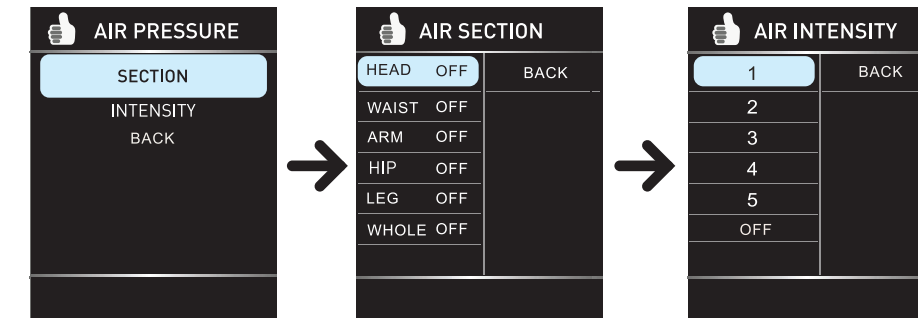

SETTING


Press "Menu" key, choose "Setting", enter the subdirectory.

Time : Setting worktime.

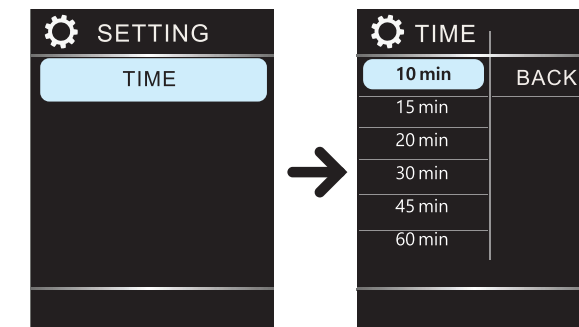


FOOT ROLLER

Choose roller, in the subdirectory, you can adjust the roller speed, offer 3 grades for option.

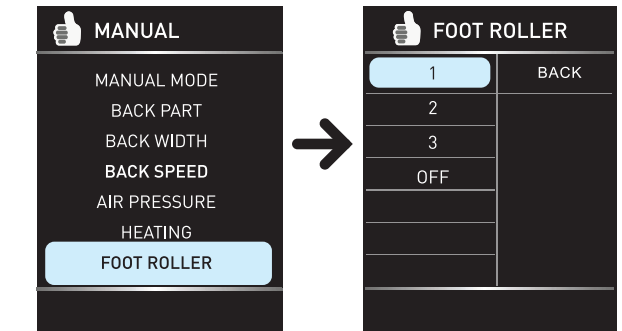

LANGUAGE

Click the "Menu" button, then choose the "Language" to start language. Use up/down key to choose, OK to confirm.

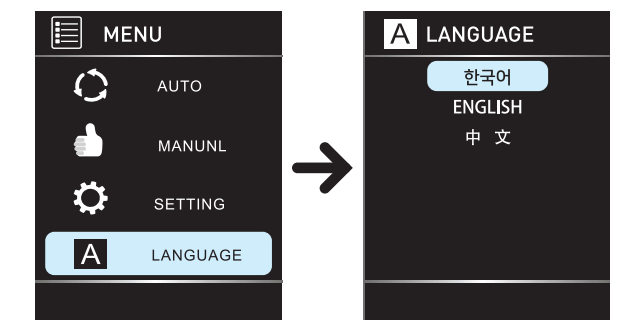

HEATING

Press "Heating" key, enter the subdirectory. Approximately mild is 30°C warm is 45°C, hot is 55°C.




MANUAL MODE

Click the "Menu" button, then choose the "Manual" to start the manual program. Use up/down key to choose, OK to confirm.


Massage method : In this subdirectory, you can use up / down key to choose. There are six massage methods: Kneading, Rolling, Knocking, Finger-p, Dual action, Tapping.

Part : This subdirectory is for back roller massage range, us up/down to choose. Offer 3 options : Full body, partial, fixed.

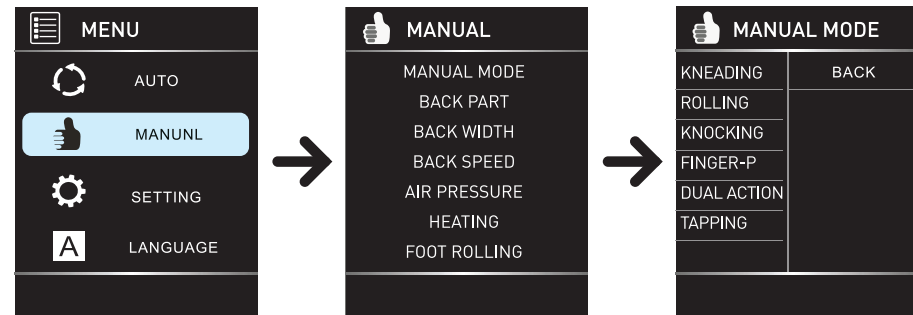

Part : This subdirectory is for adjusting the massage part of the back rollers. Offer full body, partial, fixed for the option.

Speed : This subdirectory is for adjusting the massage speed of the back rollers. Offer 6 degree for the option.

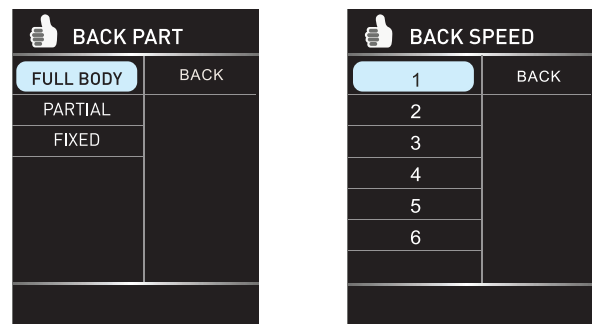


TIPS

1. Under auto / manual mode, the display will switch to the home page after 10 seconds without any operation.




Home page while under manual mode

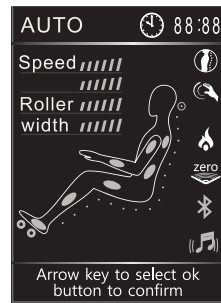

Home page while under manual mode



- During working, press "Menu" twice, it will go back to the home page immediately.
- In the home page, under the manual / auto program, press shoulder position key to adjust the highest position of the back rollers.
- Press "auto" key to choose auto program.

2. Before running the auto program, it will detect shoulder position first. After the detection, it will switch to the auto program.

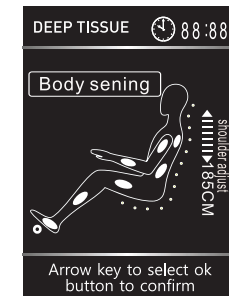


CONNECT APP & SPEAKER

1. To connect app and speaker, you must enable the audio function on Bluetooth by going into Bluetooth setting on your phone or tablet.
2. To download app, please search HM-KAPPA from app store.
3. After connecting to Bluetooth, please go to Bluetooth from the setting and choose HM-KAPPA.

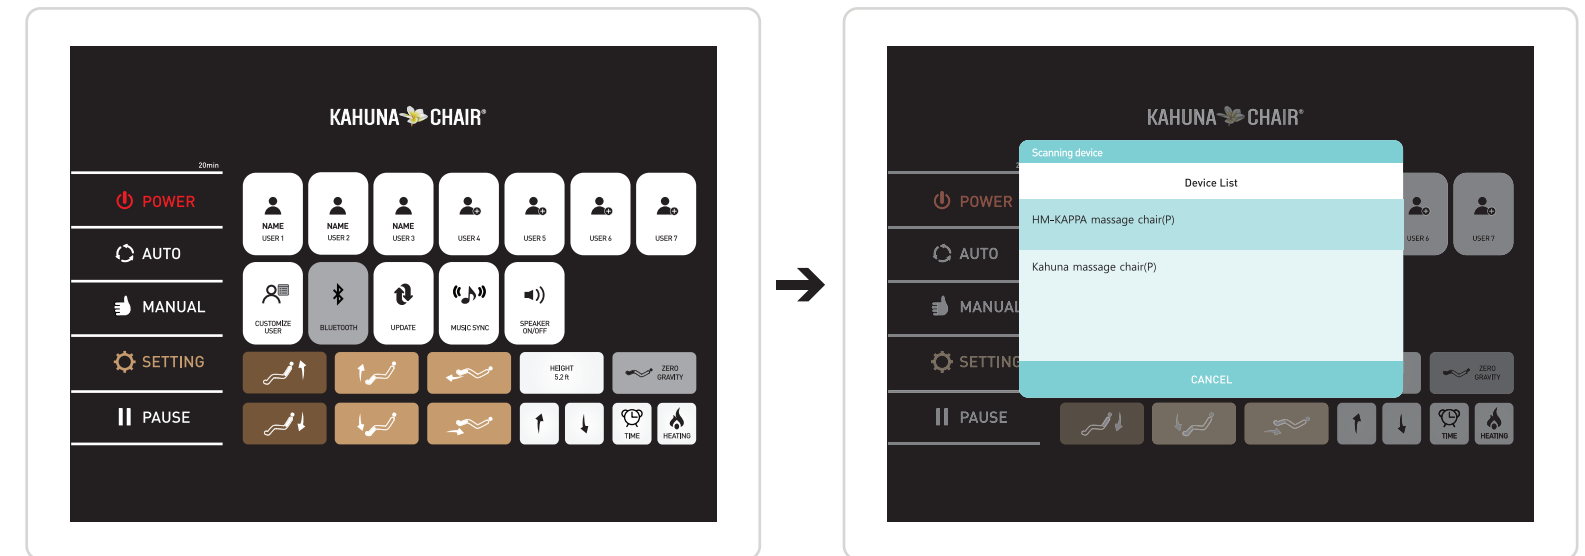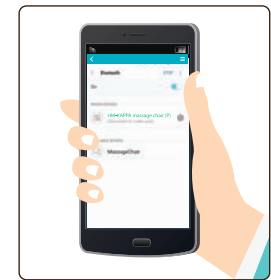


Auto Program Interface

HM-KAPPA provides 15 specially designed auto programs for different needs.

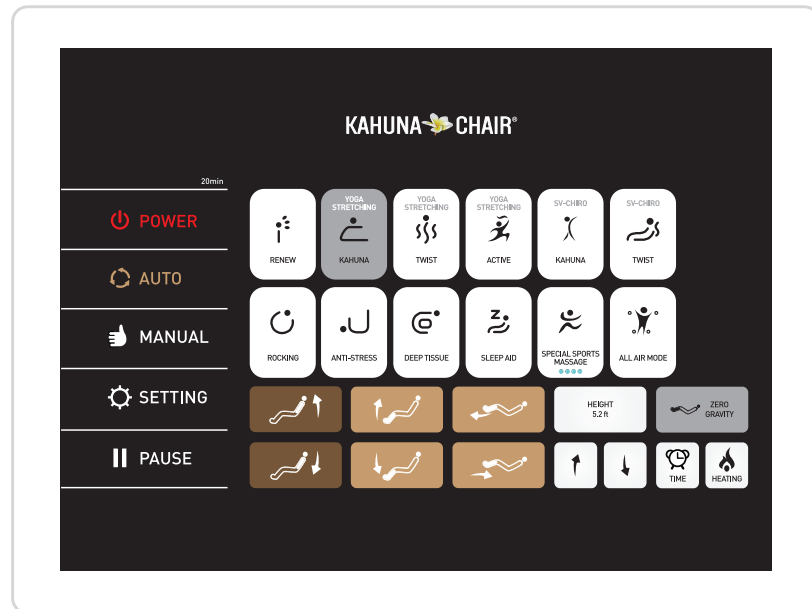


Manual Program Interface

HM-KAPPA can also do manually select massage functions and customize the massage section.

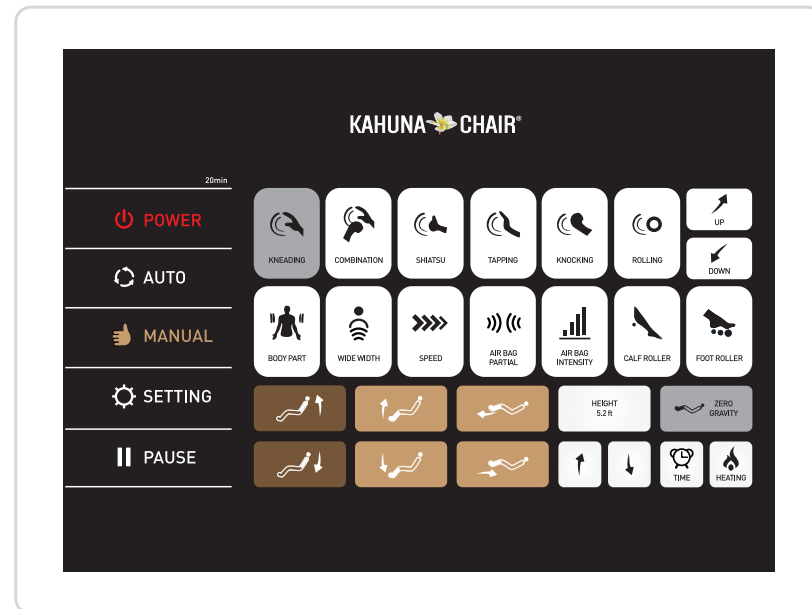

Customize User Setting


1. Select the customize user.

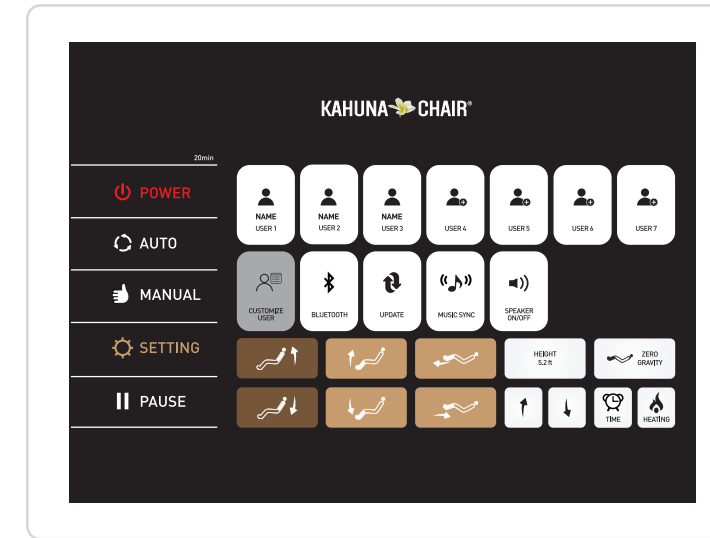

2. Select the user to choose and customize user setting.



3. Customize auto or manual programs by select the auto/manual.

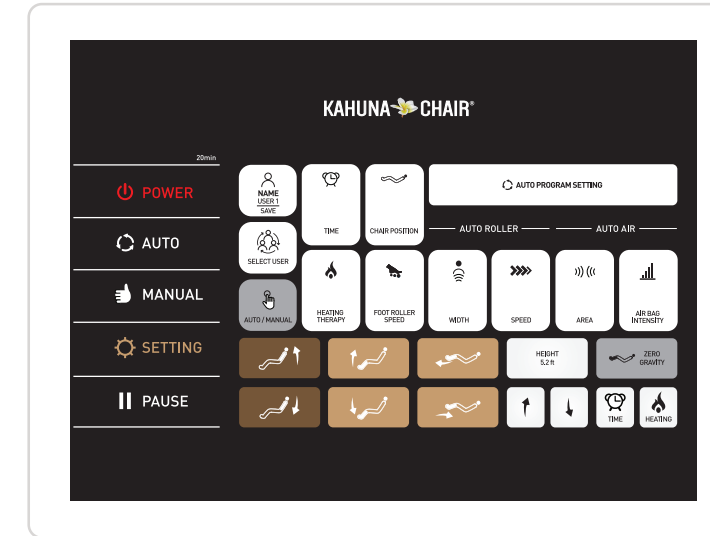

4. Press the user to save the customized setting.

