SYMMONS[®] Laundry-Mate[™]

Automatic Washing Machine Valve

W-400, W-500-B

Installation Instructions

Model Numbers

□ W-400 Valve assembly

valve assemi



W-500-B Valve assembly with enclosure




- Step 1 Sweat union ells to 1/2 inch copper tubing.
- Step 2 Screw union ells to wall.
- Step 3 Mount valve to wall.
- Step 4 Attach handle lever to valve.

Need Help?

Contact Symmons customer service at (800) 796-6667, (781) 848-2250 Email: customerservice@symmons.com Monday - Friday 7:30 am - 7:00 pm EST

Please check Symmons website for technical help, the latest product information and warranty policy at www.symmons.com/service

- Step 5 Attach water supply hoses from washing maching to valve.
- Step 6 Snap enclosure onto valve. (model W-500-B only)
- Step 7 Slide handle sleeve over end of handle lever.

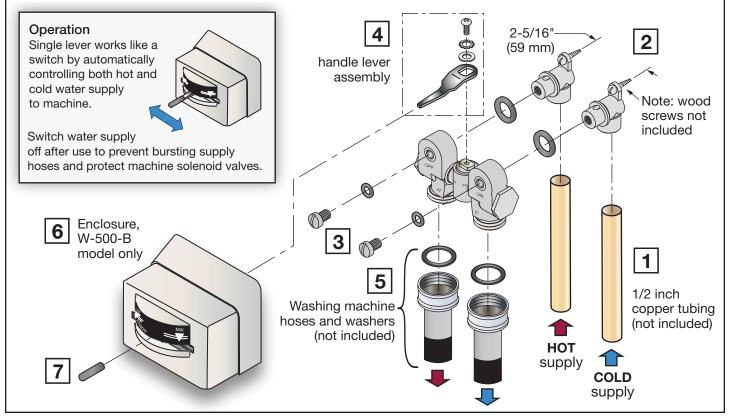

Symmons Industries, Inc. 31 Brooks Drive
Braintree, MA 02184
(800)796-6667, (781)848-2250
Fax: (800)961-9621, (781)664-1300
©2010 Symmons Industries, Inc. Printed in U.S.A.
www.symmons.com
Customerservice@symmons.com
ZV-108
122510



Model W-500-B