



INSTALLATION








Hardware parts

2 Hinge Bases, 2 Expansion Dowels, 2 Cone Nuts, 2 Cone Washers, 2 Hex Head Bolts, 1 Gasket, 2 Caps, 1 Small and 1 Large Hex Wrench

Adjustment note: The force required to lift off the seat is set at the factory, however, dirt build up or other factors can change the force to lift off the seat to change. Using the small hex wrench turn the hex nut on either side of the hinge base. Turn right to increase removal force and turn to the left to decrease removal force.

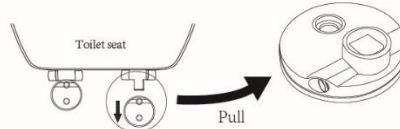

* Remove Hinge Base from the toilet seat

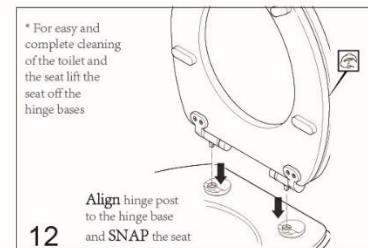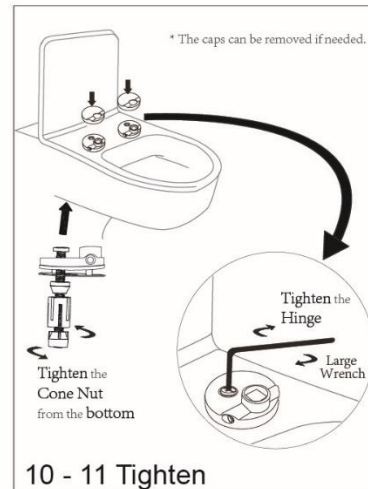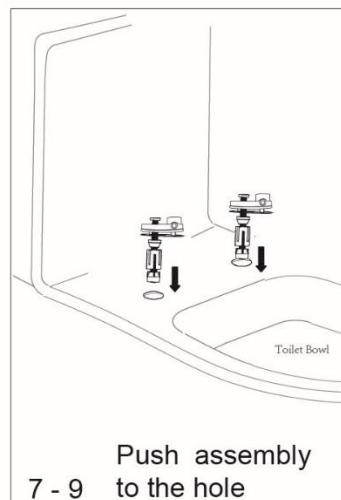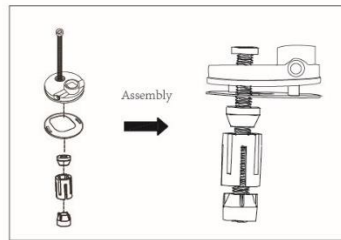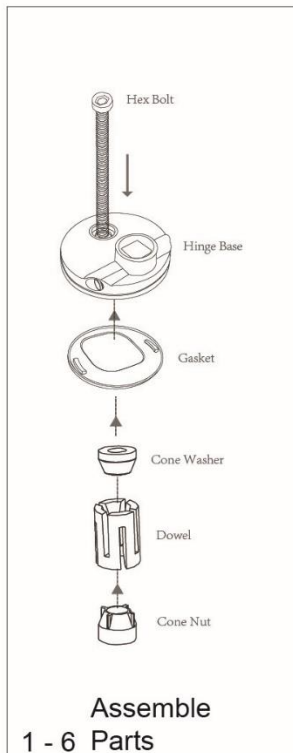

1. Remove two Hinge Bases from the seat .
2. The Hex Bolt goes through the Hinge Base.
3. Put the Cone Washer from the bottom of the bolt.
4. Put the Dowel from the bottom of the bolt.
5. Put the Cone Nut from the bottom of the bolt and turn it to the right slightly to stay to the bolt.

6. Put the Gasket on the bottom of the the Hinge Base as shown.
7. When all components are assembled, push them through the mounting hole.
8. Tighten the Cone Nut by turning to the right with your hand.
9. Repeat the other hinge and components. Step 1 - 8

10. On both hinges use the short shaft of the large hex wrench to further tighten the bolt until you cannot turn the bolt any more. Prevent the base from rotating with your other hand for alignment.
11. Place the chrome Caps on each hinge.
12. To finish the installation, align the square hinge posts to the holes in the Hinge Bases, push down to SNAP the seat in place.

Check links for installation!
<https://www.youtube.com/watch?v=RmVHWq25puo>
<https://www.topseatusa.com> or
<https://www.topseat.com>

TOPSEAT Toilet Seat Cleaning

Toilet seats should be cleaned using mild hand soap and water. Antibacterial hand soap or dish soap can be used to fight against germs. Do not use bleach, pine oils, essential oils, chlorine, acid, scouring powders, detergents, disinfectants, or products in aerosol cans. Harsh chemicals can damage the paint finish, bumpers, and the metal finish on hinges. This can create a dull look on plastic toilet seats and a dirty worn-away look on molded wood seats as well as corrosion and peeling of the metal hinge finish. The bumpers may change color or become weakened such that they fail under compression.