


# Operator's Manual

# **EAGLE™ 10,000 PLUS**



For use with machines having Code Numbers:  
**13414**

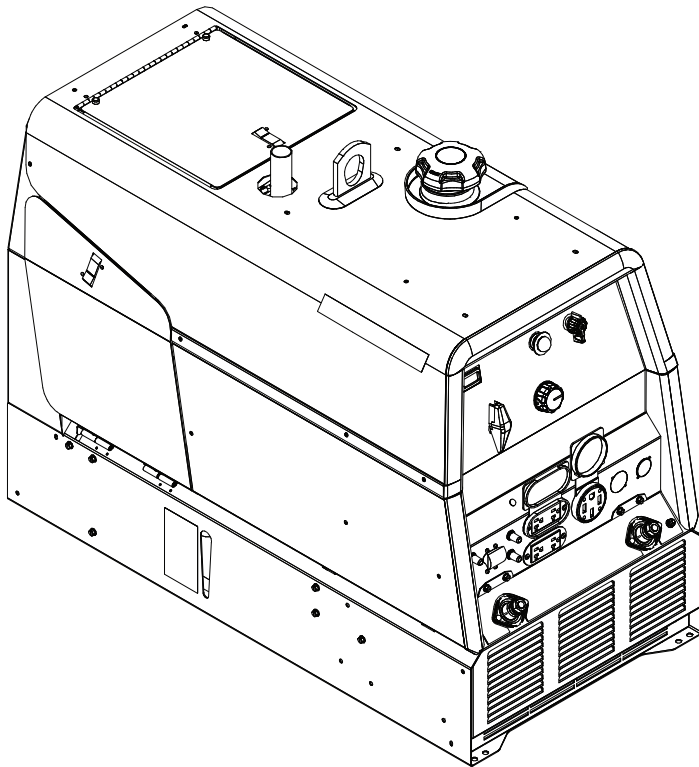

**Register your machine:**  
[www.lincolnelectric.com/register](http://www.lincolnelectric.com/register)

**Authorized Service and Distributor Locator:**  
[www.lincolnelectric.com/locator](http://www.lincolnelectric.com/locator)

**Save for future reference**

Date Purchased

Code: (ex: 10859)

Serial: (ex: U1060512345)

**Need Help? Call 1.888.935.3877**  
to talk to a Service Representative

**Hours of Operation:**  
8:00 AM to 6:00 PM (ET) Mon. thru Fri.

**After hours?**  
Use "Ask the Experts" at [lincolnelectric.com](http://lincolnelectric.com)  
A Lincoln Service Representative will contact you  
no later than the following business day.

**For Service outside the USA:**  
Email: [globalservice@lincolnelectric.com](mailto:globalservice@lincolnelectric.com)

# THANK YOU FOR SELECTING A QUALITY PRODUCT BY LINCOLN ELECTRIC.

## PLEASE EXAMINE CARTON AND EQUIPMENT FOR DAMAGE IMMEDIATELY

When this equipment is shipped, title passes to the purchaser upon receipt by the carrier. Consequently, claims for material damaged in shipment must be made by the purchaser against the transportation company at the time the shipment is received.

## SAFETY DEPENDS ON YOU

Lincoln arc welding and cutting equipment is designed and built with safety in mind. However, your overall safety can be increased by proper installation ... and thoughtful operation on your part. **DO NOT INSTALL, OPERATE OR REPAIR THIS EQUIPMENT WITHOUT READING THIS MANUAL AND THE SAFETY PRECAUTIONS CONTAINED THROUGHOUT.** And, most importantly, think before you act and be careful.

### **WARNING**

This statement appears where the information must be followed exactly to avoid serious personal injury or loss of life.

### **CAUTION**

This statement appears where the information must be followed to avoid minor personal injury or damage to this equipment.



## KEEP YOUR HEAD OUT OF THE FUMES.

**DON'T** get too close to the arc. Use corrective lenses if necessary to stay a reasonable distance away from the arc.

**READ** and obey the Safety Data Sheet (SDS) and the warning label that appears on all containers of welding materials.

**USE ENOUGH VENTILATION** or exhaust at the arc, or both, to keep the fumes and gases from your breathing zone and the general area.

**IN A LARGE ROOM OR OUTDOORS**, natural ventilation may be adequate if you keep your head out of the fumes (See below).

**USE NATURAL DRAFTS** or fans to keep the fumes away from your face.

If you develop unusual symptoms, see your supervisor. Perhaps the welding atmosphere and ventilation system should be checked.



## WEAR CORRECT EYE, EAR & BODY PROTECTION

**PROTECT** your eyes and face with welding helmet properly fitted and with proper grade of filter plate (See ANSI Z49.1).

**PROTECT** your body from welding spatter and arc flash with protective clothing including woolen clothing, flame-proof apron and gloves, leather leggings, and high boots.

**PROTECT** others from splatter, flash, and glare with protective screens or barriers.

**IN SOME AREAS**, protection from noise may be appropriate.

**BE SURE** protective equipment is in good condition.

Also, wear safety glasses in work area **AT ALL TIMES.**



## SPECIAL SITUATIONS

**DO NOT WELD OR CUT** containers or materials which previously had been in contact with hazardous substances unless they are properly cleaned. This is extremely dangerous.

**DO NOT WELD OR CUT** painted or plated parts unless special precautions with ventilation have been taken. They can release highly toxic fumes or gases.

## Additional precautionary measures

**PROTECT** compressed gas cylinders from excessive heat, mechanical shocks, and arcs; fasten cylinders so they cannot fall.

**BE SURE** cylinders are never grounded or part of an electrical circuit.

**REMOVE** all potential fire hazards from welding area.

**ALWAYS HAVE FIRE FIGHTING EQUIPMENT READY FOR IMMEDIATE USE AND KNOW HOW TO USE IT.**



## SECTION A: WARNINGS



### CALIFORNIA PROPOSITION 65 WARNINGS



**WARNING:** Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an exposed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel)

**WARNING:** This product, when used for welding or cutting, produces fumes or gases which contain chemicals known to the State of California to cause birth defects and, in some cases, cancer. (California Health & Safety Code § 25249.5 *et seq.*)



**WARNING:** Cancer and Reproductive Harm  
[www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

**ARC WELDING CAN BE HAZARDOUS. PROTECT YOURSELF AND OTHERS FROM POSSIBLE SERIOUS INJURY OR DEATH. KEEP CHILDREN AWAY. PACEMAKER WEARERS SHOULD CONSULT WITH THEIR DOCTOR BEFORE OPERATING.**

Read and understand the following safety highlights. For additional safety information, it is strongly recommended that you purchase a copy of "Safety in Welding & Cutting - ANSI Standard Z49.1" from the American Welding Society, P.O. Box 351040, Miami, Florida 33135 or CSA Standard W117.2. A Free copy of "Arc Welding Safety" booklet E205 is available from the Lincoln Electric Company, 22801 St. Clair Avenue, Cleveland, Ohio 44117-1199.

**BE SURE THAT ALL INSTALLATION, OPERATION, MAINTENANCE AND REPAIR PROCEDURES ARE PERFORMED ONLY BY QUALIFIED INDIVIDUALS.**



### FOR ENGINE POWERED EQUIPMENT.

- Turn the engine off before troubleshooting and maintenance work unless the maintenance work requires it to be running.
- Operate engines in open, well-ventilated areas or vent the engine exhaust fumes outdoors.
- Do not add the fuel near an open flame welding arc or when the engine is running. Stop the engine and allow it to cool before refueling to prevent spilled fuel from vaporizing on contact



with hot engine parts and igniting. Do not spill fuel when filling tank. If fuel is spilled, wipe it up and do not start engine until fumes have been eliminated.

- Keep all equipment safety guards, covers and devices in position and in good repair. Keep hands, hair, clothing and tools away from V-belts, gears, fans and all other moving parts when starting, operating or repairing equipment.
- In some cases it may be necessary to remove safety guards to perform required maintenance. Remove guards only when necessary and replace them when the maintenance requiring their removal is complete. Always use the greatest care when working near moving parts.
- Do not put your hands near the engine fan. Do not attempt to override the governor or idler by pushing on the throttle control rods while the engine is running.
- To prevent accidentally starting gasoline engines while turning the engine or welding generator during maintenance work, disconnect the spark plug wires, distributor cap or magneto wire as appropriate.
- To avoid scalding, do not remove the radiator pressure cap when the engine is hot.
- Using a generator indoors CAN KILL YOU IN MINUTES.
- Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.
- NEVER use inside a home or garage, EVEN IF doors and windows are open.
- Only use OUTSIDE and far away from windows, doors and vents.
- Avoid other generator hazards. READ MANUAL BEFORE USE.



### ELECTRIC AND MAGNETIC FIELDS MAY BE DANGEROUS



- Electric current flowing through any conductor causes localized Electric and Magnetic Fields (EMF). Welding current creates EMF fields around welding cables and welding machines
- EMF fields may interfere with some pacemakers, and welders having a pacemaker should consult their physician before welding.
- Exposure to EMF fields in welding may have other health effects which are now not known.
- All welders should use the following procedures in order to minimize exposure to EMF fields from the welding circuit:
  - Route the electrode and work cables together - Secure them with tape when possible.
  - Never coil the electrode lead around your body.
  - Do not place your body between the electrode and work cables. If the electrode cable is on your right side, the work cable should also be on your right side.
  - Connect the work cable to the workpiece as close as possible to the area being welded.
  - Do not work next to welding power source.



## ELECTRIC SHOCK CAN KILL.



- 3.a. The electrode and work (or ground) circuits are electrically “hot” when the welder is on. Do not touch these “hot” parts with your bare skin or wet clothing. Wear dry, hole-free gloves to insulate hands.
- 3.b. Insulate yourself from work and ground using dry insulation. Make certain the insulation is large enough to cover your full area of physical contact with work and ground.

**In addition to the normal safety precautions, if welding must be performed under electrically hazardous conditions (in damp locations or while wearing wet clothing; on metal structures such as floors, gratings or scaffolds; when in cramped positions such as sitting, kneeling or lying, if there is a high risk of unavoidable or accidental contact with the workpiece or ground) use the following equipment:**

- Semiautomatic DC Constant Voltage (Wire) Welder.
  - DC Manual (Stick) Welder.
  - AC Welder with Reduced Voltage Control.
- 3.c. In semiautomatic or automatic wire welding, the electrode, electrode reel, welding head, nozzle or semiautomatic welding gun are also electrically “hot”.
  - 3.d. Always be sure the work cable makes a good electrical connection with the metal being welded. The connection should be as close as possible to the area being welded.
  - 3.e. Ground the work or metal to be welded to a good electrical (earth) ground.
  - 3.f. Maintain the electrode holder, work clamp, welding cable and welding machine in good, safe operating condition. Replace damaged insulation.
  - 3.g. Never dip the electrode in water for cooling.
  - 3.h. Never simultaneously touch electrically “hot” parts of electrode holders connected to two welders because voltage between the two can be the total of the open circuit voltage of both welders.
  - 3.i. When working above floor level, use a safety belt to protect yourself from a fall should you get a shock.
  - 3.j. Also see Items 6.c. and 8.



## ARC RAYS CAN BURN.



- 4.a. Use a shield with the proper filter and cover plates to protect your eyes from sparks and the rays of the arc when welding or observing open arc welding. Headshield and filter lens should conform to ANSI Z87.1 standards.
- 4.b. Use suitable clothing made from durable flame-resistant material to protect your skin and that of your helpers from the arc rays.
- 4.c. Protect other nearby personnel with suitable, non-flammable screening and/or warn them not to watch the arc nor expose themselves to the arc rays or to hot spatter or metal.



## FUMES AND GASES CAN BE DANGEROUS.



- 5.a. Welding may produce fumes and gases hazardous to health. Avoid breathing these fumes and gases. When welding, keep your head out of the fume. Use enough ventilation and/or exhaust at the arc to keep fumes and gases away from the breathing zone. **When welding hardfacing (see instructions on container or SDS) or on lead or cadmium plated steel and other metals or coatings which produce highly toxic fumes, keep exposure as low as possible and within applicable OSHA PEL and ACGIH TLV limits using local exhaust or mechanical ventilation unless exposure assessments indicate otherwise. In confined spaces or in some circumstances, outdoors, a respirator may also be required. Additional precautions are also required when welding on galvanized steel.**
- 5.b. The operation of welding fume control equipment is affected by various factors including proper use and positioning of the equipment, maintenance of the equipment and the specific welding procedure and application involved. Worker exposure level should be checked upon installation and periodically thereafter to be certain it is within applicable OSHA PEL and ACGIH TLV limits.
- 5.c. Do not weld in locations near chlorinated hydrocarbon vapors coming from degreasing, cleaning or spraying operations. The heat and rays of the arc can react with solvent vapors to form phosgene, a highly toxic gas, and other irritating products.
- 5.d. Shielding gases used for arc welding can displace air and cause injury or death. Always use enough ventilation, especially in confined areas, to insure breathing air is safe.
- 5.e. Read and understand the manufacturer’s instructions for this equipment and the consumables to be used, including the Safety Data Sheet (SDS) and follow your employer’s safety practices. SDS forms are available from your welding distributor or from the manufacturer.
- 5.f. Also see item 1.b.



## WELDING AND CUTTING SPARKS CAN CAUSE FIRE OR EXPLOSION.



- 6.a. Remove fire hazards from the welding area. If this is not possible, cover them to prevent the welding sparks from starting a fire. Remember that welding sparks and hot materials from welding can easily go through small cracks and openings to adjacent areas. Avoid welding near hydraulic lines. Have a fire extinguisher readily available.
- 6.b. Where compressed gases are to be used at the job site, special precautions should be used to prevent hazardous situations. Refer to "Safety in Welding and Cutting" (ANSI Standard Z49.1) and the operating information for the equipment being used.
- 6.c. When not welding, make certain no part of the electrode circuit is touching the work or ground. Accidental contact can cause overheating and create a fire hazard.
- 6.d. Do not heat, cut or weld tanks, drums or containers until the proper steps have been taken to insure that such procedures will not cause flammable or toxic vapors from substances inside. They can cause an explosion even though they have been "cleaned". For information, purchase "Recommended Safe Practices for the Preparation for Welding and Cutting of Containers and Piping That Have Held Hazardous Substances", AWS F4.1 from the American Welding Society (see address above).
- 6.e. Vent hollow castings or containers before heating, cutting or welding. They may explode.
- 6.f. Sparks and spatter are thrown from the welding arc. Wear oil free protective garments such as leather gloves, heavy shirt, cuffless trousers, high shoes and a cap over your hair. Wear ear plugs when welding out of position or in confined places. Always wear safety glasses with side shields when in a welding area.
- 6.g. Connect the work cable to the work as close to the welding area as practical. Work cables connected to the building framework or other locations away from the welding area increase the possibility of the welding current passing through lifting chains, crane cables or other alternate circuits. This can create fire hazards or overheat lifting chains or cables until they fail.
- 6.h. Also see item 1.c.
- 6.i. Read and follow NFPA 51B "Standard for Fire Prevention During Welding, Cutting and Other Hot Work", available from NFPA, 1 Batterymarch Park, PO box 9101, Quincy, MA 022690-9101.
- 6.j. Do not use a welding power source for pipe thawing.



## CYLINDER MAY EXPLODE IF DAMAGED.



- 7.a. Use only compressed gas cylinders containing the correct shielding gas for the process used and properly operating regulators designed for the gas and pressure used. All hoses, fittings, etc. should be suitable for the application and maintained in good condition.
- 7.b. Always keep cylinders in an upright position securely chained to an undercarriage or fixed support.
- 7.c. Cylinders should be located:
  - Away from areas where they may be struck or subjected to physical damage.
  - A safe distance from arc welding or cutting operations and any other source of heat, sparks, or flame.
- 7.d. Never allow the electrode, electrode holder or any other electrically "hot" parts to touch a cylinder.
- 7.e. Keep your head and face away from the cylinder valve outlet when opening the cylinder valve.
- 7.f. Valve protection caps should always be in place and hand tight except when the cylinder is in use or connected for use.
- 7.g. Read and follow the instructions on compressed gas cylinders, associated equipment, and CGA publication P-1, "Precautions for Safe Handling of Compressed Gases in Cylinders," available from the Compressed Gas Association, 14501 George Carter Way Chantilly, VA 20151.



## FOR ELECTRICALLY POWERED EQUIPMENT.



- 8.a. Turn off input power using the disconnect switch at the fuse box before working on the equipment.
- 8.b. Install equipment in accordance with the U.S. National Electrical Code, all local codes and the manufacturer's recommendations.
- 8.c. Ground the equipment in accordance with the U.S. National Electrical Code and the manufacturer's recommendations.

**Refer to**  
**<http://www.lincolnelectric.com/safety>**  
**for additional safety information.**

# EPA EMISSION CONTROL WARRANTY STATEMENT

New small off road engines (SOREs) must be designed, built, and equipped to meet the EPA's anti-smog standards. The Lincoln Electric Company must warrant the emission control system on your small off road engine for 2 years from the date of purchase to the ultimate purchaser, provided there has been no abuse, neglect, or improper maintenance of your small off road engine. The emission control system warranty is extended to the original owner and all subsequent owners.

Your emission control system may include parts such as:

- (1) Fuel Metering System
  - a. Carburetor and internal parts (and/or pressure regulator or fuel injection system).
  - b. Air-fuel ratio feedback and control system.
  - c. Cold start enrichment system.
- (2) Air Induction System
  - a. Controlled hot air intake system.
  - b. Intake manifold.
  - c. Air filter.
- (3) Ignition System
  - a. Spark plugs.
  - b. Magneto or electronic ignition system.
  - c. Spark advance/retard system.
- (4) Exhaust Gas Recirculation (EGR) System
  - a. EGR valve body, and carburetor spacer if applicable.
  - b. EGR rate feedback and control system.
- (5) Air Injection System
  - a. Air pump or pulse valve.
  - b. Valves affecting distribution of flow.
  - c. Distribution manifold.
- (6) Catalyst or Thermal Reactor System
  - a. Catalytic converter.
  - b. Thermal reactor.
  - c. Exhaust manifold.
- (7) Particulate Controls
  - a. Traps, filters, precipitators, and any other device used to capture particulate emissions.
- (8) Miscellaneous Items Used in Above Systems
  - a. Vacuum, temperature, and time sensitive valves and switches
  - b. Electronic controls.
  - c. Hoses, belts, connectors, and assemblies.

## **MANUFACTURER'S WARRANTY COVERAGE:**

The engine is warranted for 2 years for certain emission-related parts (defined below). Defective parts will be repaired or replaced by one our Lincoln Electric Authorized Repair Facilities.

## **OWNER'S WARRANTY RESPONSIBILITIES:**

- As the small off road engine owner, you are responsible for the performance of the required maintenance listed in section D within this manual. The Lincoln Electric Company recommends that you retain all receipts covering maintenance items listed in section D, however, The Lincoln Electric Company cannot deny warranty solely for the lack of receipts or failure to ensure the performance of all scheduled maintenance.

- As the small off road engine owner, you should be aware that The Lincoln Electric Company may deny you warranty coverage if your small off road engine or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.
- You are responsible for presenting your small off road engine to a Lincoln Electric Authorized Service Facility as soon as a problem exists. For owners located more than 100 miles from an authorized service center, Lincoln Electric, at its sole choice and discretion, will either pay for shipping costs to and from an authorized service center, provide for a service technician to come to the owner to make the warranty repair, or pay for the repair to be made at a local nonauthorized service center. The provision only applies to owners located in the contiguous United States, excluding the states with high-altitude areas identified in 40 CFR part 1068, Appendix III. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. Should you need assistance or have questions concerning The Lincoln Electric Company's Warranty Statement, you can contact our Customer Service Department at 1-888-935-3877 or online at [www.lincolnelectric.com](http://www.lincolnelectric.com).

## EPA EMISSIONS DEFECT WARRANTY EXPLANATION

### WHAT DOES THIS WARRANTY COVER?

The Lincoln Electric Company warrants that your small off the road engine was designed and manufactured to conform with applicable EPA (exhaust) emissions standards and that your small off road engine will be free from defects in material and workmanship that would cause it to fail within the first 2 years of ownership.

### HOW WILL A COVERED PART BE CORRECTED?

If there is a defect in a part covered by this warranty, a Lincoln Electric Authorized Service Facility will correct the defect free of charge.

### WHAT PARTS ARE COVERED BY THE EPA EMISSIONS DEFECT WARRANTY?

- Any emission related part (defined below) not scheduled for "required maintenance" (See Section D MAINTENANCE) will be repaired or replaced within the warranty period.
- Any emission related part scheduled for replacement during "required maintenance" (See Section D, MAINTENANCE) is warrantied for the period of time prior to the first scheduled replacement for that part. Any such part repaired or replaced under warranty shall be warrantied for the remainder of the period prior to the first scheduled replacement for that part.
- Any manufacturer-approved replacement part may be used in the performance of any warranty maintenance or repairs on emission related parts, and must be provided without charge if the part is still under warranty.
- Any replacement part that is equivalent in performance and durability may be used in non-warranty maintenance or repairs, and shall not reduce the warranty obligations of the manufacturer.
- The Owner is responsible for the performance of the required maintenance described in section D.

### EMISSION RELATED WARRANTIED PARTS:

- Choke
- Carburetor
- Air Filter
- Electronic Ignition System
- Catalytic Converter/Muffler Assembly
- Spark Plug

### WHAT IS NOT COVERED BY THE EPA ENGINE EMISSIONS DEFECT WARRANTY?

- Any failure caused by abuse, neglect, or improper maintenance
- Any failure caused by unapproved modification or use of unapproved accessories

<b>INSTALLATION .....</b>	<b>SECTION A</b>
TECHNICAL SPECIFICATIONS.....	A-1
SAFETY PRECAUTIONS.....	A-2
MACHINE GROUNDING.....	A-2
SPARK ARRESTER.....	A-2
TOWING.....	A-2
VEHICLE MOUNTING.....	A-3
PRE-OPERATION ENGINE SERVICE.....	A-3
FUEL, OIL, BATTERY CONNECTIONS.....	A-3
WELDING CABLE CONNECTIONS.....	A-4
ANGLE OF OPERATION.....	A-4
LIFTING, ADDITIONAL SAFETY PRECAUTIONS.....	A-4
HIGH ALTITUDE OPERATION.....	A-4
MUFFLER OUTLET PIPE .....	A-4
LOCATION AND VENTILATION.....	A-5
STACKING.....	A-5
CONNECTION OF TIG MODULE.....	A-5
ADDITIONAL SAFETY PRECAUTIONS.....	A-5
WELDING OPERATION OUTPUT, AUXILIARY POWER RECEPTACLES, AND PLUGS.....	A-6
MOTOR STARTING AND EXTENSION CORD LENGTH TABLE.....	A-6
ELECTRICAL DEVICE USED WITH THE EAGLE 10000 PLUS.....	A-7
AUXILIARY POWER WHILE WELDING, STANDBY POWER CONNECTIONS.....	A-8
PREMISES WELDING.....	A-9
<b>OPERATION .....</b>	<b>SECTION B</b>
SAFETY PRECAUTIONS.....	B-1
GENERAL DESCRIPTION.....	B-1
WELDER CONTROLS FUNCTIONS AND OPERATION .....	B-1
RANGE, POLARITY CONTROL SWITCH AND FUEL CONSUMPTION.....	B-2
START IN/SHUTDOWN INSTRUCTIONS.....	B-3
STARTING THE ENGINE.....	B-3
SAFETY PRECAUTIONS.....	B-3
STOPPING THE ENGINE.....	B-3
BREAK-IN PERIOD.....	B-3
WELDING PROCESS.....	B-4
STICK (CONSTANT CURRENT) WELDING.....	B-4
SCRATCH START TIG (CONSTANT CURRENT) WEIDING .....	B-4
ARC GOUGING.....	B-5
SUMMARY OF WELDING PROCESS .....	B-5
<b>ACCESSORIES .....</b>	<b>SECTION C</b>
<b>MAINTENANCE.....</b>	<b>SECTION D</b>
OIL AND OIL FILTER CHANGE .....	D-1
AIR FILTER CHANGE .....	D-1
FUEL FILTER .....	D-1
SPARK PLUG SERVCING .....	D-2
ENGINE SPEED ADJUSTMENT .....	D-2
BATTERY MAINTENANCE.....	D-2
SPARK ARRESTOR SERVICING.....	D-3
STORAGE .....	D-3
WELDER GENERATOR MAINTENANCE.....	D-3
BRUSH REMOVAL AND REPLACEMENT .....	D-3
<b>TROUBLESHOOTING .....</b>	<b>SECTION E</b>
<b>DIAGRAMS .....</b>	<b>SECTION G</b>
<b>PARTS LIST.....</b>	<b>PARTS.LINCOLNELECTRIC.COM</b>

CONTENT/DETAILS MAY BE CHANGED OR UPDATED WITHOUT NOTICE. FOR MOST CURRENT INSTRUCTION MANUALS, GO TO PARTS.LINCOLNELECTRIC.COM



**TECHNICAL SPECIFICATIONS -  
EAGLE 10,000 PLUS (K2343-4)**

<b>INPUT - GASOLINE ENGINE</b>						
<b>Make/Model</b>	<b>Description</b>	<b>Horsepower</b>	<b>Operating Speed (RPM)</b>	<b>Displacement cu. in. (cu.cm.)</b>	<b>Starting System</b>	<b>Capacities</b>
Lincoln GV750™	2 Cylinder 4 Cycle Air-Cooled Gasoline Engine. Aluminum Alloy with Cast Iron Liners Electronic Ignition	22 HP @ 3600 RPM	High Idle 3700  Full Load 3500  Low Idle 2400	45.8 (750)	12VDC Battery Electric Start Group 99 Battery (can use group 58 batteries for replacement) (410 Cold Cranking Amps)	Fuel: 12 Gal (45.4 L)  Lubricating Oil: 1.5 Qts (1.5 L)

<b>RATED OUTPUT @ 104°F (40°C)- WELDER</b>	
<b>Welding Output</b>	
DC Constant Current 225A / 25V / 40%	
DC Constant Current 210A / 25V / 100%	

<b>RATED OUTPUT @ 104°F (40°C)- GENERATOR</b>	
<b>Auxiliary Power<sup>1</sup></b>	
9,000 Watts Continuous, 60 Hz AC	
10,500 Watts Surge, 60 Hz AC	
120/240 Volts	

<b>RECEPTACLES AND CIRCUIT BREAKERS</b>		
<b>RECEPTACLES</b>	<b>AUXILIARY POWER CIRCUIT BREAKER</b>	<b>BATTERY CHARGING CIRCUIT BREAKER</b>
(2) 120VAC Duplex (5-20R) (1) 120/240VAC Dual Voltage Full KVA (14-50R)	Two 20AMP for Two Duplex Receptacle (1) 40AMP for Dual Voltage (2-pole)	15AMP for Engine Battery Charging Circuit

<b>PHYSICAL DIMENSIONS</b>			
<b>HEIGHT</b>	<b>WIDTH</b>	<b>DEPTH</b>	<b>MODEL / WEIGHT</b>
30.00** in. 762.0 mm	21.50 in 546.0 mm	42.25 in. 1073.0 mm	539 lbs. (244 kg.)
** Top of enclosure, add 6.00"(152mm) for exhaust.			

<b>ENGINE COMPONENTS</b>			
<b>LUBRICATION</b>	<b>VALVE LIFTERS</b>	<b>FUEL SYSTEM</b>	<b>GOVERNOR</b>
Full Pressure with Full Flow Filter	Mechanical	Vacuum Pulse Fuel Pump	Mechanical Governor
<b>AIR CLEANER</b>	<b>ENGINE IDLER</b>	<b>MUFFLER</b>	<b>ENGINE PROTECTION</b>
Low Restriction	Automatic Idler	Low noise Muffler: Top outlet can be rotated. Made from long life, aluminized steel.	Shutdown on low oil pressure.

<sup>1</sup> Output rating in watts is equivalent to volt - amperes at unity factor. Output voltage is within +/-10% at all loads up to rated capacity. When welding available auxiliary power will be reduced.

## SAFETY PRECAUTIONS

Only qualified personnel should install, use, or service this equipment.

### WARNING

Do not attempt to use this equipment until you have thoroughly read the engine manufacturer's manual supplied with your welder. It includes important safety precautions, detailed engine starting, operating and maintenance instructions, and parts lists.

#### ELECTRIC SHOCK can kill.

- Do not touch electrically live parts or electrode with skin or wet clothing.
- Insulate yourself from work and ground
- Always wear dry insulating gloves.



#### ENGINE EXHAUST can kill.

- Use in open, well ventilated areas or vent exhaust outside.



#### MOVING PARTS can injure.

- Do not operate with doors open or guards off.
- Stop engine before servicing.
- Keep away from moving parts.



See additional warning information at front of this operator's manual.

### MACHINE GROUNDING

Because this portable engine driven welder or generator creates it's own power, it is not necessary to connect it's frame to an earth ground, unless the machine is connected to premises wiring (your home, shop, etc.).

### WARNING


To prevent dangerous electric shock, other equipment to which this engine driven welder supplies power must:

- be grounded to the frame of the welder using a grounded type plug, or be double insulated.

Do not ground the machine to a pipe that carries explosive or combustible material.

When this welder is mounted on a truck or trailer, it's frame must be electrically bonded to the metal frame of the vehicle. Use a #8 or larger copper wire connected between the machine grounding stud and the frame of the vehicle.

Where this engine driven welder is connected to premises wiring such as that in your home or shop, it's frame must be connected to the system earth ground. See further connection instructions in the section entitled "Standby Power Connections", as well as the article on grounding in the latest National Electrical Code and the local guide.

In general, if the machine is to be grounded, it should be connected with a #8 or larger copper wire to a solid earth ground such as a metal water pipe going into the ground for at least ten feet and having no insulated joints, or to the metal framework of a building which has been effectively grounded. The National Electrical Code lists a number of alternate means of grounding electrical equipment. A machine grounding stud marked with the symbol  is provided on the front of the welder.

### SPARK ARRESTER

Some federal, state, or local laws may require that gasoline engines be equipped with exhaust spark arresters when they are operated in certain locations where unarrested sparks may present a fire hazard. The standard muffler included with this welder does not qualify as a spark arrester. When required by local regulations, the K1898-1 spark arrester must be installed and properly maintained.

### CAUTION

An incorrect arrester may lead to damage to the engine or adversely affect performance.

### TOWING

The recommended trailer for use with this equipment for road, in-plant and yard towing by a vehicle<sup>(1)</sup> is Lincoln's K2635-1. If the user adapts a non-Lincoln trailer, he must assume responsibility that the method of attachment and usage does not result in a safety hazard nor damage the welding equipment. Some of the factors to be considered are as follows:

1. Design capacity of trailer vs. weight of Lincoln equipment and likely additional attachments.
2. Proper support of, and attachment to, the base of the welding equipment so there will be no undue stress to the framework.
3. Proper placement of the equipment on the trailer to insure stability side to side and front to back when being moved and when standing by itself while being operated or serviced.
4. Typical conditions of use, i.e., travel speed; roughness of surface on which the trailer will be operated; environmental conditions.
5. Conformance with federal, state and local laws<sup>(1)</sup>

(1) Consult applicable federal, state and local laws regarding specific requirements for use on public highways.

VEHICLE MOUNTING

**⚠ WARNING**

Improperly mounted concentrated loads may cause unstable vehicle handling and tires or other components to fail.

- Only transport this Equipment on serviceable vehicles which are rated and designed for such loads.
- Distribute, balance and secure loads so vehicle is stable under conditions of use.
- Do not exceed maximum rated loads for components such as suspension, axles and tires.
- Mount equipment base to metal bed or frame of vehicle.
- Follow vehicle manufacturer's instructions.

PRE-OPERATION SERVICE

**⚠ CAUTION**

READ the engine operating and maintenance instructions supplied with this machine.

**⚠ WARNING**

**GASOLINE can cause fire or explosion.**

- Stop engine while fueling.
- Do not smoke when fueling.
- Keep sparks and flame away from tank.
- Do not leave unattended while fueling.
- Wipe up spilled fuel and allow fumes to clear before starting engine.
- Do not overfill tank, fuel expansion may cause overflow.




**GASOLINE FUEL ONLY**

FUEL 

Fill the fuel tank with clean, fresh, lead-free gasoline. Observe fuel gauge while filling to prevent overfilling

Stop fueling once the fuel gauge reads full. Do not top off tank. Be sure to leave filler neck empty to allow room for expansion.

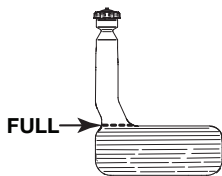

**⚠ WARNING**

- Damage to the fuel tank may cause fire or explosion. DO NOT drill holes in the EAGLE™ 10,000 PLUS base or weld to the EAGLE™ 10,000 PLUS base.



OIL 

LUBRICATION SYSTEM CAPACITY (INCLUDING FILTER):  
GV750™ - 1.6 Quarts (1.5 Liters)

The EAGLE™ 10,000 Plus is shipped with the engine crankcase filled with SAE 10W-30 oil. Check the oil level before starting the engine. If it is not up to the full mark on the dip stick, add oil as required. Make certain that the oil filler cap is tightened securely. Refer to this operator's manual for specific oil recommendations.

**⚠ CAUTION**

**BATTERY CONNECTION**

Use caution as the electrolyte is a strong acid that can burn skin and damage eyes.



This welder is shipped with the negative battery cable disconnected. Make sure that the Engine Switch is in the "STOP" position. Attach the disconnected cable securely to the negative battery terminal before attempting to operate the machine. If the battery is discharged and does not have enough power to start the engine, see the battery charging instructions in the Battery section.

NOTE: This machine is furnished with a wet charged battery; if unused for several months, the battery may require a booster charge. Be careful to charge the battery with the correct polarity.

**WELDING OUTPUT CABLES**

With the engine off, connect the electrode and work cables to the studs provided. These connections should be checked periodically and tightened if necessary. Loose connections will result in overheating of the output studs.

When welding at a considerable distance from the welder, be sure you use ample size welding cables. Listed below are copper cable sizes recommended for the rated current and duty cycle. Lengths stipulated are the distance from the welder to work and back to the welder again. Cable sizes are increased for greater lengths primarily for the purpose of minimizing cable voltage drop.

TOTAL COMBINED LENGTH OF ELECTRODE AND WORK CABLES	
	225 Amps 100% Duty Cycle
0-100 Ft. (0-31m)	1 AWG
100-150 Ft. (31-46m)	1 AWG
150-200 Ft. (46-61m)	1/0 AWG

## ANGLE OF OPERATION

Internal combustion engines are designed to run in a level condition which is where the optimum performance is achieved. The maximum angle of operation for the engine is 15 degrees from horizontal in any direction. If the engine is to be operated at an angle, provisions must be made for checking and maintaining the oil at the normal (FULL) oil capacity in the crankcase in a level condition.

When operating at an angle, the effective fuel capacity will be slightly less than the specified 12 Gal. (45 L).

## LIFTING

The EAGLE™ 10,000 Plus weighs approximately 611 lbs. (277kg) with a full tank of gasoline. A lift bail is mounted to the machine and should always be used when lifting the machine.

### WARNING

#### FALLING EQUIPMENT can cause injury

- Lift only with equipment of adequate lifting capacity.
- Be sure machine is stable when lifting.
- Do not lift this machine using lift bail if it is equipped with a heavy accessory such as trailer or gas cylinder.
- Do not lift machine if lift bail is damaged.
- Do not operate machine while suspended from lift bail.



## HIGH ALTITUDE OPERATION

At higher altitudes, Welder output de-rating may be necessary. For maximum rating, de-rate the welder output 3.5% for every 1000 ft. (305m) above 3000 ft. (914m).

## MUFFLER OUTLET PIPE

Using the clamp provided secure the outlet pipe to the outlet tube with the pipe positioned such that it will direct the exhaust in the desired direction. Tighten using a 9/16" socket or wrench.

## LOCATION / VENTILATION

The welder should be located to provide an unrestricted flow of clean, cool air to the cooling air inlets and to avoid heated air coming out of the welder recirculating back to the cooling air inlet. Also, locate the welder so that engine exhaust fumes are properly vented to an outside area.

## STACKING

EAGLE™ 10,000 Plus machines cannot be stacked. clean, cool air to the cooling air inlets and to avoid heated air coming out of the welder recirculating back to the cooling air inlet. Also, locate the welder so that engine exhaust fumes are properly vented to an outside area.

## CONNECTION OF K930-2 TIG MODULE TO THE EAGLE™ 10,000 PLUS.

The TIG Module is an accessory that provides high frequency and shielding gas control for DC GTAW (TIG) welding. See IM528 supplied with the TIG Module for installation instructions.

**NOTE:** The TIG Module does not require the use of a high frequency bypass capacitor. However, if the EAGLE™ 10,000 Plus is used with any other high frequency equipment, the bypass capacitor must be installed, order kit T12246.

## ADDITIONAL INSTRUCTIONS / SAFETY PRECAUTIONS

Always operate the welder with the roof and case sides in place as this provides maximum protection from moving parts and assures proper cooling air flow.

Read and understand all Safety Precautions before operating this machine. Always follow these and any other safety procedures included in this manual.

## WELDER OPERATION

### WELDER OUTPUT

- Maximum Open Circuit Voltage at 3700 RPM is 80 Volts RMS.
- Duty Cycle is the percentage of time the load is being applied in a 10 minute period. For example, a 60% duty cycle represents 6 minutes of load and 4 minutes of no load in a 10 minute period. Duty Cycle for the EAGLE™ 10,000 Plus is 100%.

EAGLE™ 10,000 Plus	
Constant Current	210 Amps DC @ 25 Volts

## AUXILIARY POWER

The EAGLE™ 10,000 Plus can provide up to 9,000 watts of 120/240 volts AC, single phase 60Hz power for continuous use, and up to 10,500 watts of 120/240 volts AC, single phase 60Hz power surge use. The front of the machine includes three receptacles for connecting the AC power plugs; one 50 amp 120/240 volt NEMA 14-50R receptacle and two 20 amp 120 volt NEMA 5-20R receptacles. Output voltage is within +/-10% at all loads up to rated capacity.

All auxiliary power is protected by circuit breakers. The 120V has 20 Amp circuit breakers for each duplex receptacle. The 120/240V Single Phase has a 40 Amp 2-pole Circuit Breaker that disconnects both hot leads simultaneously.


### CAUTION

**Do not connect any plugs that connect to the power receptacles in parallel.**

Start the engine and set the "IDLER" control switch to the desired operating mode. Set the "CONTROL" to 10. Voltage is now correct at the receptacles for auxiliary power.

**120/240 VOLT DUAL VOLTAGE RECEPTACLE**

The 120/240 volt receptacle can supply up to 38 amps of 240 volt power to a two wire circuit, up to 38 amps of 120 volts power from each side of a three wire circuit (up to 76 amps total). Do not connect the 120 volt circuits in parallel. Current sensing for the automatic idle feature is only in one leg of the three wire circuit as shown in the following column.

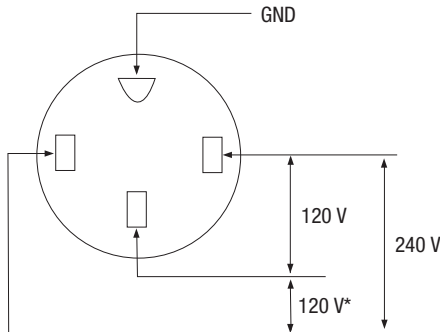

\*Current Sensing for Automatic Idle.  
(Receptacle viewed from front of Machine)

**120 V DUPLEX RECEPTACLES**

The 120V auxiliary power receptacles should only be used with three wire grounded type plugs or approved double insulated tools with two wire plugs.

The current rating of any plug used with the system must be at least equal to the current load through the associated receptacle.

**MOTOR STARTING**

Most 1.5 hp AC single phase motors can be started if there is no load on the motor or other load connected to the machine, since the full load current rating of a 1.5 hp motor is approximately 20 amperes (10 amperes for 240 volt motors). The motor may be run at full load when plugged into only one side of the duplex receptacle. Larger motors through 2 hp can be run provided the receptacle rating as previously stated is not exceeded. This may necessitate 240V operation only.

**EAGLE™ 10,000 Plus Extension Cord Length Recommendations**  
(Use the shortest length extension cord possible sized per the following table.)

Current (Amps)	Voltage Volts	Load (Watts)	Maximum Allowable Cord Length in ft. (m) for Conductor Size											
			14 AWG		12 AWG		10 AWG		8 AWG		6 AWG		4 AWG	
15	120	1800	30	(9)	40	(19)	75	(23)	125	(38)	175	(53)	300	(91)
20	120	2400			30	(9)	50	(15)	88	(27)	138	(42)	225	(69)
15	240	3600	60	(18)	75	(23)	150	(46)	225	(69)	350	(107)	600	(183)
20	240	4800			60	(18)	100	(30)	175	(53)	275	(84)	450	(137)
38	240	9000					50	(15)	90	(27)	150	(46)	225	(69)

Conductor size is based on maximum 2.0% voltage drop.

ELECTRICAL DEVICE USE WITH THE EAGLE™ 10,000 Plus.		
Type	Common Electrical Devices	Possible Concerns
Resistive	Heaters, toasters, incandescent light bulbs, electric range, hot pan, skillet, coffee maker.	NONE
Capacitive	TV sets, radios, microwaves, Appliances with electrical control.	Voltage spikes or high voltage regulation can cause the capacitive elements to fail. Surge protection, transient protection, and additional loading is recommended for 100% fail-safe operation. <b>DO NOT RUN THESE DEVICES WITHOUT ADDITIONAL RESISTIVE TYPE LOADS.</b>
Inductive	Single-phase induction motors, Drills, well pumps, grinders, small Refrigerators, weed and hedge Trimmers	These devices require large Current inrush for starting. Some synchronous motors may be frequency sensitive to attain maximum output torque, but they SHOULD BE SAFE from any frequency induced failures.
Capacitive/Inductive	Computers, high resolution TV sets, Complicated electrical equipment.	An inductive type line conditioner along with transient and surge protection is required, and liabilities still exist. <b>DO NOT USE THESE DEVICES WITH A EAGLE™ 10,000 Plus</b>
The Lincoln Electric Company is not responsible for any damage to electrical components improperly connected to the EAGLE™ 10,000 Plus.		

**AUXILIARY POWER WHILE WELDING**

Simultaneous welding and power loads are permitted by following Table I. The permissible currents shown assume that current is being drawn from either the 120V or 240V supply (not both at the same time). Also, the “Output Control” is set at “10” for maximum auxiliary power.

<b>TABLE I SIMULTANEOUS WELDING AND POWER</b>			
<b>Output Selector Setting</b>	<b>Permissible Power Watts (Unity Power Factor)</b>	<b>Permissible Auxiliary Current in Amperes @ 120V *-or- @ 240V</b>	
Max. Stick Setting	None	0	0
145 Stick Setting	3450	32**	16
90 Stick Setting	6000	50**	25
No Welding	9000	76**	38

\* Each duplex receptacle is limited to 20 amps.

\*\*Not to exceed 40A per 120VAC branch circuit when splitting the 240 VAC output.

1. Install a double pole, double throw switch between the power company meter and the premises disconnect.  
Switch rating must be the same or greater than the customer’s premises disconnect and service overcurrent protection.
2. Take necessary steps to assure load is limited to the capacity of the EAGLE™10,000 Plus by installing a 40 amp 240V double pole circuit breaker Maximum rated load for the 240V auxiliary is 38 amperes. Loading above 38 amperes will reduce output voltage below the allowable -10% of rated voltage which may damage appliances or other motor-driven equipment.
3. Install a 50 amp 120/240V plug (NEMA type 14-50) to the Double Pole Circuit Breaker using No. 8, 4 conductor cable of the desired length. (The 50 amp 120/240V plug is available in the optional plug kit.)
4. Plug this cable into the 50 amp 120/240V receptacle on the EAGLE™ 10,000 Plus case front.

**STANDBY POWER CONNECTIONS**

The EAGLE™ 10,000 Plus is suitable for temporary, standby, or emergency power using the engine manufacturer’s recommended maintenance schedule.


The EAGLE™ 10,000 Plus can be permanently installed as a standby power unit for 240V-3 wire, single phase 38 ampere service.

** WARNING**

(Connections must be made by a licensed electrician who can determine how the 120/240V power can be adapted to the particular installation and comply with all applicable electrical codes.) The following information can be used as a guide by the electrician for most applications (refer also to the connection diagram shown in Figure 1.)

-----

**FIGURE A.1**  
**CONNECTION OF EAGLE™ 10,000 PLUS TO PREMISES WIRING**

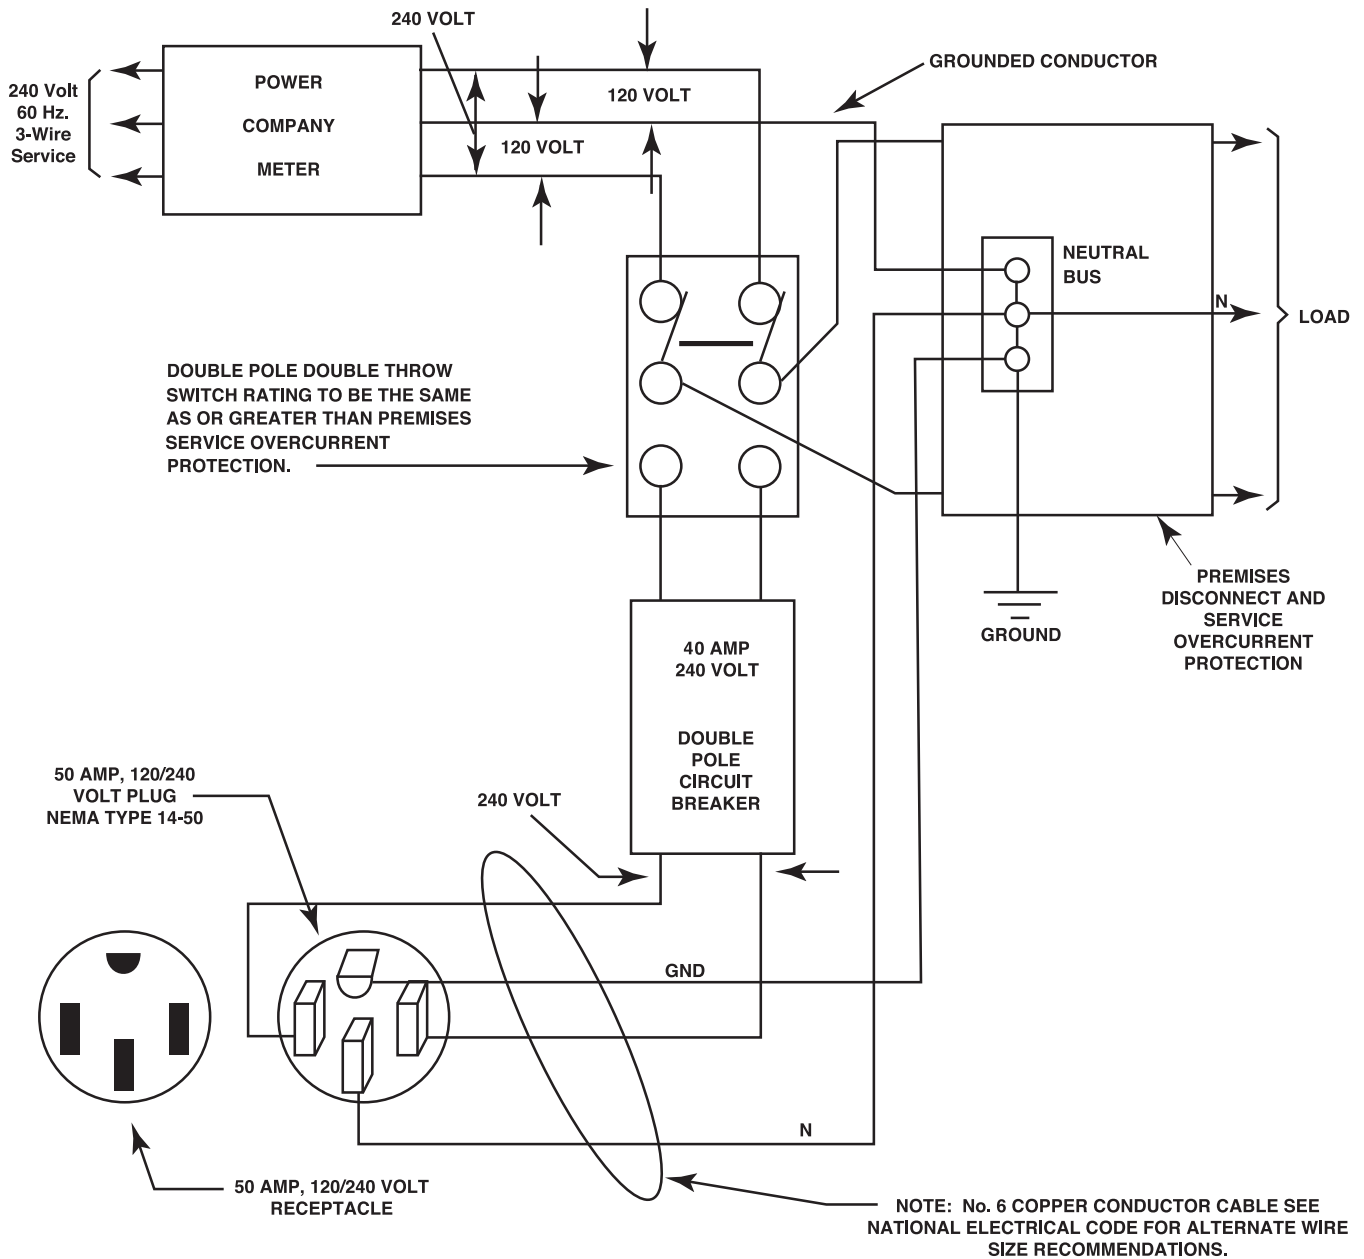

**⚠ WARNING**

Connection of EAGLE™ 10,000 Plus to premises wiring must be done by a licensed electrician and must comply with the National Electrical Code and all other applicable electrical codes.



# OPERATION

## SAFETY PRECAUTIONS

Read and understand this entire section before operating your Eagle™ 10,000 Plus.

### WARNING

Do not attempt to use this equipment until you have thoroughly read the engine manufacturer's manual supplied with your welder. It includes important safety precautions, detailed engine starting, operating and maintenance instructions, and parts lists.

#### ELECTRIC SHOCK can kill.

- Do not touch electrically live parts or electrode with skin or wet clothing.
- Insulate yourself from work and ground
- Always wear dry insulating gloves.



- Always operate the welder with the hinged door closed and the side panels in place.
- Always follow these and any other safety procedures included in this manual and in the Engine Instruction Manual.

## GENERAL DESCRIPTION


The EAGLE™ 10,000 Plus is a twin-cylinder, gasoline driven, multiprocess arc welder and AC power generator. It is built in a heavy gauge steel case for durability on the job site.

## WELDER CONTROLS - FUNCTION AND OPERATION

### ENGINE SWITCH

The engine switch is used to Start the Engine, Select High Idle or Auto Idle while the engine is running, and stop the Engine.

When placed in the "OFF"  position, the ignition circuit is de-energized to shut down the engine.

When held in the "START"  position, the engine starter motor is energized.

When in "HIGH IDLE" () position, the engine will run continuously at high idle.

When in "AUTO IDLE" ( / ) position, the engine will run continuously and the idler operates as follows:

#### 1) Welding

When the electrode touches the work, the welding Arc is initiated and the engine accelerates to full Speed.

After welding ceases (and no auxiliary power is being drawn), the engine will return to low idle after approximately 10 to 14 seconds.

#### 2) Auxiliary Power

With the engine running at low idle and auxiliary power for lights or tools are drawn (approximately 100-150 watts or greater) from the receptacles, the engine will accelerate to high speed. If no power is being drawn from the receptacles (and not welding) for 10-14 seconds, the idler reduces the engine speed to low idle.

#### "RANGE" SWITCH

The "Range" switch is used to select one of four amperage ranges with generous overlap for Stick/TIG welding.

Process	Range Setting	Current Range
STICK/TIG (Constant current) (3 range settings)	90 Max.	40 to 90 Amps
	145 Max.	70 to 145 Amps
	225 MAX.	120 to 225 Amps

### CAUTION

Never change the "RANGE" Switch setting while welding. This will damage the switch.

#### "CONTROL" DIAL

Provides a fine welding current adjustment within the Range Switch settings in the STICK mode and welding voltage control with the Range switch set in the wire feed mode.

**EAGLE™ 10,000 PLUS APPROXIMATE FUEL CONSUMPTION**

GV750™		
CONDITION	GAL/HR	LITERS/HR
High Idle	0.83	3.13
Low Idle	0.47	1.79
210A @ 25V	1.52	5.77
9000 Watts	1.70	6.44

**STARTING/SHUTDOWN INSTRUCTIONS**

**STARTING THE ENGINE**



**WARNING**

Do not touch electrically live parts of electrode with skin or wet clothing.



Keep flammable material away.



Insulate yourself from work and ground. Wear eye, ear, and body protection.



Keep your head out of the fumes.




Use ventilation or exhaust to remove fumes from breathing zones.



Be sure all Pre-Operation Maintenance has been performed. Also, read the Engine Owner’s Manual before starting for the first time.

Remove all loads connected to the AC power receptacles. Use the choke control as follows:

- ALWAYS pull the choke control out when starting the engine; cold, warm or hot.


- 1) Turn the engine switch to the “start”  position and crank the engine until it starts. Release the switch as soon as the engine starts, slowly return the choke control to the full “in” position (choke open), and turn the switch to the Auto Idle (  ) position. Do not turn the switch to the “Start” position while the engine is running because this will cause damage to the ring gear and/or starter motor.

- 3) After running at high engine speed for 10-14 seconds, the engine will go to low idle.

- 4) Allow the engine to warm up by letting it run at low idle for a few minutes.

**STOPPING THE ENGINE**

Remove all welding and auxiliary power loads and allow engine to run at low idle speed for a few minutes to cool the engine.

Stop the engine by placing the Engine switch in the “OFF”  position.

A fuel shut off valve is not required on the EAGLE™ 10,000 Plus because the fuel tank is mounted below the engine.

**BREAK-IN PERIOD**

It is normal for any engine to use a greater amount of oil until the break-in is accomplished. Check the oil level twice a day during the break-in period (approximately 50 running hours).

**NOTE: IN ORDER TO ACCOMPLISH THIS BREAK-IN, THE UNIT SHOULD BE SUBJECTED TO MODERATE LOADS, WITHIN THE RATING OF THE MACHINE. AVOID LONG IDLE RUNNING PERIODS. REMOVE LOADS AND ALLOW ENGINE TO COOL BEFORE SHUTDOWN.**

The engine manufacturer’s recommendation for the running time until the first oil change is as follows:

LINCOLN GV750™
10 HRS

The oil filter is to be changed at the second oil change. Refer to the engine service information in this manual for more information.

**WELDING PROCESS**

For any electrodes the procedures should be kept within the rating of the machine. For electrode information see the appropriate Lincoln publication.

**STICK (CONSTANT CURRENT) WELDING**

Connect welding cables to the "TO WORK" and "ELECTRODE" studs. Start the engine. Set the "Polarity" switch to the desired polarity. The "RANGE" switch markings indicate the maximum current for that range as well as the typical electrode size for that range. The "OUTPUT" Control provides fine adjustment of the welding current within the select range. For maximum output within a selected range set the "OUTPUT" Control at 10. For minimum output within a selected range set the "OUTPUT" Control at 5. ("OUTPUT" Control settings below 5 may reduce arc stability) For best overall welding performance set the "RANGE" Switch to the lowest setting and the "OUTPUT" Control near the maximum to achieve the desired welding current.

RANGE SETTING	TYPICAL ELECTRODE SIZE	CURRENT RANGE
90 MAX.	3/32	40 TO 90 AMPS
145 MAX.	1/8	70 TO 145 AMPS
225 MAX.	5/32	120 TO 225 AMPS

The EAGLE™ 10,000 Plus can be used with a broad range of DC stick electrodes. See "Welding Tips 1" included with the EAGLE™ 10,000 Plus for electrodes within the rating of this unit and recommended welding currents of each.

**SCRATCH START TIG (CONSTANT CURRENT) WELDING**

The EAGLE™ 10,000 Plus can be used for Scratch-Start of DC TIG welding applications. To initiate a weld, the course and fine output control knobs must be set for the desired current. The tungsten electrode is then scratch on the work which establishes the arc.

To stop the arc, simply lift the TIG torch away from the work piece. The tungsten may then be scratched on the work piece to restrike the arc.

If a high frequency start is desired, the K930-2 TIG Module can be used with the EAGLE™ 10,000 Plus. The settings are referenced.

The EAGLE™ 10,000 Plus and any high frequency generating equipment must be properly grounded. See the K930-2 TIG Module operating manuals for complete instructions on installation, operation and maintenance.

When using the TIG Module, the OUTPUT control on the EAGLE™ 10,000 Plus is used to set the maximum range of the CURRENT CONTROL on the TIG Module or an Amptrol if connected to the TIG Module.

**ARC GOUGING**

The EAGLE™ 10,000 Plus can be used for limited arc gouging.

Set the Range switch to adjust output current to the desired level for the gouging electrode being used according to the ratings in the following table:

ELECTRODE SETTING	CURRENT RANGE (DC, electrode positive)
1/8	30 - 60 Amps
5/32	90 - 150 Amps
3/16	150 - 250 Amps

Tungsten Electrode Diameter in. (mm)	DDENE (-)		DAZE (+)		Approximate Argon Gas Flow Flow Rate C.F.H. (l /min.)		TIG TORCH Nozzle Size (4), (5)
	1%, 2% Thoriated Tungsten	1%, 2% Thoriated Tungsten	Aluminum	Stainless Steel			
.010 (.25)	2-15	(3)	3-8 (2-4)	3-8 (2-4)	#4, #5, #6		
0.020 (.50)	5-20	(3)	5-10 (3-5)	5-10 (3-5)			
0.040 (1.0)	15-80	(3)	5-10 (3-5)	5-10 (3-5)			
1/16 (1.6)	70-150	10-20	5-10 (3-5)	9-13 (4-6)	#5, #6		
3/32 (2.4)	150-250	15-30	13-17 (6-8)	11-15 (5-7)	#6, #7, #8		
1/8 (3.2)	250-400	25-40	15-23 (7-11)	11-15 (5-7)			
5/32 (4.0)	400-500	40-55	21-25 (10-12)	13-17 (6-8)	#8, #10		
3/16 (4.8)	500-750	55-80	23-27 (11-13)	18-22 (8-10)			
1/4 (6.4)	750-1000	80-125	28-32 (13-15)	23-27 (11-13)			

(1) When used with argon gas. The current ranges shown must be reduced when using argon/helium or pure helium shielding gases.  
 (2) Tungsten electrodes are classified as follows by the American Welding Society (AWS):  
 Pure EWP  
 1% Thoriated EWTh-1  
 2% Thoriated EWTh-2  
 Though not yet recognized by the AWS, Ceriated Tungsten is now widely accepted as a substitute for 2% Thoriated Tungsten in AC and DC applications.  
 (3) DAZE is not commonly used in these sizes.  
 (4) TIG torch nozzle "sizes" are in multiples of 1/16ths of an inch:  
 # 4 = 1/4 in. (6 mm)  
 # 5 = 5/16 in. (8 mm)  
 # 6 = 3/8 in. (10 mm)  
 # 7 = 7/16 in. (11 mm)  
 # 8 = 1/2 in. (12.5 mm)  
 #10 = 5/8 in. (16 mm)  
 (5) TIG torch nozzles are typically made from alumina ceramic. Special applications may require lava nozzles, which are less prone to breakage, but cannot withstand high temperatures and high duty cycles.

## SUMMARY OF WELDING PROCESSES

PROCESS	CONTROL CABLE USED	IDLE MODE	ELECTRODE WHEN NOT WELDING	TO START WELDING
STICK	NO	AUTO	HOT	TOUCH electrode to work. Welding starts immediately and engine goes to high idle.
TIG, TIG MODULE WITH CONTRACTOR KIT CONTROL CABLE, & AMPTROL	YES	HIGH	COLD	Press Amptrol, contractor closes, welding starts immediately.

# ACCESSORIES

## OPTIONAL ACCESSORIES

### SMALL TWO-WHEEL ROAD TRAILER WITH DUO-HITCH

For heavy-duty road, off-road, plant and yard use.

Includes pivoting jack stand, safety chains, and 13" wheels. Overall width 60". Stiff .120" welded rectangular steel tube frame construction is phosphate etched and powder coat painted for superior rust and corrosion resistance.

Low sway suspension gives outstanding stability with manageable tongue weight. Wheels bearings are packed with high viscosity, high pressure, low washout luxuriates™ grease.

Features a Duo-Hitch™ - a 2" Ball/Lunette Eye combination hitch.

Order: K2635-1 Trailer  
 K2639-1 Fender and Light Kit  
 K2640-1 Cable Rack

### FOUR WHEEL ALL-TERRAIN UNDERCARRIAGE

For moving by hand at construction sites. Heavy duty puncture resistant pneumatic tires.

Order: K1737-4

### UNDERCARRIAGE (FACTORY)

For moving by hand on a smooth surface. One or two gas cylinders can be mounted on the rear of the undercarriage with the installation of K1745-1 Cylinder Holder(s). Heavy duty puncture resistant pneumatic tires and front caster.

Order: K1770-2

### WELDING GAS CYLINDER LPG TANK HOLDER

Holds Welding Gas Cylinder for use on K1770-1 Undercarriage. One or two may be installed on an undercarriage.

Order: K1745-1

### ROLL CAGE

Gives added damage protection. Attaches to K1737-1, K1770-2, and K957-1.

Order: K1788-1

### Canvas Cover

To protect the EAGLE™ 10,000 Plus when not in use. Made from attractive red canvas material which is flame retardant, mildew resistant, and water repellent.

Order: K886-2

### Power Plug Kit

Provides four 120V plugs rated at 15 amps each and one dual voltage, Full KVA plug rated at 120/240V, 50 amps.

Order: K802R

### Power Plug Kit

Provides four 120V plugs rated at 20 amps each and one dual voltage, full KVA plug rated at 120/240V, 50 amps.

Order: K802N

### Accessory Kit

Includes 35 ft (1m) 2/0 AWG electrode cable, 30 ft. (1m) 2/0 AWG work cable, headshield with No. 12 filter, GC300 work clamp and cooltong® 300 electrode holder. Cables are rated at 300 amps, 100% duty cycle.

Order: K704

### Accessory Kit

For Stick welding. Includes ft.(m)# electrode cable with lug. ft.(m)# work cable with lugs, headshield, filter plate, work clamp, electrode holder and sample pack of mild steel electrode. 150 amp capacity.

Order: K875

### Spark Arrester Kit

Attaches between muffler and exhaust elbow. Virtually eliminates spark emissions.

Order: K1898-1

### GFCI RECEPTACLE KIT

Includes one UL appraised ground fault circuit interrupter duplex type receptacle with cover and installation instructions. Replaces the factory installed 120V duplex receptacle. Each receptacle of the GFCI Duplex is rated at 20 Amps, the maximum total current from the GFCI Duplex is limited to the 20 Amps. Two kits are required.

Order: K1690-1

### FULL KVA ADAPTER KIT

Plugs into the 120/240V NEMA 14-50R receptacle on the case front (which accepts 4-prong plugs) and converts it to a NEMA 6-50R receptacle, (which accepts 3-prong plugs.)

Order: K1816-1

### Full KVA Power Plug

One dual voltage plug rated at 120/240V, 50 amps.

Order: T12153-9

## RECOMMENDED EQUIPMENT

### STICK

#### Accessory Kit

Kit (400 AMP Capacity) which includes an electrode holder & cable, work clamp & cable, and headshield.

Order: K704

#### Accessory Kit

150 AMP capacity kit.

Order: K875

### TIG

#### Magnum™ TIG Torch

Order: K1783-4

#### Magnum Parts Kit and Argon Gas

Order: KP509

**TIG Module**

Provides high frequency and shielding gas control. For AC and DC GTAW (TIG) welding applications Its compact case is designed for easy carrying, complete with a handle. High frequency bypass is built in. Requires K938-1 Contactor Kit, K936-4 Control Cable, and K814 Arc Start Switch.

Order: K930-2

**Contactor Kit**

For use with TIG Module, Provides a “cold” electrode until the triggering device (Arc Start Switch) is pressed.

Order: K938-1

**Control Cable**

Connects TIG Module to EAGLE™ 10,000 Plus.

Order: K936-4

**Optional TIG Equipment:****Docking Kit**

For Mounting the K930-2 TIG Module on top of the EAGLE™ 10,000 Plus.

Order: K939-1

**Control Cable Extension**

Allows TIG Module to be operated at distances up to 200ft. from the power source. Available in 45ft. (1m).

Order: K937-45

**Arc Start Switch**

Order: K886-2

# MAINTENANCE

## SAFETY PRECAUTIONS

### WARNING

- Have qualified personnel do all maintenance and troubleshooting work.
- Turn the engine off before working inside the machine or servicing the engine.
- Remove guards only when necessary to perform maintenance and replace them when the maintenance requiring their removal is complete. If guards are missing from the machine, obtain replacements from a Lincoln Distributor. (See Operating Manual Parts List.)

### ELECTRIC SHOCK can kill.

- Do not touch electrically live parts or electrode with skin or wet clothing.
- Insulate yourself from work and ground
- Always wear dry insulating gloves.



### ENGINE EXHAUST can kill.

- Use in open, well ventilated areas or vent exhaust outside.



### MOVING PARTS can injure.

- Do not operate with doors open or guards off.
- Stop engine before servicing.
- Keep away from moving parts.



Read the Safety Precautions in the front of this manual and in the Engine Owner's Manual before working on this machine.

Keep all equipment safety guards, covers, and devices in position and in good repair. Keep hands, hair, clothing, and tools away from the gears, fans, and all other moving parts when starting, operating, or repairing the equipment.

Do not put your hands near the engine cooling blower fan. If a problem cannot be corrected by following the instructions, take the machine to the nearest Lincoln Field Service Shop.

### Routine Maintenance

At the end of each day's use, refill the fuel tank to minimize moisture condensation in the tank. Running out of fuel tends to draw dirt into the fuel system. Also, check the crankcase oil level and add oil if indicated.

### CAUTION

- Make certain that the oil filler cap is securely tightened after checking or adding oil. If the cap is not tight, oil consumption can increase significantly which may be evidenced by white smoke coming from the exhaust.

TABLE D.1 OIL MAINTENANCE SCHEDULE FOR CHANGING THE OIL AND OIL FILTER AFTER BREAK-IN

	Lincoln GV750™
OIL	100 Hrs.
OIL FILTER	100 Hrs.

The above schedule is for normal operating conditions. More frequent oil changes are required with dusty, high temperature and other severe operating conditions. Refer to the maintenance section of the Engine Owner's Manual for more information.

NOTE: Engine life will be reduced if the oil and oil filter are not changed according to the manufacturer's recommendation.

### ENGINE OIL CHANGE

Drain the oil while the engine is warm to assure rapid and complete draining.

- Refill to the upper limit mark on the dipstick with the recommended oil. Tighten the oil filler cap securely.

### ENGINE OIL REFILL CAPACITIES

With oil filter replacement:

- 1.6 Qts. (1.5 L) - GV750™

Use 4-stroke motor oil that meets or exceeds the requirements for APIO service classification SJ or better.

SAE 10W-30 is recommended for general, all-temperature use, -5 F to 104 F (-20 C to 40 C).

See Engine Owner's Manual for more specific information on oil viscosity recommendations.

Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station or recycling center for reclamation.

Do not throw it in the trash, pour it on the ground or down a drain.

## OIL FILTER CHANGE

- 1) Drain the engine oil.
- 2) Remove the oil filter, and drain the oil into a suitable container. Discard the used oil filter.
- 3) Clean the filter mounting base, and coat the gasket of the new oil filter with clean engine oil.
- 4) Screw on the new oil filter by hand, until the gasket contacts the filter mounting base, then use an oil filter socket tool to tighten the filter an additional 1/2 to 7/8 turn.
- 5) Refill the crankcase with the specified amount of the recommended oil. Reinstall the oil filler cap.
- 6) Start the engine and check for oil filter leaks.
- 7) Stop the engine, and check the oil level. If necessary, add oil to the upper limit mark on the dipstick.

## AIR CLEANER AND OTHER MAINTENANCE

- Air Cleaner - With normal operating conditions, the maintenance schedule consists of replacing the air cleaner filter every 100 hours. More frequent servicing is required with dusty operating conditions.
- Refer to the maintenance section of this manual for the maintenance schedule, spark plug servicing, and fuel filter replacement.
- Blow out the machine with low pressure air periodically. In particularly dirty locations, this may be required once a week.
- Output Range Selector and Polarity Switches - Switch contacts should not be greased. To keep contacts clean, rotate the switch through its entire range frequently. Good practice is to turn the handle from maximum to minimum setting twice each morning before starting to weld.

## ENGINE ADJUSTMENTS

### WARNING

#### OVERSPEED IS HAZARDOUS

The maximum allowable high idle speed for this machine is 3750 RPM, no load. Do NOT tamper with governor components or setting or make any other adjustments to increase the maximum speed. Severe personal injury and damage to the machine can result if operated at speeds above maximum

Adjustments to the engine are to be made only by a Lincoln Service Center or an authorized Field Service Shop.

#### SLIP RINGS

A slight amount of darkening and wear of the slip rings and brushes is normal. Brushes should be inspected when a general overhaul is necessary. If brushes are to be replaced, clean slip rings with a fine emery paper.

### CAUTION

Do not attempt to polish slip rings while engine is running.

## BATTERY MAINTENANCE

### WARNING

#### GASES FROM BATTERY can explode.

Keep sparks, flame and cigarettes away from battery.



To prevent EXPLOSION when:

- **INSTALLING A NEW BATTERY** — disconnect negative cable from old battery first and connect to new battery last.
- **CONNECTING A BATTERY CHARGER** — remove battery from welder by disconnecting negative cable first, then positive cable and battery clamp. When reinstalling, connect Negative cable last. Keep well ventilated.
- **USING A BOOSTER** — connect positive lead to battery first then connect negative lead to negative battery lead at engine foot.

#### BATTERY ACID can burn eyes and skin.

Wear gloves and eye protection and be careful when working near battery.



- Follow instructions printed on battery.

When replacing, jumping, or otherwise connecting the battery to the battery cables, the proper polarity must be observed. Failure to observe the proper polarity could result in damage to the charging circuit. The positive (+) battery cable has a red terminal cover.

If the battery requires charging from an external charger, disconnect the negative battery cable first and then the positive battery cable before attaching the charger leads. Failure to do so can result in damage to the internal charger components. When reconnecting the cables, connect the positive cable first and the negative cable last.

#### HARDWARE

Both English and Metric fasteners are used in this welder.



**Engine Maintenance Parts**

Purchase K5380-1. Kit includes:



- Oil Filter
- 2 quarts 10W30 oil
- Air Fliter
- Fuel Filter
- Spark plugs (2)

GV750™ GASOLINE ENGINE

**⚠ WARNING**

Read this section of the manual carefully before operation. This section includes important guidance to ensure safe operation of the engine.

FEATURES AND CONTROLS

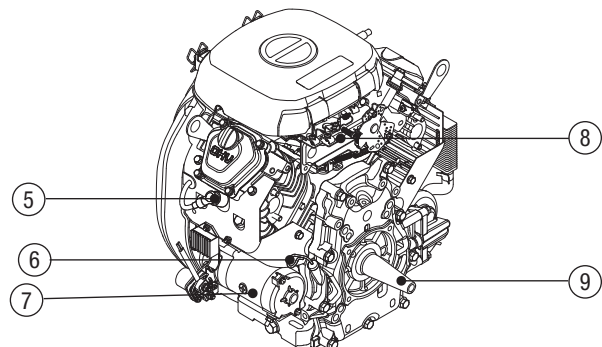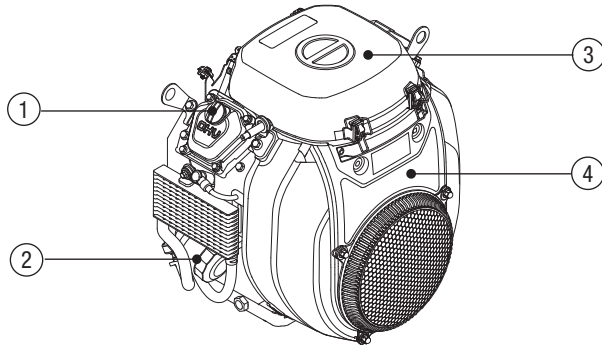

- ① Oil Fill
- ② Oil Filter
- ③ Air Filter
- ④ Air Guide Cover
- ⑤ Spark Plug
- ⑥ Dipstick
- ⑦ Starting Motor
- ⑧ Throttle Control Assembly
- ⑨ Crankshaft

OPERATING CHECKLIST

A. Operating location

The engine must only be operated OUTDOORS and placed in a well ventilated area. Wind / air current conditions must be taken into consideration.

Place the engine on a level surface before any operation.

**⚠ DANGER**

Engine exhaust fumes contain carbon monoxide, an odorless, colorless, poison gas. Operating engines indoors CAN KILL YOU!

NEVER operate the engine indoors or in any type of enclosure. Opening doors and/or windows does NOT lessen the risks of poisoning or death.

NOTE: For HIGH ALTITUDE operation, the engine may require a high altitude carburetor kit. The kit ensures proper operation at high altitudes. Consult your local Lincoln dealer for high altitude kit information if you plan to operate your engine at altitudes above 5,000 feet (1,500 meters).

**⚠ CAUTION**

Engine horsepower will still decrease approximately 3.5% per 1,000 feet (300 meters) of increased altitude even with the presence of a modified carburetor. However, without a modified carburetor the effects of altitude on horsepower would be greater.

Operating the engine at altitudes below 5,000 feet (1,500 meters) with a modified carburetor may result in engine overheating, which could lead to serious engine damage.

B. Operating condition

Check for loose or damaged parts, signs of oil or fuel leaks, and any other condition that may affect proper operation. Repair or replace all damaged or defective parts immediately.

**⚠ WARNING**


Failure to repair or replace damaged or defective parts before operation of the engine could result in property damage, serious injury or DEATH.

Remove all excess dirt or debris, especially around the muffler.


Do not exceed the maximum angle of operation when operating the engine (see specification table in this manual), as engine damage could result from the insufficient lubrication that could occur when engine is not on a level surface.

**C. Checking the engine oil**

- (1) Place the engine on a level surface with the engine stopped.
- (2) Remove the dipstick and wipe clean.
- (3) Insert the dipstick in the dipstick slot.

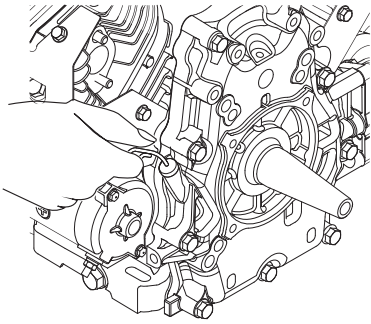

- (4) Remove the dipstick and check oil level. Oil level should be within the Upper Limit (H) range (see illustration below).

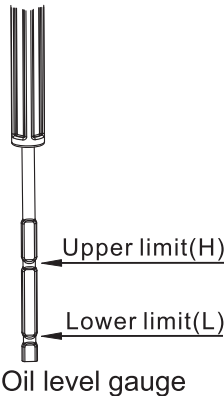

- (5) If oil level is low, fill oil to the Upper Limit (H) of the dipstick (using the recommended engine oil).
- (6) Re-insert the dipstick into the dipstick slot. Refer to the Maintenance chapter of this Owner's Manual for further information.

NOTE: The engine's **RATED OIL CAPACITY** is 1.6 Qt. / 1.5 L

**WARNING**

Oil is a major factor in engine performance and service life. Use only a 4-stroke automotive detergent oil recommended in the Maintenance section of this Owner's Manual.

**CAUTION**

The engine must only be operated on level surfaces. This engine is equipped with a low oil sensor (when applicable) that will shutdown the engine when oil levels fall below the safe operating limit. To avoid unexpected shutdowns, check oil levels regularly and fill to the Upper Limit range when oil is below the high range.

**D. Checking the engine fuel**

Check the fuel level gauge with the engine stopped. Refill the fuel tank if necessary.

**CAUTION**

Pressure can build up in the fuel tank. Allow engine to cool for at least two minutes before removing fuel cap. Loosen fuel cap slowly to relieve any pressure in the tank.

Use clean, fresh, regular unleaded gasoline.

DO NOT mix oil with gasoline.

DO NOT fill above the upper limit mark. Always allow room for fuel expansion.

**DANGER**

DO NOT fill the fuel tank above the upper limit. Over filling will result in engine damage and void the warranty.

NEVER use engine or carburetor cleaning products in the fuel tank. Permanent damage may occur.

It is important to prevent gum deposits from forming in essential fuel system parts, such as the carburetor, fuel filter, fuel hose or tank during storage. Also, alcohol-blended fuels (called gasohol, ethanol or methanol) can attract moisture, which leads to separation and formation of acids during storage.

Acidic fuel can damage the fuel system of an engine while in storage. Review the instructions in the "Storage" chapter for more information.

**DANGER****FIRE OR EXPLOSION**

Gasoline is highly flammable and extremely explosive.

Fire or explosion can cause severe burns or death.

Keep flammable items away while handling gasoline.

Fill fuel tank outdoors and in a well ventilated area with the engine stopped.

Always wipe off spilled fuel and wait until the fuel has dried before starting the engine.

DO NOT operate the engine with known leaks in the fuel system.

Use proper fuel storage and handling procedures. DO NOT store fuel or other flammable materials nearby.

Empty the fuel tank before storing or transporting this engine.

Keep fire extinguisher handy in the event of engine fuel fire.

NOTE: Approved **GASOLINE/ALCOHOL BLENDS** must not differ from 10% alcohol, 90% unleaded gasoline blend. Other gasoline/alcohol blends are not approved. Effects of old, stale or contaminated fuel are not covered by warranty.

**⚠ CAUTION**

To minimize gum deposits in the fuel system and ensure easy starting, **DO NOT** use gasoline left over from the previous season.

**E. Equipment check**

Check the equipment powered by this engine. Review the instructions provided by the equipment manufacturer for any precautions and procedures that should be followed before starting the engine.

**⚠ WARNING**

This engine is designed and manufactured for specific applications. **Do not attempt to modify the equipment or use it for any application for which it was not designed. If you have questions about a specific application, ask your local dealer.**

**ELECTRIC STARTING**

Turn the key to the START position until the engine starts. After the engine starts, release the key and return it to the ON position.

If the starter cannot drive the engine to rotate, turn off the starter immediately. Do not attempt to start the engine again before finding the causes of the fault.

**⚠ WARNING**

**Do not continuously start the engine for more than 15 seconds at a time. If the engine fails to start, cool the starting motor for 1 minute before re-start. Otherwise, it may cause damage to the starting motor.**

**⚠ CAUTION**

If engine cannot be started or shutdown after three attempts, check that the engine is placed on a flat surface and is filled with enough oil.

If the oil in the crankcase is below the minimum level, the engine will not start.

Conduct the oil routine inspection during run-in. For the recommended maintenance intervals, refer to the Maintenance section of this Owner's Manual.

If the engine speed is raised to the speed over the starter but does not keep running (fails to start), then the engine must completely stop before attempting to start again. If the flywheel starts to rotate automatically, the starter is still engaged. There may be interference or improper gear meshing between the flywheel external gear and the starter pinions, and this may cause damage to the starter.

**SETTING THE ENGINE SPEED**

The engine speed has been set at the factory. **DO NOT** attempt to adjust the engine speed with unauthorized means. This may cause damage to the engine or personal injury.

If you have any questions regarding the operation of the engine or other requirements, please return to the authorized dealer for guidance. Do not attempt engine calibration or repair without the proper tools and machine maintenance capabilities.

**STOPPING THE ENGINE**

To stop the engine running at high load, first release the load, allow the machine to go to idle speed, then turn off the engine.

If the gasoline engine has abnormal noise, severe vibrations, or serious hunting, immediately stop the engine.

**MAINTENANCE**

It is the owner's/operator's responsibility to complete all scheduled maintenance in a timely manner. Correct any issue before operating the engine. Always follow the inspection and maintenance recommendations and schedules in this manual.

**⚠ DANGER**

**Accidental starts can cause severe injury or death. Remove and ground spark plug wire before performing any service.**

Before servicing the engine, **STOP THE ENGINE**, disconnect all electric devices and battery, and allow the engine to cool down.

**⚠ WARNING**

**Improper maintenance or failure to correct a problem before operation can cause a malfunction and result in property damage, serious injury or DEATH.**

**Improper maintenance will void the warranty.**

**A. Maintenance schedule**

Follow the service intervals indicated in the chart below.  
 Service your engine more frequently when operating in adverse conditions.

Contact your local service dealer for your engine or engine maintenance needs.

		Each time before use	The first month or 10 hours <sup>Note1</sup>	Every three months or 50 hours <sup>Note1</sup>	Every 6 months or 100 hours <sup>Note1</sup>	Every year or 300 hours <sup>Note1</sup>
Engine oil	Inspection	✓				
	Replacement		✓		✓	
Air filter	Inspection	✓				
	Cleaning			✓ <sup>Note2</sup>		
Spark plug	Inspection and adjustment				✓	
	Replacement					✓
Idle speed	Inspection and adjustment					✓ <sup>Note3</sup>
Valve clearance	Inspection and adjustment					✓ <sup>Note3</sup>

Note 1: Before each season and after then (whichever comes first).

Note 2: Service more frequently under severe, dusty, dirty conditions.


Note 3: To be performed by knowledgeable, experienced owners or the authorized dealer.

**A. General maintenance**

ENGINE OIL: SAE 10W-30 is recommended for general, all-temperature use. Other viscosities shown in the chart may be used when the average temperature in your area is within the indicated range.


OIL CAPACITY (RATED); see engine specifications in this Owner's Manual.

**TABLE D.2 - AMBIENT TEMPERATURE**

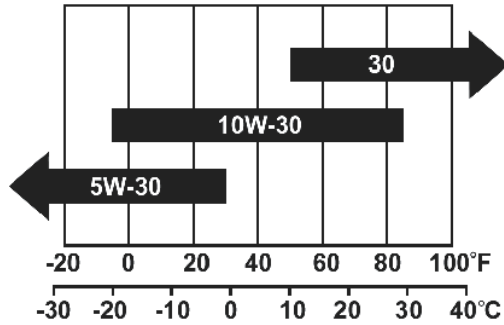


**B. Adding oil**

- 1) Place the engine on a level surface.
- 2) Remove the oil plug, and fill with the recommended oil type.

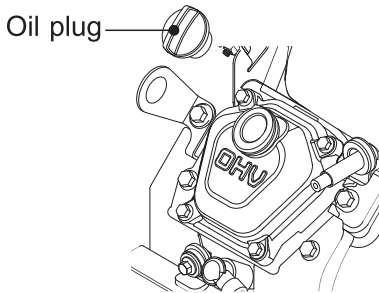

- 3) Remove the dipstick and check the oil filling volume, which should be at the upper limit of the scale (H point).

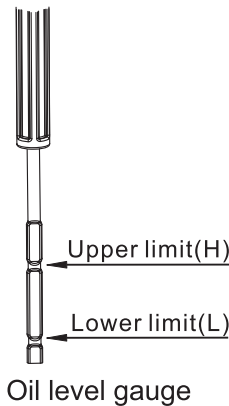

- 4) Completely insert the dipstick into the dipstick slot during inspection.
- 5) Dispose of used oil at an approved waste management facility.

**B. Changing the oil**

**⚠ CAUTION**


**Change oil when the engine is warm from operation.**

To change the engine oil, it is recommended to run the engine for five minutes (without load) and then stop the engine. This will ensure quick and complete drainage of the used oil.

- 1) Place the appropriate waste oil container beneath the oil outlet. Open the valve on the oil drain hose. Allow appropriate time to drain waste oil completely from oil tank.
- 2) When the oil is completely drained, close the valve.
- 3) Place the engine on level surface. Fill the recommended grade oil to the upper limit of the dipstick.
- 4) Re-tighten the oil plug.

If there is oil spillage, wipe off the spilled oil. Clean your hands with soap or detergent and rinse with water.

Please dispose the waste oil in a manner that is environmentally friendly. It is recommended to put the waste oil in a sealed container and deliver to the local recycling center for treatment. Do not directly dispose oil in a trash bin or pour it into the water supply.

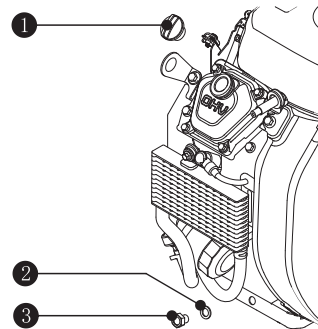

- ① Oil plug
- ② Drain bolt gasket
- ③ Drain bolt

**C. Replacing the oil filter**


Complete steps listed in "Changing the oil" section listed in this Owner's Manual above.

- 1) Remove the oil filter, then pour the oil into a suitable container. Put the used oil and filter in an appropriate place. In order to prevent deformation or damage to the oil filter, do not remove with a conventional wrench; please use a special oil filter wrench.
- 2) After cleaning the mounting base of the filter, clean the seal ring of the new filter with new oil.
- 3) Tighten the new oil filter by hand directly until the seal ring comes into contact with the mounting base, then tighten the filter (tightening torque for oil filter is 115 - 130 in-lb, 13 - 15 Nm).

- 4) Add oil to the engine and confirm the dipstick is in place.
- 5) Start the engine and check for oil leaks.
- 6) Stop the engine, then remove the dipstick and confirm the oil level is within the specified range. If the oil level is below the specified range, fill the oil to the appropriate level.


#### D. Air filter replacement

- 1) Clean area around the air filter.
- 2) Unhook retaining clips and remove cover.
- 3) Remove the paper filter element from the cover.


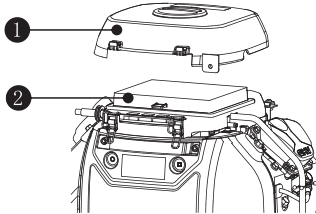


- ① Air cleaner cover
- ② Paper element

- 4) Check condition of rubber seal and replace if necessary.
- 5) Cleaning the paper element: gently tap the filter element several times. Do not clean the paper filter element with brushes or other hard cleaning tools.
- 6) Install the paper filter element into the cover.
- 7) Reinstall air cleaner cover:
  - a) Lean the cover against the base. Push the cover forward to position the knobs into the slots.

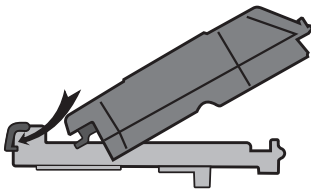

- b) Press the cover and secure the retaining clips.

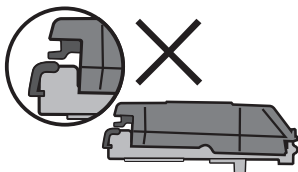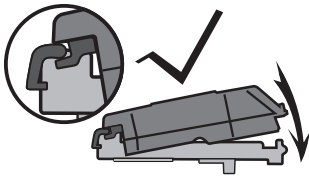

### ⚠ CAUTION

The air filter is a critical emission component, and should not be altered or modified in any way.

Operating engine with loose or damaged air cleaner components could cause engine wear and failure, and void your warranty.

Paper element cannot be blown out with compressed air.

### ⚠ WARNING


Do not run engine when the air filter is not installed, as this may damage the engine.

### ⚠ DANGER

Do not use gasoline or cleaning agent with low ignition point to clean the air filter element, as this may result in fire or explosion.

#### E. Spark plug replacement

- 1) **Recommended spark plug**: F6RTC.
- 2) Non-recommended spark plugs may cause damage to the engine.
- 3) Remove the dirt from the spark plug cap and bottom.
- 4) Remove the spark plug cap.
- 5) Use a socket wrench to loose and remove the spark plug.
- 6) Inspect the spark plug and spark plug washer. If it is damaged or worn, replace with new one. Clean the spark plug with wire brush if reused.
- 7) Check spark plug gap. Carefully bend side electrode to adjust the gap if necessary. **SPARK PLUG GAP REQUIREMENTS**: 0.6mm - 0.8mm.

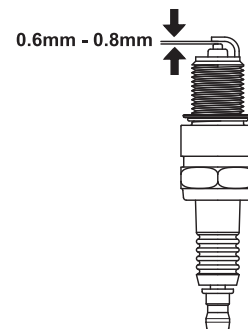

Check spark plug gap

- 8) Carefully thread the plug into the engine by hand.
- 9) After the spark plug is seated, use a wrench to tighten. **SPARK PLUG TIGHTENING TORQUE LEVEL**: 177 - 220 in-lb, 20-25 Nm.
- 10) Attach the spark plug wire to the plug.

**⚠ WARNING**

Only use recommended spark plug or equivalent. **DO NOT** use spark plugs that have improper heat range. The spark plug must be tightened. If it is loosened, the combustion chamber will not be sealed tightly when the engine runs, the leaks will reduce the power of the engine, and may not allow the engine to start.


To ensure normal operation of the engine, the spark plug gap must be clean without deposits. Clean and adjust the spark plug according to the steps shown.



- (i) Remove the spark plug.
- (ii) Remove carbon deposits.

**F. Spark arrester**

- 1) Allow the engine to cool completely before servicing the spark arrester.
- 2) Remove the two screws holding the cover plate that holds the end of the spark arrester to the muffler.
- 3) Remove the spark arrester screen.
- 4) Carefully remove the carbon deposits from the spark arrester screen with a wire brush.

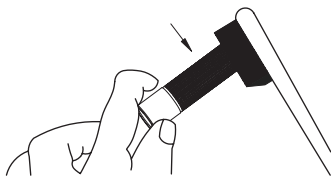

Clean carbon deposits

- 5) Replace the spark arrester if it is damaged.
- 6) Reinstall the spark arrester in the muffler and attach with the two screws.

**G. Adjusting the valve clearance**

Each engine is inspected in the factory. After many hours of use, you may need to adjust the engine with the adjustment method as follows:

- 1) Hold the valve clearance adjusting nut, and release the valve locking nut.

**⚠ WARNING**

Unauthorized modification may cause damage to the engine and void the warranty.

- 2) Rotate the valve clearance, adjusting nut to a predetermined clearance.
- 3) Hold the valve clearance adjusting nut, and tighten the valve locking nut according to the predetermined torque.
- 4) Tighten the valve locking nut, then check the valve clearance again until the valve clearance is in line with the standard.

**IDLE SPEED**

The idle speed has been pre-set at the factory, and should rarely require readjustment. Consult your local authorized dealer for idle speed adjustment needs.

**⚠ WARNING**

Unapproved adjustment will damage your engine and/or your electrical devices, and void your warranty.

**ADJUSTMENT**

There has no other service and/or adjustment need for your engine.

Unapproved adjustments or tampering can damage your engine and your electrical devices, and will void your warranty. Contact your local dealer for such needs.

**⚠ WARNING**

Tampering with the factory set governor will damage your engine and void your warranty.



## ENGINE TROUBLESHOOTING CHART

Symptom	Problems	Solutions
Engine Cannot be started	Engine switch is off.	Turn engine switch to the <b>ON</b> position.
	There is no fuel	Fill tank per instructions in this manual.
	Inadequate engine oil.	Check oil level. This engine is equipped with a low oil sensor. The engine cannot be started unless the oil level is above the prescribed lower limit.
	There is no ignition	Remove the spark plug cap. Clean any dirt around the plug base, then remove the spark plug. Install the spark plug in the plug cap. Turn the engine switch on. Ground the electrode to any engine ground, and verify a spark jumps across the gap.  Reinstall the plug and start engine according to instructions in this manual. Consult Customer Service.

**STORAGE AND TRANSPORTATION****A. Storage**

DO NOT mix oil with gasoline. The engine should be started at least once every 2 weeks and allowed to run for at least 20 minutes. Follow the instructions below for longer term storage if the engine were out of service for 2 months or more.

 **DANGER****FIRE OR EXPLOSION**

Gasoline is highly flammable and extremely explosive. Empty the fuel tank and shut off fuel valve before storing or transporting this engine.

---

- 1) Change oil while engine is still warm from operation.
- 2) Allow the engine to cool completely.
- 3) Drain all fuel completely from the fuel tank, fuel hose and carburetor.
- 4) Remove spark plug and pour approximately 1 oz. of engine oil into cylinder. Reinstall spark plug. Crank engine slowly to distribute oil and lubricate cylinder.
- 5) Clean the engine according to the instructions in the Maintenance section.
- 6) Store the unit in a clean, dry area out of direct sunlight.

**B. Transportation**

To prevent fuel spillage when transporting or during temporary storage, the engine should be secured upright in its normal operating position, with the engine switch OFF.

 **WARNING****WHEN TRANSPORTING:**

Do not over fill the tank. Avoid a place exposed to direct sunlight when putting the engine on a vehicle. If the engine is left in an enclosed vehicle for many hours, high temperature inside the vehicle could cause fuel to vaporize resulting in a possible explosion.

Do not drive on a rough road for an extended period with the engine on board. If you must transport the engine on a rough road, drain the fuel from the engine beforehand.

---

 **CAUTION**

Take care not to drop or strike the engine when transporting. Do not place heavy objects on the engine.

---

## Engine Specifications Table

Category	Item	GV750™
Main Engine Structure	Valve arrangement	Overhead valve
	Number of cylinders	2
	Cylinder diameter	3.228" / 82 mm
	Piston	2.795" / 71 mm
	Total displacement	48.8in <sup>3</sup> / 750 cc
	Compression ratio	8.8:1
	Rated hp/ power(kW)	22/16/3600
	Direction of rotation	Anticlockwise (From the PTO end direction)
	Ignition advance angle	25°±2°
	Valve clearance	Intake valve clearance
Exhaust valve clearance		.006 - .008" / 0.15-0.20 mm
	Spark plug 82 gap	.024 - .031" / 0.6-0.8 mm
Oil	Oil	SAE 10W-30
	Oil capacity(L)	1.5

**Notes: The gasoline engine with different specification and configurations may have different parameters and may change at any time without notice.**

# TROUBLESHOOTING

## How to Use Troubleshooting Guide

### **WARNING**

Service and Repair should only be performed by Lincoln Electric Factory Trained Personnel. Unauthorized repairs performed on this equipment may result in danger to the technician and machine operator and will invalidate your factory warranty. For your safety and to avoid Electrical Shock, please observe all safety notes and precautions detailed throughout this manual.



This Troubleshooting Guide is provided to help you locate and repair possible machine malfunctions. Simply follow the three-step procedure listed below.

### **Step 1. LOCATE PROBLEM (SYMPTOM).**

Look under the column labeled “PROBLEM (SYMPTOMS)”. This column describes possible symptoms that the machine may exhibit. Find the listing that best describes the symptom that the machine is exhibiting.

### **Step 2. POSSIBLE CAUSE.**

The second column labeled “POSSIBLE CAUSE” lists the obvious external possibilities that may contribute to the machine symptom.

### **Step 3. RECOMMENDED COURSE OF ACTION**

This column provides a course of action for the Possible Cause, generally it states to contact your local Lincoln Authorized Field Service Facility.

If you do not understand or are unable to perform the Recommended Course of Action safely, contact your local Lincoln Authorized Field Service Facility.



If for any reason you do not understand the test procedures or are unable to perform the tests/repairs safely, contact your Lincoln Authorized Service Facility for technical troubleshooting assistance before you proceed.

**[WWW.LINCOLNELECTRIC.COM/LOCATOR](http://WWW.LINCOLNELECTRIC.COM/LOCATOR)**

Observe all Safety Guidelines detailed throughout this manual

PROBLEMS (SYMPTOMS)	POSSIBLE CAUSE	RECOMMENDED COURSE OF ACTION
<b>AUXILIARY OUTPUT</b>		
No welder output power or Auxiliary Power.	1. Open in miscellaneous leads.	If all recommended possible areas of misadjustment have been checked and the problem persists, Contact your local Lincoln Authorized Field Service Facility.
	2. Open lead in flashing or field circuit.	
	3. Faulty rotor.	
	4. Faulty Potentiometer (R1).	
	5. Faulty stator Field winding.	
	6. Faulty Field rectifier (On PCB*).	
	7. Faulty P.C. Board.	
<b>ENGINE</b>		
Engine will not idle down to low speed.	1. Idler switch on High Idle.	If all recommended possible areas of misadjustment have been checked and the problem persists, Contact your local Lincoln Authorized Field Service Facility.
	2. Insufficient voltage present on idler solenoid terminals. (Voltage should be 12V to 14V DC).	
	3. External load on welder or auxiliary power.	
	4. Faulty wiring in solenoid circuit.	
	5. Faulty idler solenoid.	
	6. Faulty P.C. Board.	
Engine will not go to high idle when attempting to weld.	1. Poor work lead connection to work.	
	2. No voltage signal from the current sensor.	
	3. No open circuit voltage on output studs.	
	4. Faulty P.C. Board.	

\*Printed Circuit Board (PCB)



If for any reason you do not understand the test procedures or are unable to perform the tests/repairs safely, contact your Lincoln Authorized Service Facility for technical troubleshooting assistance before you proceed.


PROBLEMS (SYMPTOMS)	POSSIBLE CAUSE	RECOMMENDED COURSE OF ACTION
Engine will not go to high idle when using auxiliary power.	1. No voltage signal from the current sensor. 2. Auxiliary power load less than 100 to 150 watts. 3. Faulty P.C. Board.	If all recommended possible areas of misadjustment have been checked and the problem persists, Contact your local Lincoln Authorized Field Service Facility.
Engine will not crank or is hard to crank.	1. Battery will not hold a charge. Faulty Battery. 2. No or insufficient charging current. 3. Loose battery cable connection(s).	
Engine shuts down.	1. Out of fuel. 2. Low oil level.	
Engine does not develop full power.	1. Fuel filter clogged. 2. Air filter clogged.	
Engine is hard to start.	1. Spark plugs do not have specified gap.	
	2. Spark plugs are fouled.	
	3. Out of fuel.	
	4. Fuel filter clogged.	
	5. Electric fuel pump not working. (Electric pump equipped models only.)	
	6. Mechanical fuel pump not working.	



If for any reason you do not understand the test procedures or are unable to perform the tests/repairs safely, contact your Lincoln Authorized Service Facility for technical troubleshooting assistance before you proceed.

**WWW.LINCOLNELECTRIC.COM/LOCATOR**

EAGLE 10,000 PLUS (GV750)

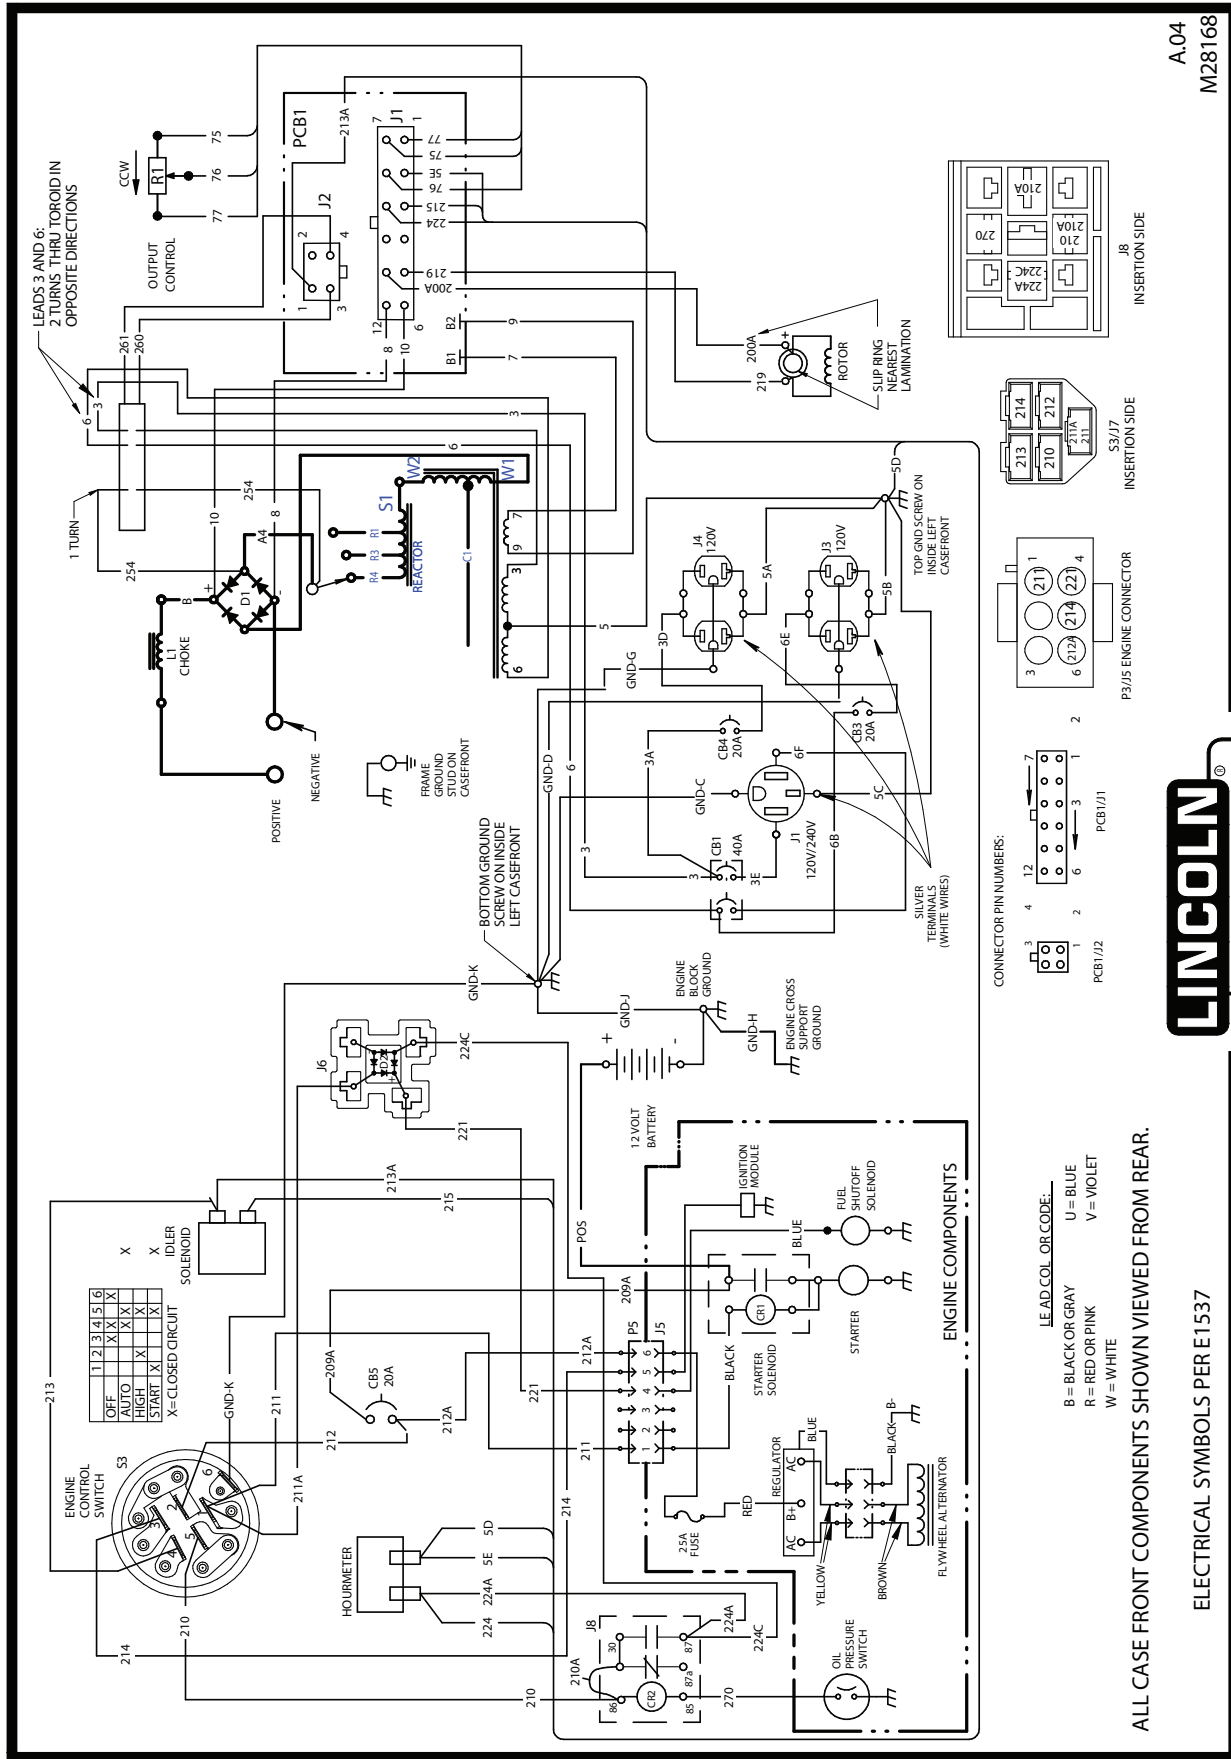

A.04  
M28168

CLEVELAND, OHIO U.S.A.




ELECTRICAL SYMBOLS PER E1537

ALL CASE FRONT COMPONENTS SHOWN VIEWED FROM REAR.

NOTE: This diagram is for reference only. It may not be accurate for all machines covered by this manual. The specific diagram for a particular code is included with the machine. If the diagram is illegible, write to the Service Department for a replacement. Give the equipment code number.

DIMENSION DIAGRAM CODE

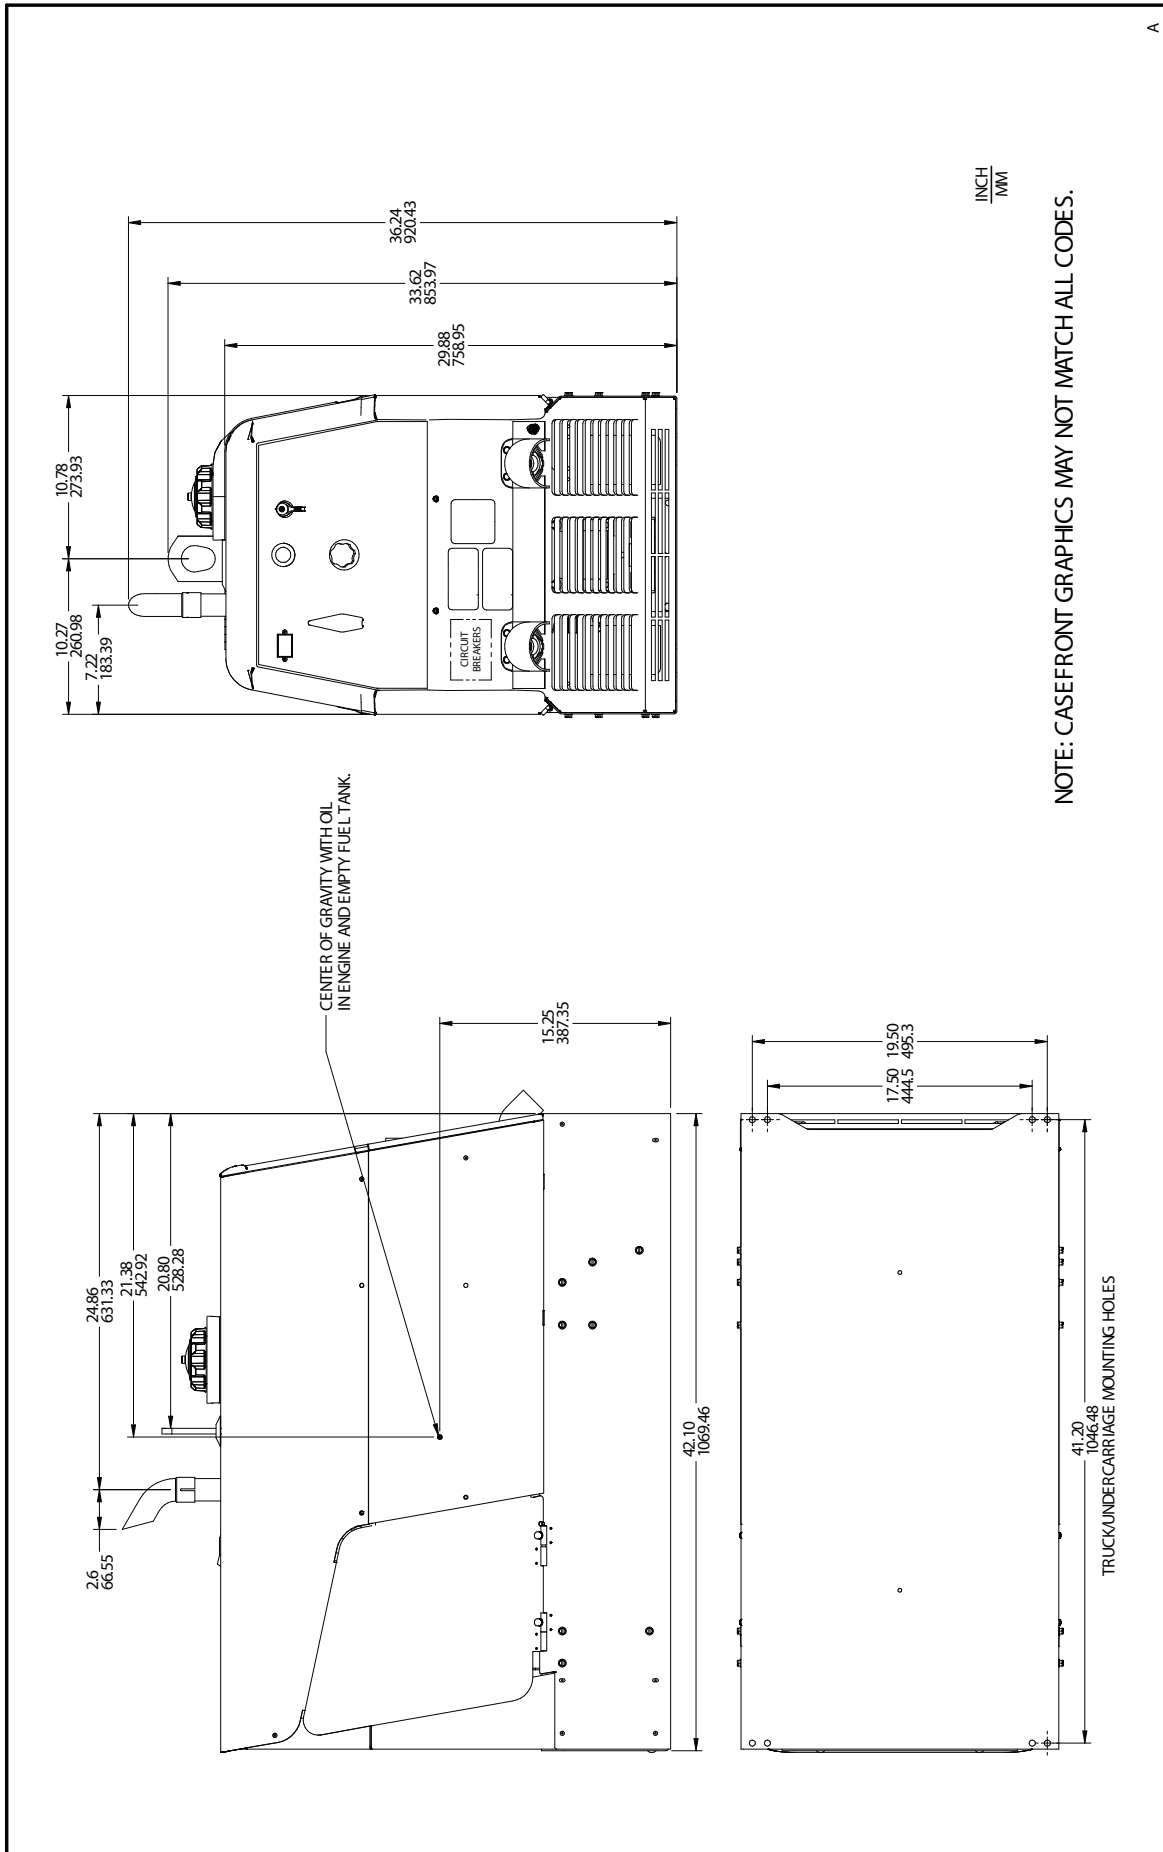

INCH  
MM

NOTE: CASEFRONT GRAPHICS MAY NOT MATCH ALL CODES.

A

M24956



This page intentionally left blank

			
<b>WARNING</b>	<ul style="list-style-type: none"> <li>● Do not touch electrically live parts or electrode with skin or wet clothing.</li> <li>● Insulate yourself from work and ground.</li> </ul>	<ul style="list-style-type: none"> <li>● Keep flammable materials away.</li> </ul>	<ul style="list-style-type: none"> <li>● Wear eye, ear and body protection.</li> </ul>
Spanish <b>AVISO DE PRECAUCION</b>	<ul style="list-style-type: none"> <li>● No toque las partes o los electrodos bajo carga con la piel o ropa mojada.</li> <li>● Aíslese del trabajo y de la tierra.</li> </ul>	<ul style="list-style-type: none"> <li>● Mantenga el material combustible fuera del área de trabajo.</li> </ul>	<ul style="list-style-type: none"> <li>● Protéjase los ojos, los oídos y el cuerpo.</li> </ul>
French <b>ATTENTION</b>	<ul style="list-style-type: none"> <li>● Ne laissez ni la peau ni des vêtements mouillés entrer en contact avec des pièces sous tension.</li> <li>● Isolez-vous du travail et de la terre.</li> </ul>	<ul style="list-style-type: none"> <li>● Gardez à l'écart de tout matériel inflammable.</li> </ul>	<ul style="list-style-type: none"> <li>● Protégez vos yeux, vos oreilles et votre corps.</li> </ul>
German <b>WARNUNG</b>	<ul style="list-style-type: none"> <li>● Berühren Sie keine stromführenden Teile oder Elektroden mit Ihrem Körper oder feuchter Kleidung!</li> <li>● Isolieren Sie sich von den Elektroden und dem Erdboden!</li> </ul>	<ul style="list-style-type: none"> <li>● Entfernen Sie brennbares Material!</li> </ul>	<ul style="list-style-type: none"> <li>● Tragen Sie Augen-, Ohren- und Körperschutz!</li> </ul>
Portuguese <b>ATENÇÃO</b>	<ul style="list-style-type: none"> <li>● Não toque partes elétricas e electrodos com a pele ou roupa molhada.</li> <li>● Isole-se da peça e terra.</li> </ul>	<ul style="list-style-type: none"> <li>● Mantenha inflamáveis bem guardados.</li> </ul>	<ul style="list-style-type: none"> <li>● Use proteção para a vista, ouvido e corpo.</li> </ul>
Japanese <b>注意事項</b>	<ul style="list-style-type: none"> <li>● 通電中の電気部品、又は溶材にヒフやぬれた布で触れないこと。</li> <li>● 施工物やアースから身体が絶縁されている様にして下さい。</li> </ul>	<ul style="list-style-type: none"> <li>● 燃えやすいものの側での溶接作業は絶対にしてはなりません。</li> </ul>	<ul style="list-style-type: none"> <li>● 目、耳及び身体に保護具をして下さい。</li> </ul>
Chinese <b>警告</b>	<ul style="list-style-type: none"> <li>● 皮肤或湿衣物切勿接触带电部件及焊条。</li> <li>● 使你自已与地面和工作件绝缘。</li> </ul>	<ul style="list-style-type: none"> <li>● 把一切易燃物品移离工作场所。</li> </ul>	<ul style="list-style-type: none"> <li>● 佩戴眼、耳及身体劳动保护用具。</li> </ul>
Korean <b>위험</b>	<ul style="list-style-type: none"> <li>● 전도체나 용접봉을 젖은 형갑 또는 피부로 절대 접촉치 마십시오.</li> <li>● 모재와 접지를 접촉치 마십시오.</li> </ul>	<ul style="list-style-type: none"> <li>● 인화성 물질을 접근시키지 마십시오.</li> </ul>	<ul style="list-style-type: none"> <li>● 눈, 귀와 몸에 보호장구를 착용하십시오.</li> </ul>
Arabic <b>تحذير</b>	<ul style="list-style-type: none"> <li>● لا تلمس الاجزاء التي يسري فيها التيار الكهربائي أو الألكترود بجسدك أو بالملابس المبللة بالماء.</li> <li>● ضع عازلا على جسمك خلال العمل.</li> </ul>	<ul style="list-style-type: none"> <li>● ضع المواد القابلة للاشتعال في مكان بعيد.</li> </ul>	<ul style="list-style-type: none"> <li>● ضع أدوات وملابس واقية على عينيك وأذنيك وجسمك.</li> </ul>

**READ AND UNDERSTAND THE MANUFACTURER'S INSTRUCTION FOR THIS EQUIPMENT AND THE CONSUMABLES TO BE USED AND FOLLOW YOUR EMPLOYER'S SAFETY PRACTICES.**

**SE RECOMIENDA LEER Y ENTENDER LAS INSTRUCCIONES DEL FABRICANTE PARA EL USO DE ESTE EQUIPO Y LOS CONSUMIBLES QUE VA A UTILIZAR, SIGA LAS MEDIDAS DE SEGURIDAD DE SU SUPERVISOR.**

**LISEZ ET COMPRENEZ LES INSTRUCTIONS DU FABRICANT EN CE QUI REGARDE CET EQUIPMENT ET LES PRODUITS A ETRE EMPLOYES ET SUIVEZ LES PROCEDURES DE SECURITE DE VOTRE EMPLOYEUR.**

**LESEN SIE UND BEFOLGEN SIE DIE BETRIEBSANLEITUNG DER ANLAGE UND DEN ELEKTRODENEINSATZ DES HERSTELLERS. DIE UNFALLVERHÜTUNGSVORSCHRIFTEN DES ARBEITGEBERS SIND EBENFALLS ZU BEACHTEN.**

			
<ul style="list-style-type: none"> <li>● Keep your head out of fumes.</li> <li>● Use ventilation or exhaust to remove fumes from breathing zone.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn power off before servicing.</li> </ul>	<ul style="list-style-type: none"> <li>● Do not operate with panel open or guards off.</li> </ul>	<b>WARNING</b>
<ul style="list-style-type: none"> <li>● Los humos fuera de la zona de respiración.</li> <li>● Mantenga la cabeza fuera de los humos. Utilice ventilación o aspiración para gases.</li> </ul>	<ul style="list-style-type: none"> <li>● Desconectar el cable de alimentación de poder de la máquina antes de iniciar cualquier servicio.</li> </ul>	<ul style="list-style-type: none"> <li>● No operar con panel abierto o guardas quitadas.</li> </ul>	Spanish <b>AVISO DE PRECAUCION</b>
<ul style="list-style-type: none"> <li>● Gardez la tête à l'écart des fumées.</li> <li>● Utilisez un ventilateur ou un aspirateur pour ôter les fumées des zones de travail.</li> </ul>	<ul style="list-style-type: none"> <li>● Débranchez le courant avant l'entretien.</li> </ul>	<ul style="list-style-type: none"> <li>● N'opérez pas avec les panneaux ouverts ou avec les dispositifs de protection enlevés.</li> </ul>	French <b>ATTENTION</b>
<ul style="list-style-type: none"> <li>● Vermeiden Sie das Einatmen von Schweißrauch!</li> <li>● Sorgen Sie für gute Be- und Entlüftung des Arbeitsplatzes!</li> </ul>	<ul style="list-style-type: none"> <li>● Strom vor Wartungsarbeiten abschalten! (Netzstrom völlig öffnen; Maschine anhalten!)</li> </ul>	<ul style="list-style-type: none"> <li>● Anlage nie ohne Schutzgehäuse oder Innenschutzverkleidung in Betrieb setzen!</li> </ul>	German <b>WARNUNG</b>
<ul style="list-style-type: none"> <li>● Mantenha seu rosto da fumaça.</li> <li>● Use ventilação e exaustão para remover fumo da zona respiratória.</li> </ul>	<ul style="list-style-type: none"> <li>● Não opere com as tampas removidas.</li> <li>● Desligue a corrente antes de fazer serviço.</li> <li>● Não toque as partes elétricas nuas.</li> </ul>	<ul style="list-style-type: none"> <li>● Mantenha-se afastado das partes moventes.</li> <li>● Não opere com os painéis abertos ou guardas removidas.</li> </ul>	Portuguese <b>ATENÇÃO</b>
<ul style="list-style-type: none"> <li>● ヒュームから頭を離すようにして下さい。</li> <li>● 換気や排煙に十分留意して下さい。</li> </ul>	<ul style="list-style-type: none"> <li>● メンテナンス・サービスに取りかかる際には、まず電源スイッチを必ず切して下さい。</li> </ul>	<ul style="list-style-type: none"> <li>● パネルやカバーを取り外したままで機械操作をしないで下さい。</li> </ul>	Japanese <b>注意事項</b>
<ul style="list-style-type: none"> <li>● 頭部遠離煙霧。</li> <li>● 在呼吸區使用通風或排風器除煙。</li> </ul>	<ul style="list-style-type: none"> <li>● 維修前切斷電源。</li> </ul>	<ul style="list-style-type: none"> <li>● 儀表板打開或沒有安全罩時不準作業。</li> </ul>	Chinese <b>警告</b>
<ul style="list-style-type: none"> <li>● 얼굴로부터 용접가스를 멀리하십시오.</li> <li>● 호흡지역으로부터 용접가스를 제거하기 위해 가스제거기나 통풍기를 사용하십시오.</li> </ul>	<ul style="list-style-type: none"> <li>● 보수전에 전원을 차단하십시오.</li> </ul>	<ul style="list-style-type: none"> <li>● 판넬이 열린 상태로 작동치 마십시오.</li> </ul>	Korean <b>위험</b>
<ul style="list-style-type: none"> <li>● ابعد رأسك بعيداً عن الدخان.</li> <li>● استعمل التهوية أو جهاز ضغط الدخان للخارج لكي تبعد الدخان عن المنطقة التي تتنفس فيها.</li> </ul>	<ul style="list-style-type: none"> <li>● اقطع التيار الكهربائي قبل القيام بأية صيانة.</li> </ul>	<ul style="list-style-type: none"> <li>● لا تشغيل هذا الجهاز اذا كانت الاغطية الحديدية الواقية ليست عليه.</li> </ul>	Arabic <b>تحذير</b>

**LEIA E COMPREENDA AS INSTRUÇÕES DO FABRICANTE PARA ESTE EQUIPAMENTO E AS PARTES DE USO, E SIGA AS PRÁTICAS DE SEGURANÇA DO EMPREGADOR.**

使う機械や溶材のメーカーの指示書をよく読み、まず理解して下さい。そして貴社の安全規定に従って下さい。

請詳細閱讀並理解製造廠提供的說明以及應該使用的銀焊材料，並請遵守貴方的有閣勞動保護規定。

이 제품에 동봉된 작업지침서를 숙지하시고 귀사의 작업자 안전수칙을 준수하시기 바랍니다.

اقرأ بتمعن وافهم تعليمات المصنع المنتج لهذه المعدات والمواد قبل استعمالها واتبع تعليمات الوقاية لصاحب العمل.

## **CUSTOMER ASSISTANCE POLICY**

The business of Lincoln Electric is manufacturing and selling high quality welding equipment, automated welding systems, consumables, and cutting equipment. Our challenge is to meet the needs of our customers, who are experts in their fields, and to exceed their expectations. On occasion, purchasers may ask Lincoln Electric for information or technical information about their use of our products. Our employees respond to inquiries to the best of their ability based on information and specifications provided to them by the customers and the knowledge they may have concerning the application. Our employees, however, are not in a position to verify the information provided or to evaluate the engineering requirements for the particular weldment, or to provide engineering advice in relation to a specific situation or application. Accordingly, Lincoln Electric does not warrant or guarantee or assume any liability with respect to such information or communications. Moreover, the provision of such information or technical information does not create, expand, or alter any warranty on our products. Any express or implied warranty that might arise from the information or technical information, including any implied warranty of merchantability or any warranty of fitness for any customers' particular purpose or any other equivalent or similar warranty is specifically disclaimed.

Lincoln Electric is a responsive manufacturer, but the definition of specifications, and the selection and use of specific products sold by Lincoln Electric is solely within the control of, and remains the sole responsibility of the customer. Many variables beyond the control of Lincoln Electric affect the results obtained in applying these types of fabrication methods and service requirements.

## **WELD FUME CONTROL EQUIPMENT**

The operation of welding fume control equipment is affected by various factors including proper use and positioning of the equipment, maintenance of the equipment and the specific welding procedure and application involved. Worker exposure level should be checked upon installation and periodically thereafter to be certain it is within applicable OSHA PEL and ACGIH TLV limits.



### **THE LINCOLN ELECTRIC COMPANY**

22801 St. Clair Avenue • Cleveland, OH • 44117-1199 • U.S.A.  
Phone: +1.216.481.8100 • [www.lincolnelectric.com](http://www.lincolnelectric.com)