

I Installing Your Refrigerator

UNPACKING YOUR REFRIGERATOR

1. Remove all packaging material. This includes the foam base and the adhesive tape holding the refrigerator accessories inside and outside.
2. Inspect and remove all packing, tape or printed materials before powering on the refrigerator.

CAUTION

Risk of fire or explosion due to puncture of refrigerant tubing. Flammable refrigerant used. Handle with care when moving the refrigerator to avoid either damaging the refrigerant tubing or increasing the risk of a leak.

LEVELING YOUR REFRIGERATOR

- Your refrigerator has two levelling legs which are located in the front bottom corners of your refrigerator. After properly placing your refrigerator in its final position, you can level your refrigerator.
- Levelling legs can be adjusted by turning them counter clockwise to raise your refrigerator or by turning them clockwise to lower your refrigerator. The refrigerator door will close easier when the levelling legs are extended.

PROPER AIR CIRCULATION

- To ensure that your refrigerator works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the refrigerator:
Sides... 3/4" (19mm)
Top.....2" (50mm)
Back.....2" (50mm)

WARNING

ELECTRICAL REQUIREMENT – SHOCK HAZARD

ELECTRICAL REQUIREMENT

- Ensure that there is a suitable power outlet (120 volts, 15 amps outlet) with proper grounding to power the refrigerator.
- Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two-prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.

WARNING

USE OF EXTENSION CORDS– POTENTIAL SAFETY HAZARD

I Installing Your Refrigerator

WARNING

USE OF EXTENSION CORDS– POTENTIAL SAFETY HAZARD

Use of Extension Cords

- Avoid the use of an extension cord because it can pose a potential safety hazard under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.

DO NOT USE EXTENSION CORD LONGER THAN 12 FT.

Installation Limitations


- Do not install your refrigerator in any location not properly insulated or heated, e.g., garage, etc. Your refrigerator was not designed to operate in temperature settings below 55° Fahrenheit.
- Select a suitable location for the refrigerator on a hard, flat surface away from direct sunlight or heat source, e.g., radiators, baseboard heaters, cooking appliances, etc. Any floor unevenness should be corrected with the levelling legs located on the front bottom corners of the refrigerator.

Installation Requirements


Door Reversing (Optional)

WARNING

Follow all the steps when reversing the door swing. Failure to follow these instructions, leaving out parts, or overtightening screws, can lead to the door falling off and result in injury and property damage.

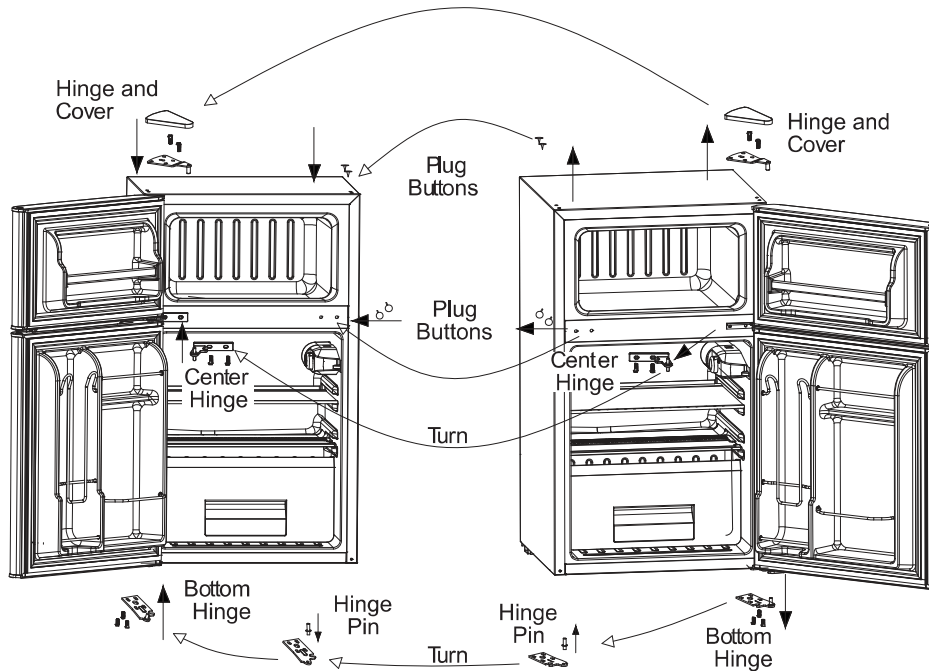

- 1.Ensure that the unit is unplugged before starting door reversal.
- 2.Remove the 2 plug buttons on the left side on the top of the cabinet.
- 3.Remove the plastic hinge cover by prying from the back and pulling forward.
- 4.Remove the 2 screws from the top hinge.
- 5.Lift the freezer door up and off the center hinge (right side). Set the freezer door on a non-scratching surface with the outside facing upwards.
- 6.Open the fresh food door and remove the center hinge by removing the 2 screws. Lift the hinge to remove.
- 7.Lift the fresh food door off of the bottom hinge. Set the fresh food door on a non-scratching surface with the outside facing upwards.
- 8.Lay the refrigerator on its back to get access to the bottom hinge.
- 9.Remove the bottom hinge by removing the 3 screws. Lift the hinge to remove.
- 10.Remove the hinge pin on the bottom hinge and reinstall on the opposite side of the hinge.

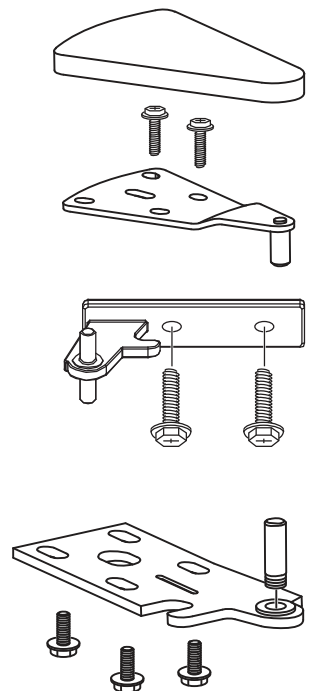

Installation Instructions

REVERSE DOOR (Optional) (Cont .)

- 11.Remove the 2 screws from the left side and relocate to the right side and replace the plastic locker on the fresh food door and freezer door bottom in the spare bag.
- 12.Remove the two plug buttons on the left side at the center and install them on the right side.
- 13.Turn and relocate the center hinge to the left side and reinsert the screws. Do not tighten screws yet.
- 14.Align the fresh food door on the left center hinge. With the magnetic gasket holding the door in place, make sure that the door is aligned with the refrigerator, and secure the bottom hinge on the left side with 3 screws.
- 15.Ensure that the fresh food door is properly sealed and levelled before tightening the center hinge screws and the bottom hinge screws.
- 16.Lift the refrigerator to an upright position.
- 17.Place the freezer door on the center hinge over the pin. Ensure that the door is aligned horizontally and vertically, and that the gasket seals on all sides.
- 18.Turn and relocate the top hinge on the left side with screws.
- 19.Replace the hinge cover on top of the hinge by sliding it from front to back.
- 20.Put the 2 plug buttons on the right side on top of the cabinet.
- 21.Open and close both the freezer and fresh food doors several times to ensure that each door is positioned correctly and that the gasket is sealed tightly. If it isn't, please adjust the door again.
- 22.Wait at least 30 minutes before plugging in the refrigerator to allow the refrigerant to settle down. Then plug in the unit.

Door Alignment

Freezer Door: (see fig. #1)

- 1.Remove the top hinge cover.
- 2.Loosen the top hinge screws using a phillips head screwdriver.
- 3.Adjust the door or put a spacer in between and then tighten the screws.
- 4.Replace the top hinge cover.

