


The range may be installed flush to the rear wall.


You may install a non-combustible material, such as tile, on the rear wall above the range and up the vent hood.

It is not necessary to install non-combustible materials behind the range below the counter top height.

The minimum distance from the side of the range above the counter top to combustible sidewalls must be at least 10 inches.

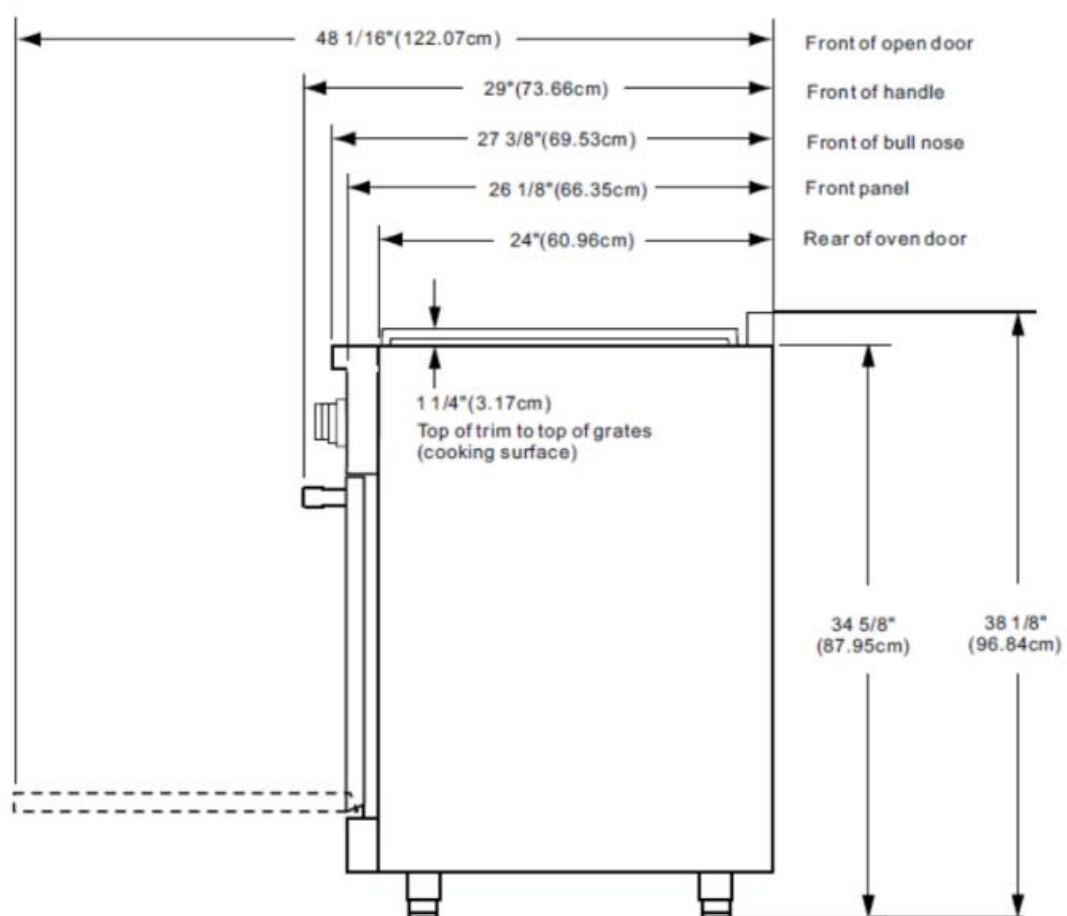

Top hood and cabinet specifications

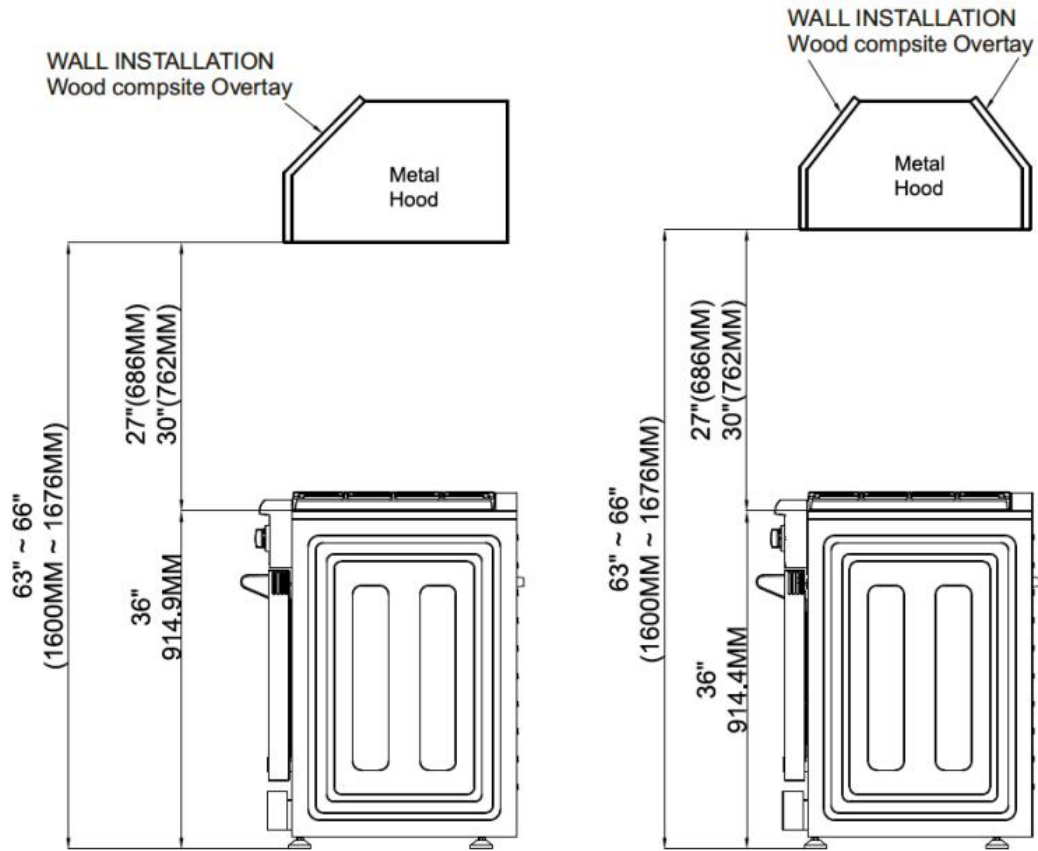

| Condition | Minimum clearance allowed |
|---|---------------------------|
| Clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet | 36" |
| cabinet that is protected by not less than: · 1/4-inch-thick flame-retardant mill board covered with not less than: - No. 28 MSG sheet steel or - 0.015-inch-thick stainless steel or - 0.024-inch-thick aluminum or - 0.020-inch-thick copper | 24" |

Anti-Tip Device Installation - Wall Mount

⚠ WARNING




Tipping Hazard.

To reduce the risk of the appliance tipping, it must be secured by a properly installed anti-tip bracket(s). To make sure the bracket has been installed properly, look behind the range with a flashlight to verify proper installation.




- This range can tip
- Injuries to persons can result.
- Install anti-tip device packed with range.
- See installation instructions

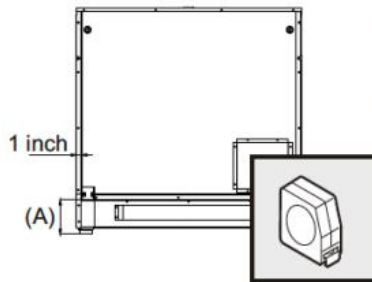


Measure from floor to bottom of the anti-tip opening located on the back of the range. This will be measurement (A)

Locate anti-tip bracket 1 inch from where the right side of range (facing range) is to be located.

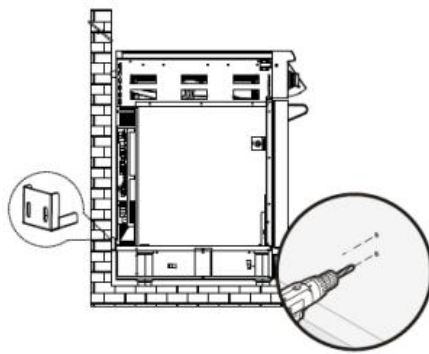

Mark and drill holes where bracket will be located.

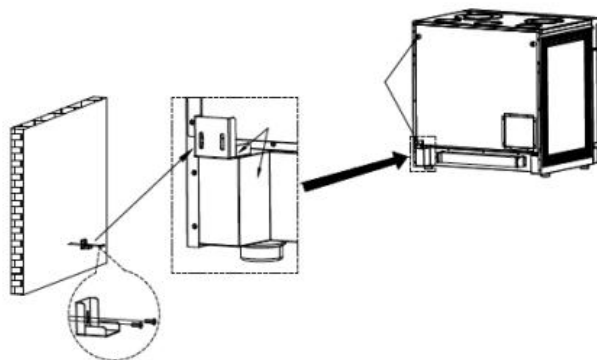

Attach bracket with mounting hardware provided




Your range must be electrically grounded in accordance with local codes or, in the absence of local codes, in accordance with the National Electrical Code (ANSI/NFPA 70, latest edition).

In Canada, electrical grounding must be in accordance with the current CSA C22.1 Canadian Electrical Code Part 1 and/or local codes. A copy of this standard may be obtained from: National Fire Protection Association, 1 Battery March Park, Quincy, Massachusetts 02269-9101.

The power supply must be the correct polarity. Reverse polarity will result in continuous sparking of the electrodes, even after flame ignition. If there is any doubt as to whether the power supply has the correct polarity or grounded, have it checked by a qualified electrician.

Use 120V, 60Hz, and properly grounded branch circuit protected by a 15-amp or 20-amp circuit breaker or time delay fuse.

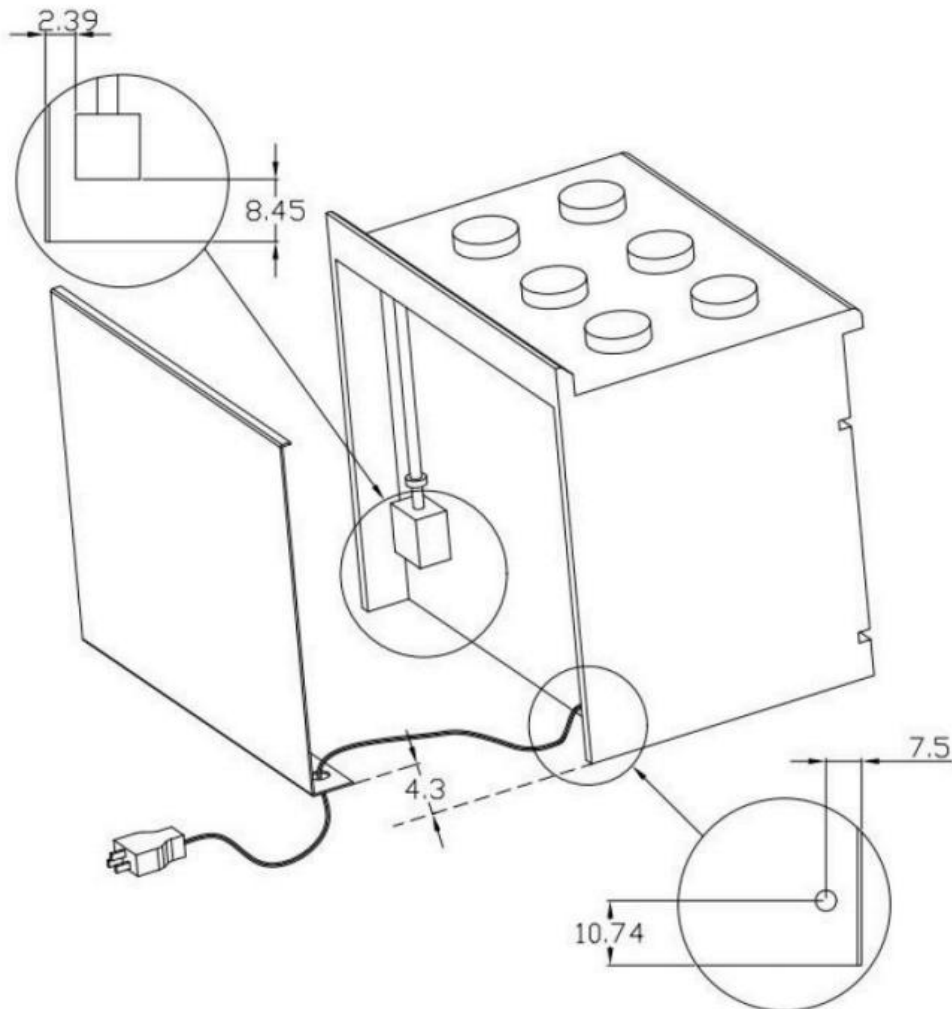

Installation for TRG 30 and 36 inches Gas Range