

# Swurfer<sup>®</sup>

6+

## DISCO

CLIMBING ROPE SWING

SSW-0002

GET OUT &  
HANG  
OUT

Swurfer.com

@TheSwurfer



# DISCO

## SWURFER DISCO SWING

**WARNING: THIS IS NOT A STAND UP SWING. ADULT SUPERVISION ADVISED. USE AT YOUR OWN RISK.**

**Congratulations!** You have purchased a Swurfer® product, now the fun begins! Welcome to the Swurfer community. Share your skills #SOARSPOT Please read this entire manual completely before beginning the assembly and installation process. We have included important safety information that you must adhere to, to prevent injuries.

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED.**

### INSTRUCTIONS FOR USE

Carefully read the following instructions BEFORE using your Swurfer® product. This information was meticulously put together for your safety and to reduce risk of injury. Always keep the safety of your children in mind as you assemble and install your swing and as your children play on it.

### INSTALLATION

• Install the swing only on a level surface. • Never install the swing on a hard surface such as tiles, concrete, packed earth etc. Only install the swing over a soft and proper shock-absorbent material such as wood chips, mulch or shredded rubber, of sufficient depth – between 9-12". Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. • Do not install loose fill surfacing over hard surfaces such as concrete or asphalt. • Confirm that the supporting structure is secure, it will support at least 600 pounds, is over level ground, has a minimum height of 7ft. and is no less than 6 ft. on all sides from vertical elements. Swing should have a clearance of at least 1.5 x the total length of all the rope measured from the tree limb/horizontal beam to the metal O ring/s attachment point. • Remove any tripping hazards, such as rocks, tree stumps, loose toys etc. from the play area. Bottom of swing should be no more than 24" and no less than 18" from the ground.

**SWING SET OR OTHER HORIZONTAL BEAM ASSEMBLY** - Attach the swing to a swing set by removing one swing from the existing swing set and attach the upper metal O ring to the chain support hook using a carabiner (not included) rated for at least 500 lbs. Allow 1.5x the total length of the rope to the metal O ring of clearance on each side of the swing from stationary objects or other swinging elements of any kind. Bottom of swing should be no more than 24" and no less than 18" from the ground. Always ensure the strength of the object you are hanging the swing from. If in doubt, please consult a contractor, engineer, or arborist.

### SAFE USE

- An adult should supervise play on this product for children of all ages.
- Only for family domestic outdoor use.
- The swing is designed to be used by children only for the minimum age and weight that is specified on the Box.
- An adult should always supervise children using the swing set.
- Do not allow a child or adult to use the swing if they have a physical condition that hampers their ability to use the swing properly.
- Teach children not to walk close to, in front, in between or behind moving swings.
- Make sure your children know not to jump off a swing that is in motion.
- Teach children not to twist or loop the swing chains/ropes. This may weaken the strength of the chain/rope.
- Teach children to only use each swing in the proper manner it is intended for. Children should learn to sit in the center of the swing, with their full weight on the seat.
- Instruct children not to push empty seats – the swing may hit them on the rebound, and may cause serious injury.
- All who use the swing set should dress appropriately e.g. avoiding loose strings that could get caught in the swing chains.
- Take care when using the swing after it has gotten wet, only allow children on the swings when there is sufficient traction for them to be safe.
- No one should use the swing before you have checked that it is assembled and anchored properly.
- **STRANGULATION HAZARD:** Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- **WARNING:** Regularly check your tree branch, as well as the ropes and swing itself. Look for splitting, fraying, missing bark, or other damage, and repair right away. A properly installed swing should not cause any damage or grooves in the tree. Replace rope every couple of years.


## WARRANTY

Flybar warrants the original purchaser, that the product is free of defects in material and workmanship for a period of one year from the original date of purchase. This warranty does not apply to defects of physical damage resulting from abuse, neglect, improper repair, improper fit, alterations, or use unintended by the manufacturer. If your Swurfer product is found to be defective in materials or workmanship within one year from the date of purchase, Flybar will, at its discretion, either repair or replace the product free of charge. Proof of purchase is required.

## INSPECTION AND MAINTENANCE

- The frequency of inspection and maintenance will vary with the type of equipment or materials used or other factors (e.g. heavy use, levels of vandalism, coastal location, age of equipment.)
- Carry out maintenance checks monthly or before the start of a usage period, checking more regularly in seasons of high usage.
- Special attention should be given to the swing hooks, rings, eights, plastic welds and ropes. Moving metal parts must be oiled regularly.
- Inspect nuts, bolts, and knots for tightness
- Check that all accessories and parts are in proper working order
- Take swing indoors when the temperature drops below 32 degrees Fahrenheit For more detailed information on playground safety, download the United States Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook at no cost: <https://www.cpsc.gov/s3fs-public/324.pdf> CHECK THE SWING BEFORE EACH USE, AND PERFORM MAINTENANCE REGULARLY. THIS INCLUDES, BUT IS NOT LIMITED TO CHECKING THE SWING OR CRACKS, RIPS, TEARS, BREAKS, MISSING PIECES, EXCESS WEAR, LOOSE CONNECTIONS, DECREASED STABILITY AND FOR OVERALL INTEGRITY.

## RECOMMENDED CLEARANCE

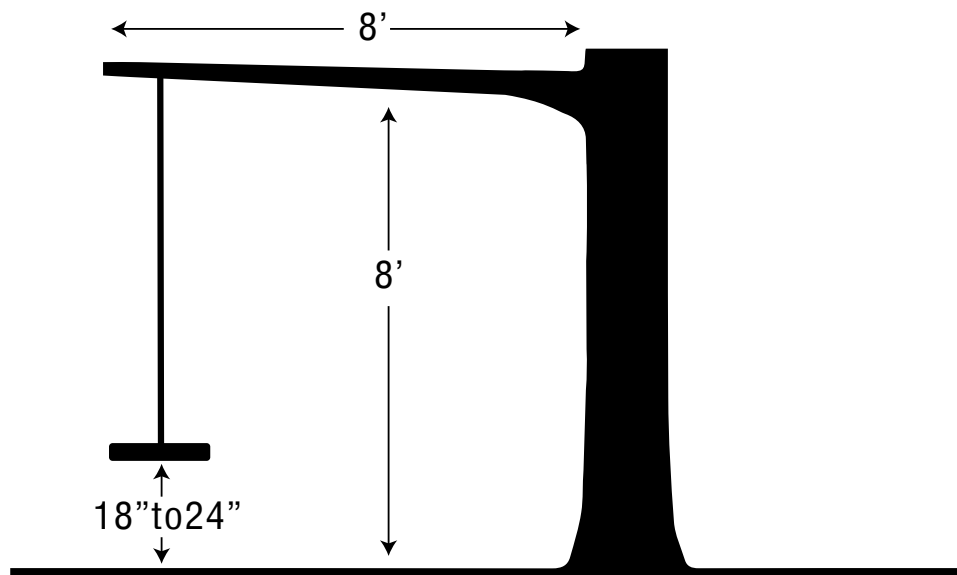

- INSTALL UP TO 8'
- HANG SWING 18"- 24" FROM THE GROUND



Start Swurfing, and show us where you're hanging! Need more Swurf gear?  
Visit [www.swurfer.com](http://www.swurfer.com)

Distributed by **Flybar**

Flybar, Inc. 323A Fairfield Rd Freehold, NJ 07728

@TheSwurfer



Swurfer.com



# FIND YOUR SOAR SPOT

