

TEP SERIES PROGRAMMABLE THERMOSTATS


QUICK START SETUP & PROGRAMMING GUIDE

IMPORTANT!

Remove the protective film off the front of the thermostat before use.

Moderate pressure must be applied to the center of each button to operate. Don't leave your finger too close to the screen between each touch or the thermostat may react to an unintended touch.

DISPLAY

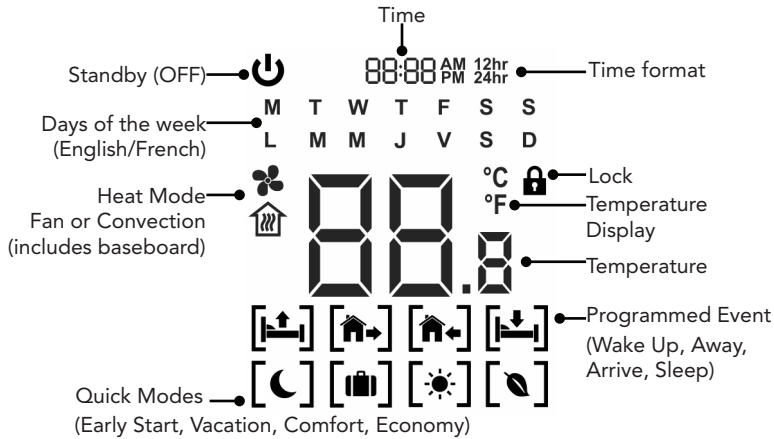

TEP302DW, TEP362DW



TEP402DW

DEFAULT & TIME SETUP (COMPLETE BEFORE PROGRAMMING)

English is the default. For French:

1. Press **+** and **-** at the same time
2. Press **M**. **M T W T F S S** will flash
3. Press **+** or **-** to change to **L M M J V S D**
4. The days of the week blink for 6 seconds then display returns to normal

Celsius is the default. For Fahrenheit:

1. Press **+** and **-** at the same time
2. Press **M** twice. **°C** will flash
3. Press **+** or **-** to change to **°F**
4. The icon blinks for 6 seconds then display returns to normal

Convection (baseboard) heating mode is the default. For fan-forced heaters:

1. Press **+** and **-** at the same time
2. Press **M** 3 times. will flash
3. Press **+** or **-** to change to
4. The icon blinks for 6 seconds then display returns to normal

Set Time and Day Display. Default is 12:01^{AM} Monday.

1. Press **+** and **-** at the same time
2. Press **M** 6 times. **12hr** will flash; if okay, press **✓** and skip next step
3. Press **+** or **-** to change to **24hr** if desired, press **✓**
4. **88:88** will flash. Adjust hours using **+** or **-** to the correct hour and AM or PM, then **✓**
5. **88:88** will flash. Adjust minutes using **+** or **-** then press **✓**
6. **M T W T F S S** will flash. Adjust the day using **+** or **-** then press **✓**

To completely reset the thermostat to factory settings, press and hold **M** for 10 seconds.

Note: See the User's Guide for complete installation instructions, additional options including a locking function, additional daily modes for vacation, comfort, energy savings, and other important operating and safety instructions.

PROGRAMMING (AFTER SETUP IS COMPLETE)

5 - 2 Programming Setup

TIP: Plan and write down your weekday and weekend schedule times before you start programming.

Setup begins with Wake Up time for your 5 weekdays and goes all the way through weekend programming in one sequence.

1. Press **M**. The Wake Up icon and **M T W T F** are on screen
2. **88:88** hours will flash. Adjust using **+** or **-** then press **✓**
3. **88:88** minutes will flash. Adjust using **+** or **-** then press **✓**
4. The temperature will flash. Adjust using **+** or **-**
5. is now programmed. Press **✓**.

Immediately repeat steps 2 through 5 to program Away , Return , and Sleep for your 5 weekdays. When weekday programming is complete, days of the week switch to **S S** and hours flash to begin weekend programming with Wake Up.

Don't hesitate between steps—if you wait more than 8 seconds, the thermostat returns to the main screen and you will need to start over!

OFTEN USED

Temporarily Change Set Temperature

The large numeric display shows the current room temperature.

1. Press **+** or **-** to temporarily change the temperature
2. The display blinks for 6 seconds then returns to normal

HOLD now appears where the time is displayed. The next scheduled program event will override this temporary setting.

Turn OFF (Standby)

1. Press **+** and **-** at the same time
2. Press **M** 4 times. will flash
3. Press **+** or **-** to activate
4. The icon becomes steady and the temperature display turns blank.

When enabled, only the icon remains visible on the screen.

To disable, press and hold **+** and **-** until the screen activates. The display blinks and may show **99.9** before it returns to normal.